ORDER NO.PHAMOS0705024A1
E2

Service Manual

Microwave Oven

Simplified

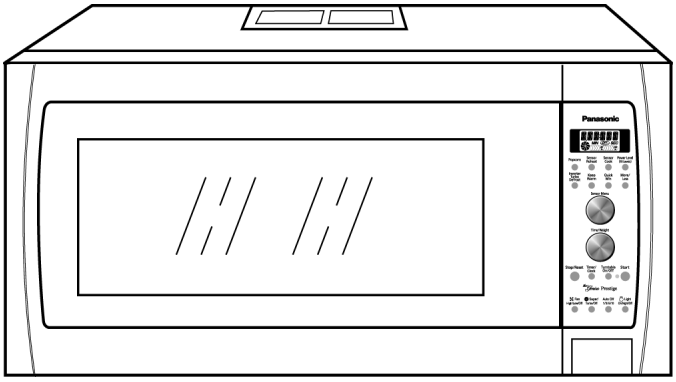

NN-SD297S
NN-SD277S
NN-SD277B
NN-SD277W
NN-SA247S
NN-P295WFX
NN-S255WFX
NN-S245WFX

APH(USA)

CPH(CANADA)

Please file and use this manual together with the service manual for Model NN-S262SF (Order No.SIMMC0203005C1)

Specifications for APH:

Specifications: / Model:	SD297S	SD277S/B/W
Power Source:	120V AC Single Phase, 60Hz	
Power Requirement:	1490W	1490W
Output:	1200W	1200W
Microwave Frequency:	2450MHz	
Timer:	30min. / Stage (HIGH Power) ~ 5 Stage Maximum 90min.00sec / Stage (Other Power Levels) ~ 5 Stage Maximum	
Outside Dimensions:	29 7/8"(W) x 15 1/2"(D) x 16 7/16"(H) 759mm(W) x 393mm(D) x 418mm(H)	29 7/8"(W) x 15 "(D) x 16 7/16"(H) 759mm(W) x 391mm(D) x 418mm(H)
Oven Cavity Dimensions:	23 1/4"(W) x 14 7/16"(D) x 9 1/2"(H) 591mm(W) x 367mm(D) x 242mm(H)	
Weight:	Approx. 55 lbs. /25.0 Kg	
PbF	This product with PbF	
Specifications subject to change without notice.		

Specifications for CPH:

Specifications: / Model:	SD297S	P295WFX	SA247S	S245WFX	SD277S/B/W	S255WFX
Power Source:	120V AC Single Phase, 60Hz					
Power Requirement:	1490W	1490W	1490W	1490W	1490W	1490W
Output:	1100W	1100W	1100W	1100W	1100W	1100W
Microwave Frequency:	2450MHz					
Timer:	30min. / Stage (HIGH Power) ~ 5 Stage Maximum 90min.00sec or 99min.99sec / Stage (Other Power Levels) ~ 5 Stage Maximum					
Outside Dimensions:	29 7/8"(W) x 15 1/2"(D) x 16 7/16"(H) 759mm(W) x 393mm(D) x 418mm(H)	29 7/8"(W) x 15 "(D) x 16 7/16"(H) 759mm(W) x 381mm(D) x 418mm(H)			29 7/8"(W) x 15 "(D) x 16 7/16"(H) 759mm(W) x 391mm(D) x 418mm(H)	
Oven Cavity Dimensions:	23 1/4"(W) x 14 7/16"(D) x 9 1/2"(H) 591mm(W) x 367mm(D) x 242mm(H)					
Weight:	Approx. 55 lbs. /25.0 Kg	Approx. 55 lbs. /25.0 Kg	Approx. 53 lbs. /24.0 Kg	Approx. 53 lbs. /24.0 Kg	Approx. 55 lbs. /25.0 Kg	Approx. 53 lbs. /24.0 Kg
PbF	This product with PbF					
Specifications subject to change without notice.						

Panasonic®

© 2007 Panasonic Home Appliances Microwave Oven (Shanghai) Co., Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product.
Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

WARNING

1. This product should be serviced only by trained, qualified personnel.
2. Though this product has been manufactured in compliance with:
   "Federal Performance Standard 21 CFR Subchapter J"(D.H.H.S): U.S.A. models
   or "Radiation Emitting Devices Act"(Health and Welfare Canada): Canadian models
   it is very important all repairs should be made in accordance with procedures described in this manual to avoid being exposed to excessive microwave radiation.
3. Check for radiation leakage before and after every servicing according to the "procedure for measuring radiation leakage."
4. If the unit cannot be repaired on site, advise the customer not to use until unit is repaired.
5. Any serviceman who learns of any accident pertaining to microwave radiation leakage including the oven operating with open door should immediately notify the appropriate address listed below and Center for Devices and Radiological Health, DHHS.

IN U.S.A. (PSTC)	Panasonic Services Company 50 Meadowland Parkway, Secaucus, New Jersey 07094 Attention: Technical Service Division. (201)348-7000	IN PUERTO RICO (PSC)	PSC San Gabriel Industrial Park 65th Infantry Ave. Km.9.5 Carolina, Puerto Rico 00985 (787)750-4300
		IN CANADA (PCI)	Panasonic Canada Inc. 5770 Ambler Drive, Mississauga, Ontario, L4W2T3 (905)624-5010

6. There are special components used in the microwave oven which are important for safety. These parts are marked with a ⚠ on the replacement parts list. It is essential that these critical parts should be replaced only with the manufacture's specified parts to prevent microwave leakage, shock, fire, or other hazards. Do not modify the orginal design.

PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(A) Do not operate or allow the oven to be operated with the door open.
(B) Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary:
  (1) Interlock operation
  (2) Proper door closing
  (3) Seal and sealing surfaces (arcing, wear, and other damage)
  (4) Damage to or loosening of hinges and latches.
  (5) Evidence of dropping or abuse
(C) Before turning on microwave power for any service test or inspection within the microwave generating compartments, check the magnetron, waveguide or transmission line, and cavity for proper alignment, integrity and connections.
(D) Any defective or misadjusted components in the interlock, monitor, door seal, and microwave generation and transmission systems shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.
(E) A microwave leakage check to verify compliance with the Federal Performance Standard should be performed on each oven prior to release to the owner.

CAUTION

About lead free solder (PbF)

Distinction of PbF PCB: PCBs (manufactured) using lead free solder will have a PbF stamp on the PCB.

Caution:
- Pb free solder has a higher melting point than standard solder; Typically the melting point is 30 - 40˚C higher. Please use a high temperature soldering iron. In case of the soldering iron with temperature control, please set it to 370 ± 10˚C.
- Pb free solder will tend to splash when heated too high (about 600˚C).

DANGER OF HIGH VOLTAGE AND HIGH TEMPERATURE (HOT/LIVE) OF THE INVERTER POWER SUPPLY (U)

INVERTER WARNING

This Inverter board looks like a regular PCB. However, this PCB drives the magnetron tube with extremely high voltage and high current. **NEW H.V.**

IT HAS:

1. **Very high voltage and high current circuits.**
   It functions the same as the high voltage transformer and high voltage capacitor in ordinary microwave ovens.
2. **Aluminum heat sink that is energized with very high voltage and high heat energy.**
3. **Very high voltage which may remain in circuitry even when oven is off. High voltage charge may remain in the capacitors on the board.**

DO NOT:

* 1. **Do not touch circuitry because it has very hot (high voltage) circuitry. Even when replacing board, extreme care should be taken to avoid possible electric shock hazards. High voltage charge may remain in circuits.**

* 2. **Do not touch aluminum heat sink because it is energized with very high voltage and is also very hot in high heat energy.**

* 3. **Do not try to adjust or tamper with preset control on the Inverter board because it is very dangerous to adjust without proper test equipment.**

* 4. **Do not test oven while Inverter grounding plate or screws are loose. It is very dangerous to operate H.V. Inverter Circuit (U) with loose mounting screws or if improperly grounded.**

* 5. **For USA only:**
   Do not try to repair Inverter PCB because it is very dangerous to repair. Replace as a complete High Voltage Inverter Circuit unit and return fully re-packed in original shipping box and shipping materials.

INVERTER POWER SUPPLY

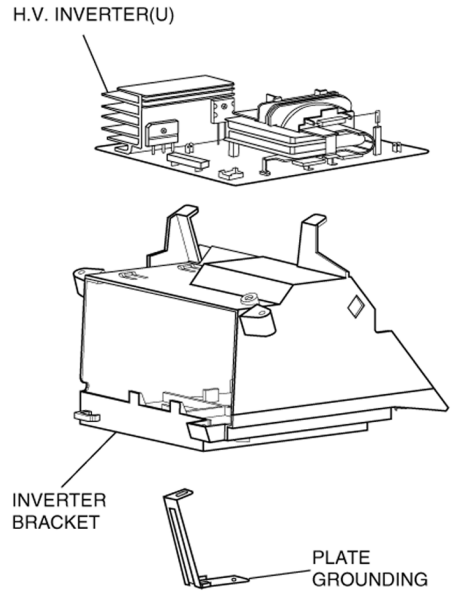

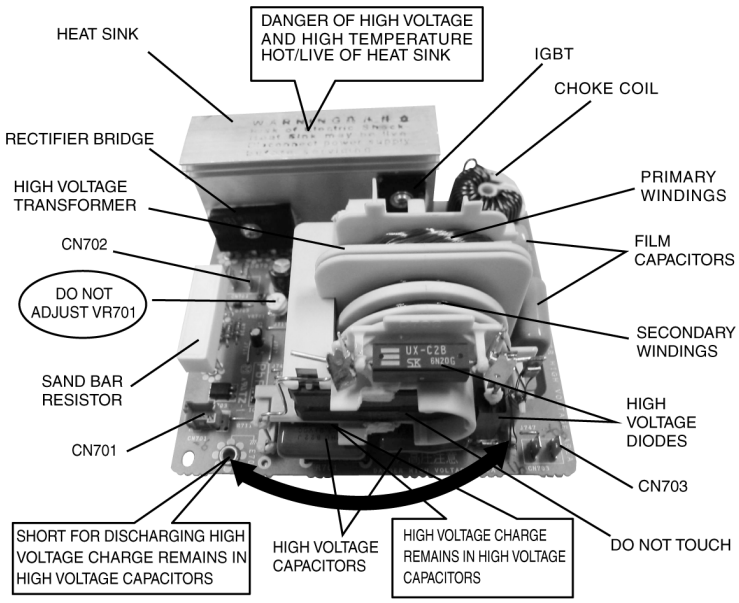

CONTENTS

Page

1 SCHEMATIC DIAGRAM 5
1.1. APH (NN-SD297S, SD277S/B/W) 5
1.2. CPH (NN-SD297S, SD277S/B/W, P295WFX) 6
1.3. CPH (NN-SA247S, S255WFX, S245WFX) 7
2 MEASUREMENTS AND ADJUSTMENTS 8
2.1. Adjustment of primary latch switch, secondary latch switch and short switch. 8
2.2. Measurement of microwave output 8
3 PROCEDURE FOR MEASURING MICROWAVE ENERGY LEAKAGE 9
3.1. Equipment 9
3.2. Procedure for measuring radiation leakage 9
3.3. Record keeping and notification after measurement 9
3.4. At least once a year, have the radiation monitor checked for calibration by its manufacturer. 10

Page

4 SIMPLE WAY OF H.V. INVERTER/MAGNETRON TROUBLESHOOTING 11
5 H.V.INVERTER BOARD MAIN PARTS LIST (F606Y8M00AP) 11
6 EXPLODED VIEW AND PARTS LIST 12
6.1. EXPLODED VIEW 12
6.2. PARTS LIST 13
6.3. DOOR ASSEMBLY 15
6.4. ESCUTCHEON BASE ASSEMBLY 16
6.5. PACKING AND ACCESSORIES 20
6.6. WIRING MATERIALS 21
7 DIGITAL PROGRAMMER CIRCUIT 22
7.1. NN-SD297S APH/CPH 22
7.2. NN-P295WFX CPH 24
7.3. NN-SD277 APH/CPH, NN-S255WFX CPH 26
7.4. NN-SA247S CPH, S245WFX CPH 28
7.5. PARTS LIST 30

1 SCHEMATIC DIAGRAM

1.1. APH (NN-SD297S, SD277S/B/W)

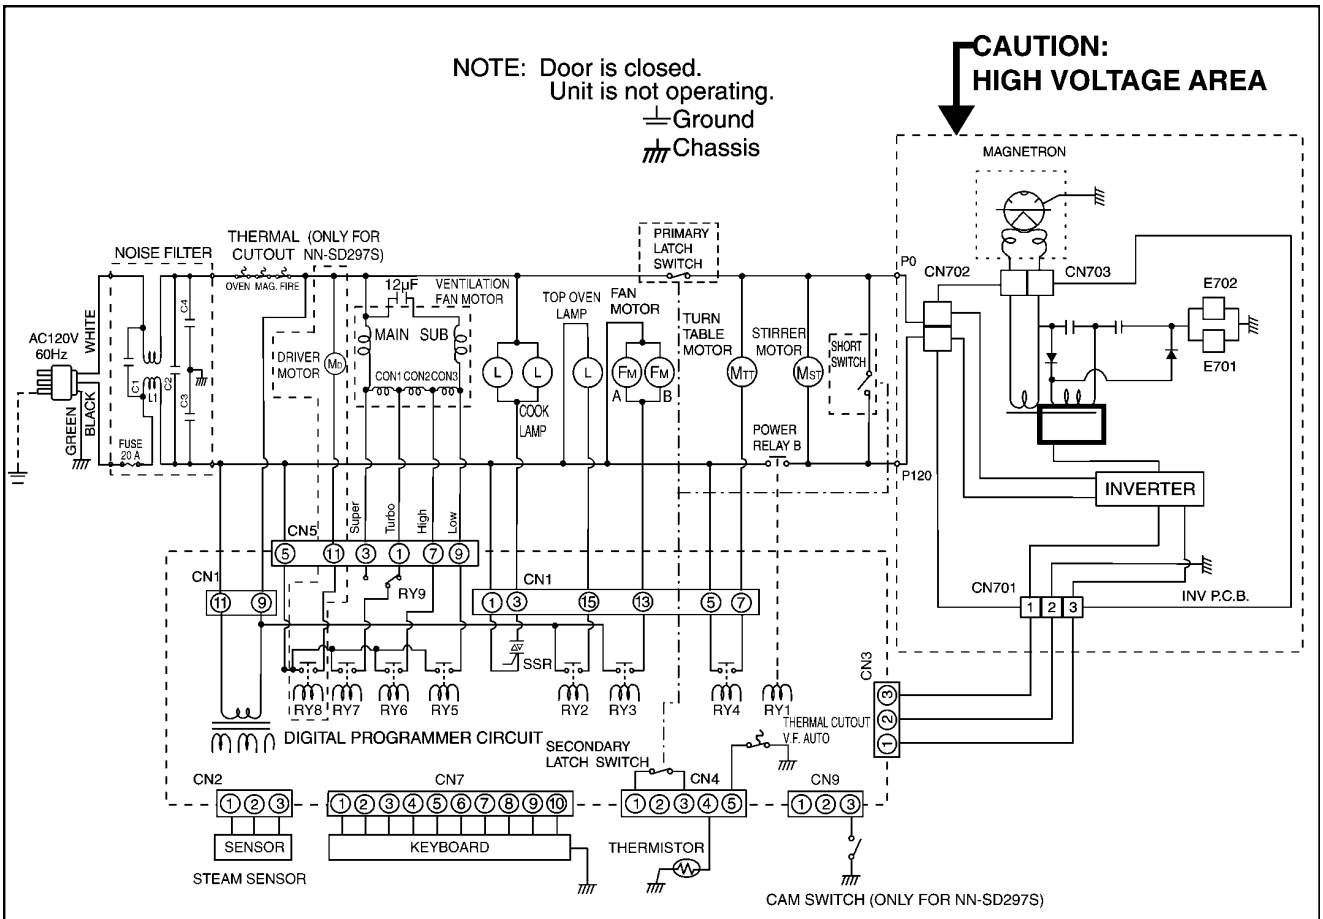

WIRING DIAGRAM (APH)

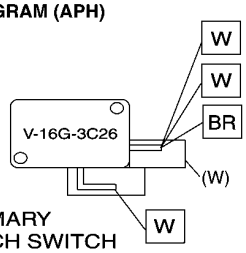

PRIMARY LATCH SWITCH TOP

NOTE: * When replacing, check the lead wire color as shown.
***Colors shown by ( ) indicate colors of lead wire connector housing.**

NEW H.V.

CAUTION: H.V.

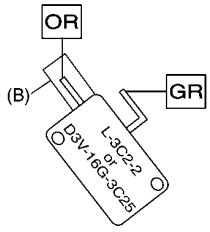

SECONDARY LATCH SWITCH BOTTOM (OUTSIDE)

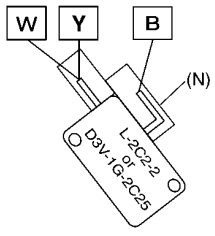

SHORT LATCH SWITCH BOTTOM (INSIDE)

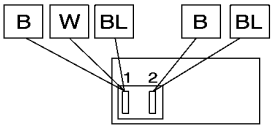

POWER RELAY B (RY1)

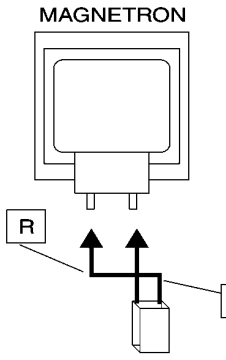

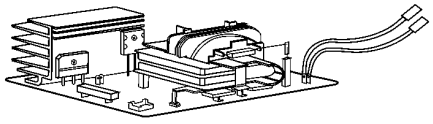

HIGH VOLTAGE INVERTER

SYMBOL	COLOR
OR	ORANGE
BL	BLUE
BR	BROWN
W	WHITE
Y	YELLOW
R	RED
GR	GRAY
B	BLACK
N	NATURAL

1.2. CPH (NN-SD297S, SD277S/B/W, P295WFX)

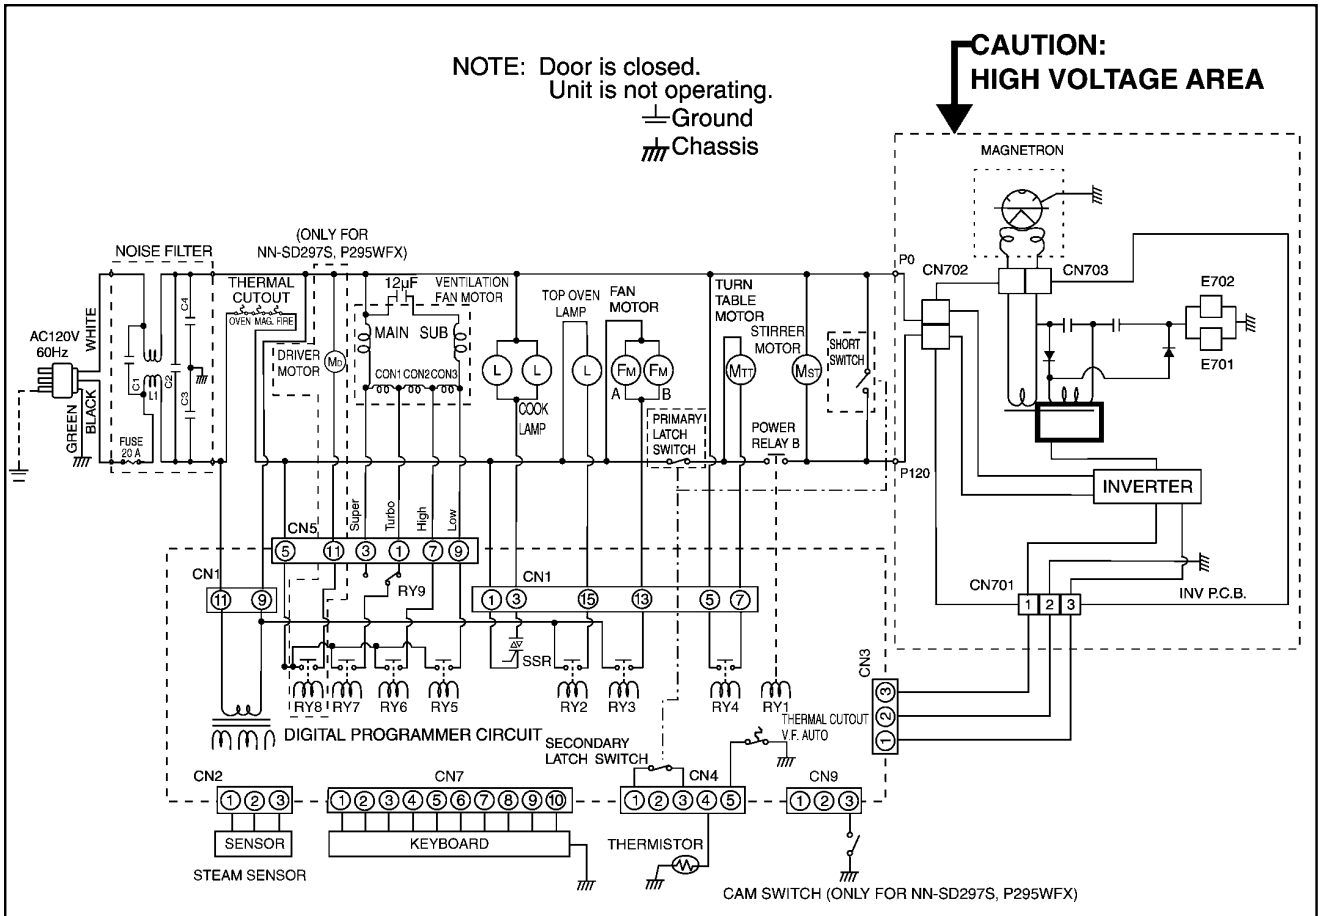

WIRING DIAGRAM (CPH)

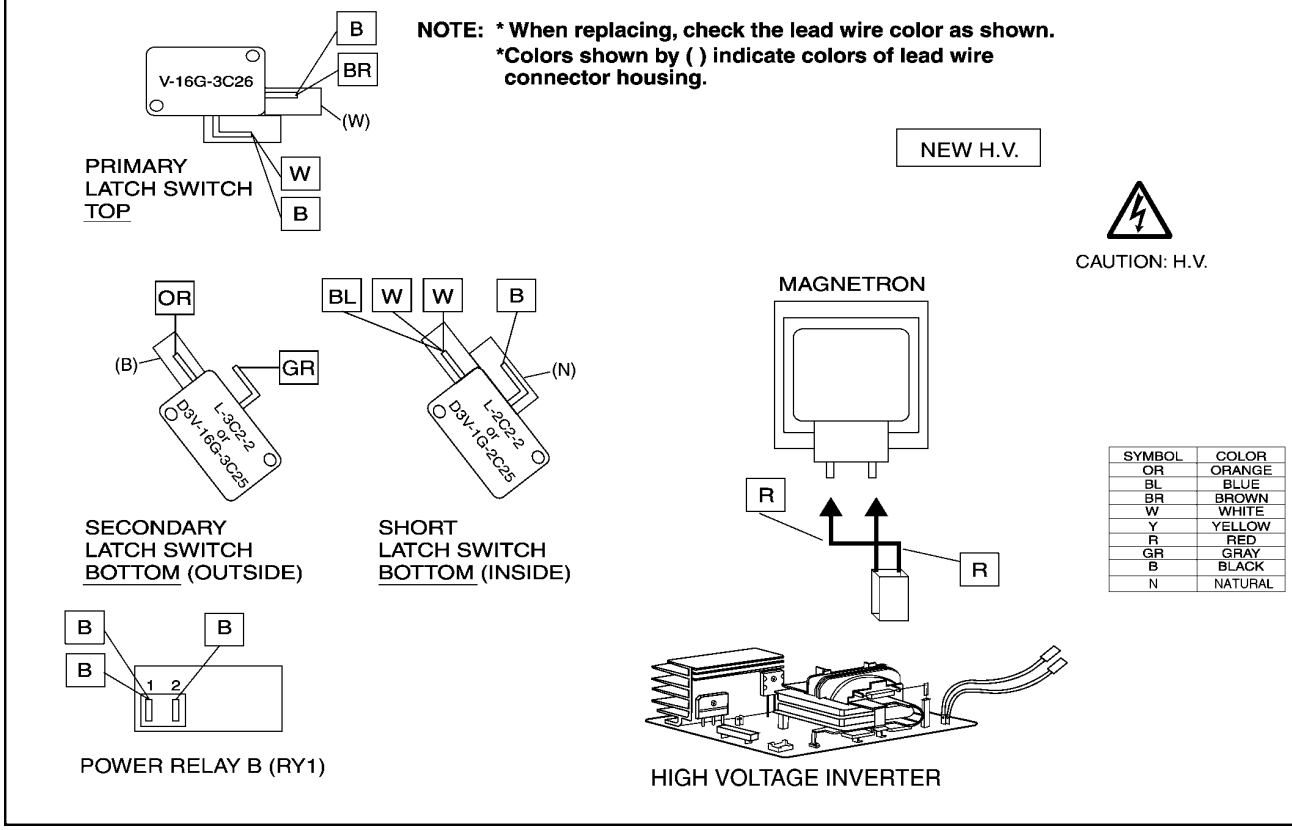

1.3. CPH (NN-SA247S, S255WFX, S245WFX)

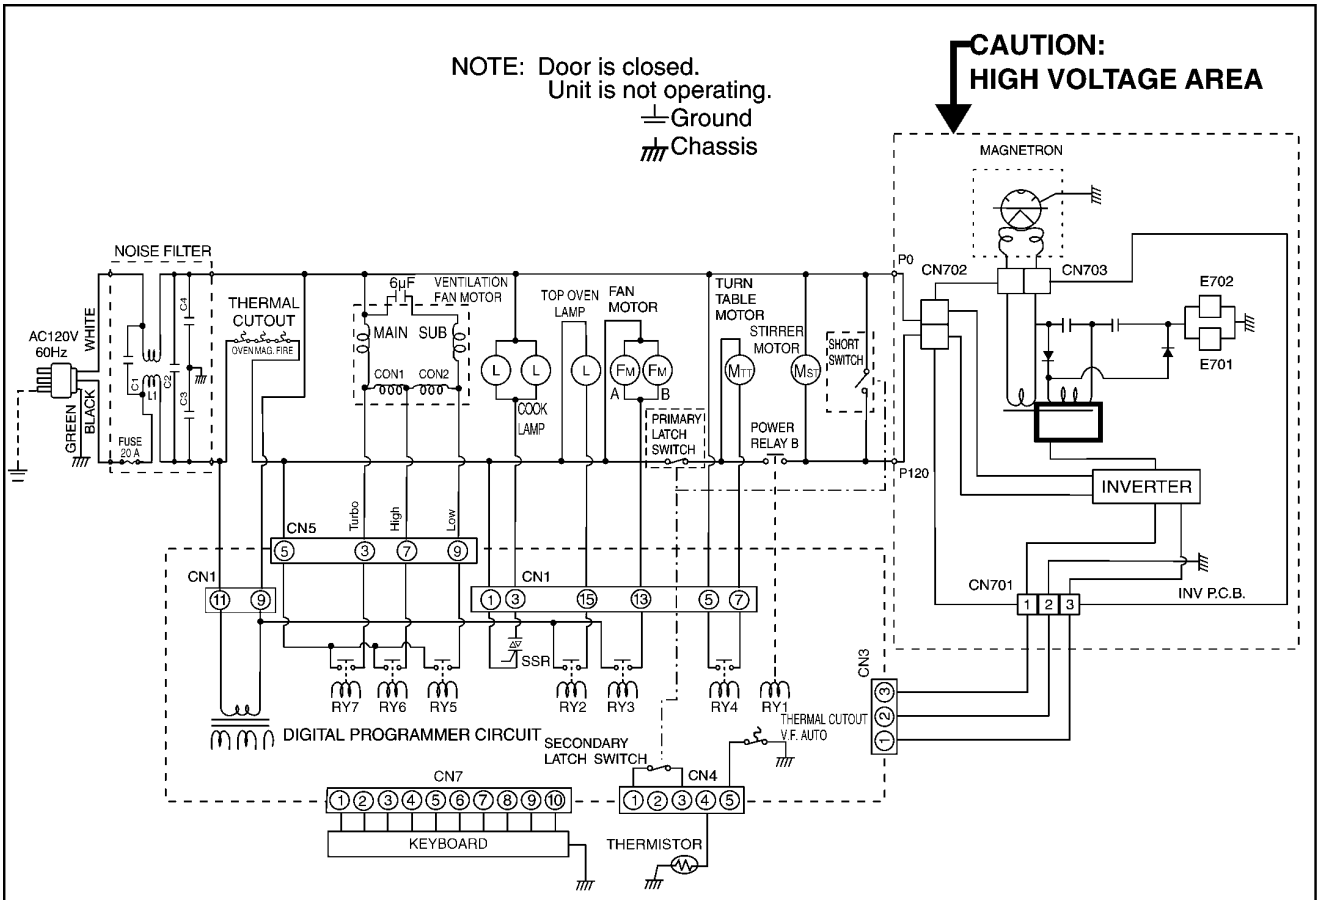

WIRING DIAGRAM (CPH)

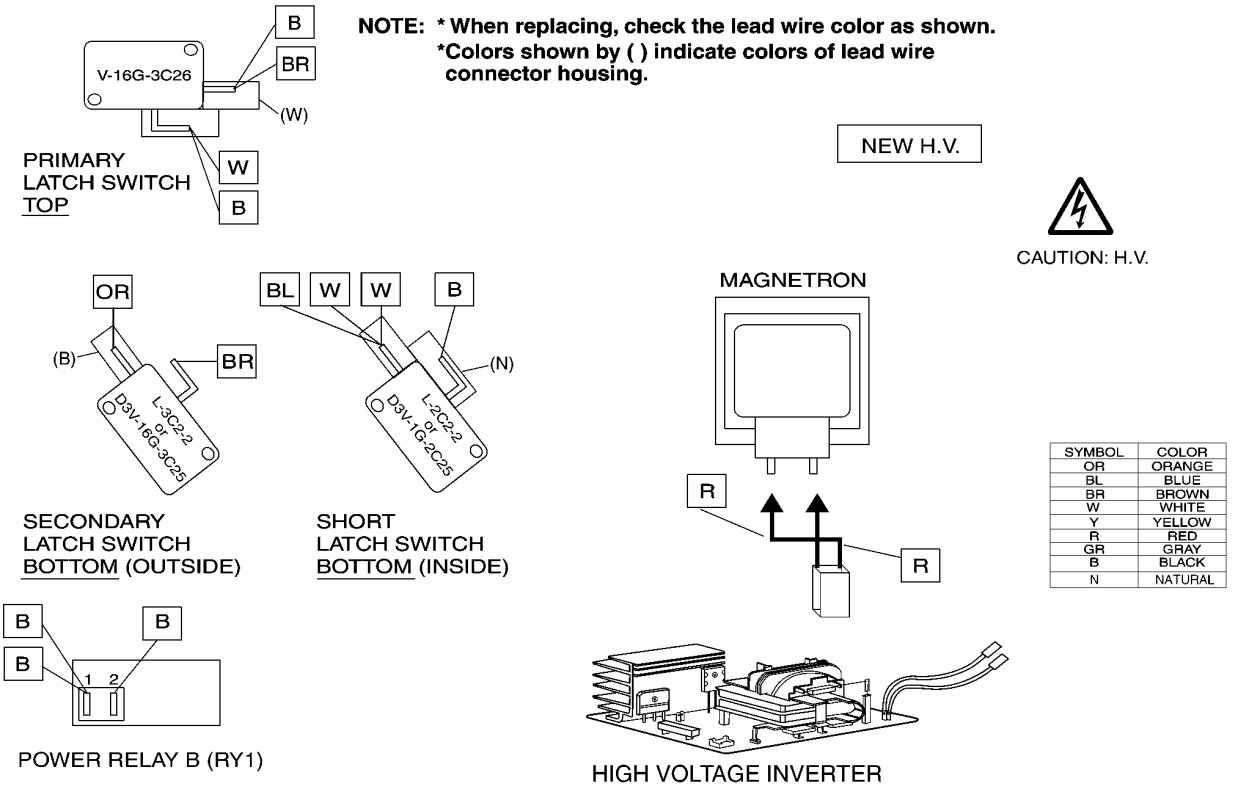

2 MEASUREMENTS AND ADJUSTMENTS

WARNING

* For continued protection against radiation hazard, replace only with identical replacement parts (For touch models Part No. J61424T00AP, Type No. V-15G-3C25 for Primary latch switch; Part No. J61414T00AP, Type No. D3V-16G-3C25 for Secondary latch switch and Part No. J61784T00AP, Type No. D3V-1G-2C25 for short switch.)
* When the 20 Amp. fuse is blown due to the operation of the short switch, you must replace power relay B (Part No. AEGG5G1A18, Type No. G5G-1A12VDC), Primary latch switch and the short switch. Then follow the installation procedures below.
* Interlock switch replacement In replacing faulty switches, be sure mounting tabs are not bent, broken or otherwise deficient in their ability to hold the switches.
* Refer to schematic diagram to ensure proper connection.

2.1. Adjustment of primary latch switch, secondary latch switch and short switch.

1. Mount the Primary latch switch, the Secondary latch switch and the short switch to the door hook assembly as shown in ILL.

   NOTE:

   No specific individual adjustments during installation of the Primary latch switch, Secondary latch switch or Short switch to the door hook are required.

2. When mounting the door hook assembly to the oven assembly, adjust the door hook assembly by moving it in the direction of the arrows in the illustration so that the oven door will not have any play in it. Check for play in the door by pulling the door assembly. Make sure that the latch keys move smoothly after adjustment is completed. Completely tighten the screws holding the door hook assembly to the oven assembly.
3. Reconnect the short switch and check the continuity of the monitor circuit and all latch switches again by following the component test procedures.

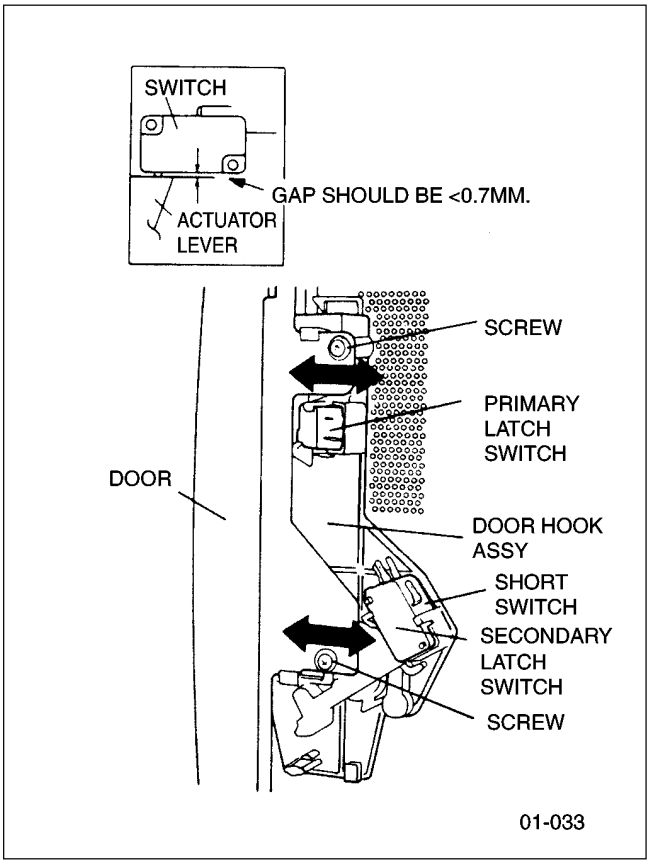

2.2. Measurement of microwave output

The output power of the magnetron can be determined by performing IEC standard test procedures. However,due to the complexity of IEC test procedures, it is recommended to test the magnetron using the simple method outlined below.

Necessary Equipment:

*1 liter beaker *Glass thermometer
*Wrist watch or stopwatch

NOTE:

Check the line voltage under load.Low voltage will lower the magnetron output. Take the temperature readings and heating time as accurately as possible.

1. Fill the beaker with exactly one liter of tap water.Stir the water using the thermometer and record the water's temperature. (recorded as T1).
2. Place the beaker on the center of glass tray.
   Set the oven for High power and heat it for exactly one minute.
3. Stir the water again and read the temperature of the water. (recorded as T2).
4. The normal temperature rise at High power level for each model is as shown in table.

TABLE (1L-1min.test)

RATED OUTPUT	TEMPERATURE RISE
1100W	Min. 16.9°F(9.4°C)
1200W	Min. 18.5°F(10.3°C)

3 PROCEDURE FOR MEASURING MICROWAVE ENERGY LEAKAGE

WARNING

Check for radiation leakage after every servicing. Should the leakage be more than 2 mW/cm^2 (1mW/cm^2 for Canada) inform PSTC, PSC, or PCI immediately. After repairing or replacing any radiation safety device, keep a written record for future reference, as required by D.H.H.S. and Health and Welfare Canada regulation. This requirement must be strictly observed. In addition, the leakage reading must be recorded on the service repair ticket while in the customer's home.

NOTE:

The U.S. Government standard is 5 mW/cm^2 while in the customer's home. 2mW/cm^2 stated here is our own voluntary standard. (1mW/cm^2 for Canada)

3.1. Equipment

- Electromagnatic radiation monitor
- Glass thermometer 212°F or 100°C
- 600cc glass beaker

3.2. Procedure for measuring radiation leakage

Note before measuring.

- Do not exceed meter full scale deflection. Leakage monitor should initially be set to the highest scale.
- To prevent false readings the test probe should be held by the grip portion of the handle only and moved along the shaded area in Figure no faster than 1 inch/sec (2.5cm/sec).
- Leakage with the outer panel removed ..... less than 5mW/cm^2.
- Leakage for a fully assembled oven with door normally closed ..... less than 2mW/cm^2 (1mW/cm^2 for Canada).
- Leakage for a fully assembled oven [Before the latch switch (primary) is interrupted] while pulling the door ..... less than 2mW/cm^2.

1. Pour 275 ± 15cc (9ozs^s± 1/2oz) of 20°C ± 5°C (68° ± 9°F) water in a beaker which is graduated to 600cc, and place in the center of the oven.
2. Set the radiation monitor to 2450MHz and use it following the manufacturer´s recommended test procedure to assure correct results.
3. When measuring the leakage, always use the 2 inch (5cm) spacer supplied with the probe.
4. Tap the start pad or set the timer and with the magnetron oscillating, measure the leakage by holding the probe perpendicular to the surface being measured.

3.2.1. Measurement with the outer panel removed.

Whenever you replace the magnetron, measure for radiation leakage before the outer panel is installed and after all necessary components are replaced or adjusted. Special care should be taken in measuring around the magnetron.

WARNING

Avoid contacting any high voltage parts.

3.2.2. Measurements with a fully assembled oven.

After all components, including outer panel are fully assembled, measure for radiation leakage around the door periphery, the door viewing window, the exhaust opening, control panel and air inlet openings.

3.3. Record keeping and notification after measurement

- After any adjustment or repair to a microwave oven, a leakage reading must be taken. Record this leakage reading on the repair ticket even if it is zero.

  A copy of this repair ticket and the microwave leakage reading should be kept by repair facility.
- Should the radiation leakage be more than 2 mW/cm^2 (1mW/cm^2 for Canada) after determining that all parts are in good condition, functioning properly, and genuine replacement parts as listed in this manual have been used, immediately notify PSTC, PSC or PCI.

3.4. At least once a year, have the radiation monitor checked for calibration by its manufacturer.

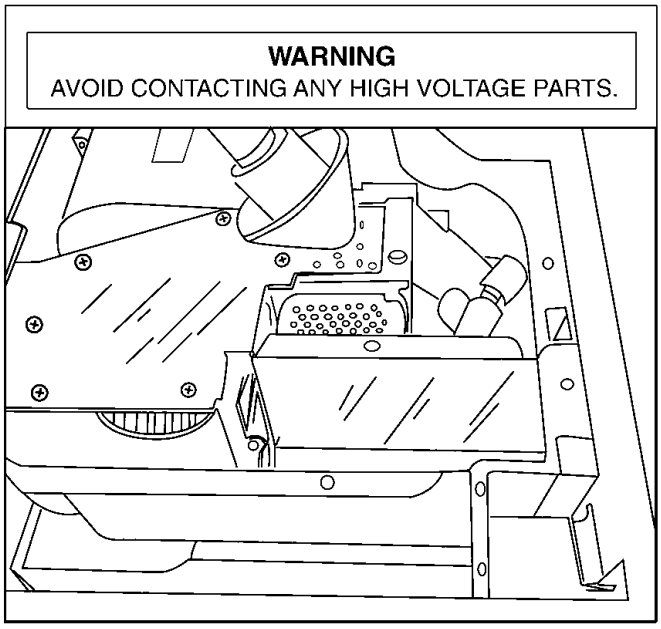

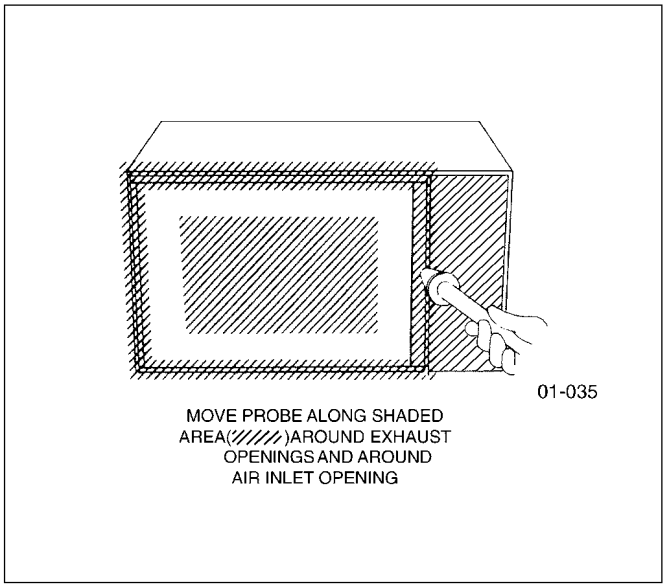

4 SIMPLE WAY OF H.V. INVERTER/MAGNETRON TROUBLESHOOTING

Purpose:

Simple way **(3/37 seconds rule)** of identifying whether it's Magnetron, Inverter, or others.

Set-up:

The unit under question is connected through the Ammeter as shown below.

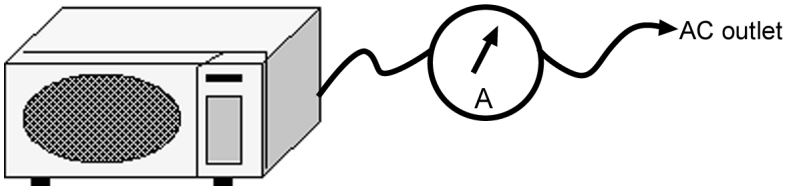

Procedure:

Follow the matrix table below to identify the problem source.

Note:

Do not replace both Inverter board and Magnetron simultaneously and automatically without going through this procedure.

Power will:	Ammeter reading is:	To do:	Remedy:
Shut off in 37 seconds after "Start".	1. Between 0.5A and 1.0A.	Check and repair open magnetron circuit	Open magnetron wiring between Inverter and magnetron terminal.
	2. Between 1.0A and 2.0A.	Check continuity of D702 in Inverter PCB.	
		⇩	
		1. D702 shorted	Replace **H.V.Inverter**(F606Y8M00AP)
		2. D702 is OK	Replace **magnetron**
Shut off in 3 seconds after "Start"	1. Less than 0.5A	Check open circuit: Latch Switch, DPC, Power Relay and CN701	Replace defective component(s), or correct switch, cables and connectors.

5 H.V.INVERTER BOARD MAIN PARTS LIST (F606Y8M00AP)

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
DB701		B0FBBS000001	BRIDGE DIODE	1	20A, 600V
L701		F50206G00AP	CHOKE COIL	1	
Q701		B1JAGV000015	TRANSISTOR SI	1	1000V
T701	⚠	A609A8M00AP	H.V. TRANSFORMER	1	(INCLUDING D701,D702,C706,C707)
C701		ECWF5284N300	CAPACITOR	1	0.28µF/500V
C702		ECWF2455N644	CAPACITOR	1	4.5µF/250V

6 EXPLODED VIEW AND PARTS LIST

6.1. EXPLODED VIEW

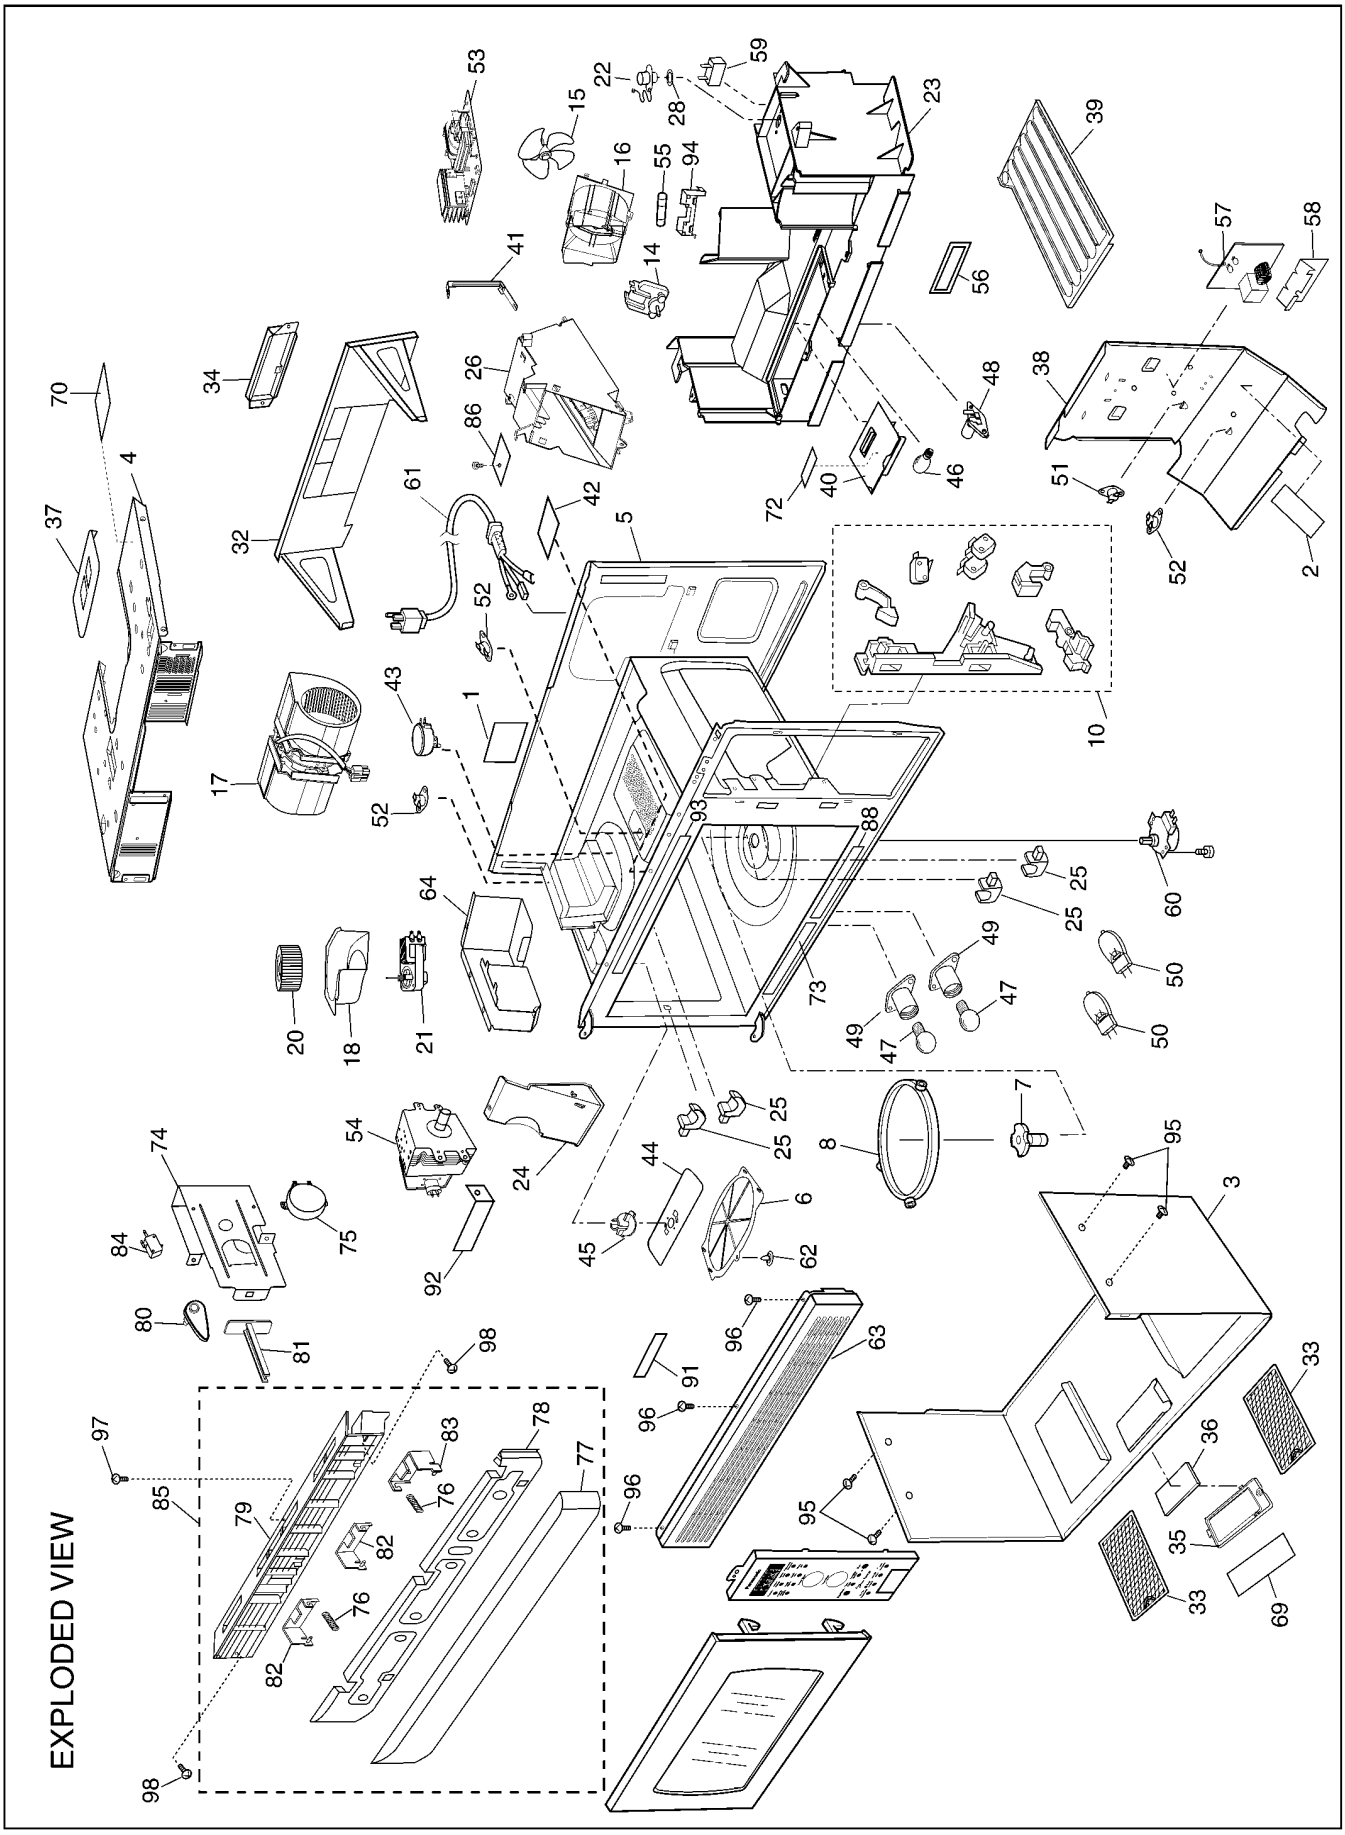

6.2. PARTS LIST

NOTE:

1. When ordering replacement part(s), please use part number(s) shown in this part list.
   Do not use description of the part.
2. Important safety notice:
   Components identified by ⚠ mark have special characteristics important for safety.
   When replacing any of these components, use only manufacture's specified parts.

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
1		F00205H00AP	CAUTION LABEL	1	APH
1		F00067600CP	CAUTION LABEL	1	CPH
2		F00336Z20AP	FUSE LABEL	1	
3		F110D6Z00SAP	CABINET BODY(U)	1	SD297S APH
3		F110D6Z00SCP	CABINET BODY(U)	1	SD297S CPH
3		F110D8Q00BAP	CABINET BODY(U)	1	SD277S APH/CPH,SD277B APH/CPH,SA247S CPH
3		F110D8Q00HAP	CABINET BODY(U)	1	SD277W APH/CPH,P295WFX CPH, S255WFX CPH,S245WFX CPH
4		F100D6Z00AP	BASE PLATE (U)	1	SD297S APH/CPH,P295WFX CPH
4		F100D6Z80AP	BASE PLATE (U)	1	EXCEPT SD297S APH/CPH & P295WFX CPH
5	⚠	F201A6F10AP	OVEN(U)	1	
6		F20115H00AP	COVER	1	
7		F21314Y00XN	PULLY SHAFT	1	
8		F290D5Q00AP	ROLLER RING(U)	1	
10	⚠	E393C6Z00AP	DOOR HOOK (U)	1	APH
10	⚠	E393C6Z00CP	DOOR HOOK (U)	1	CPH
14		F40016Z00AP	FAN MOTOR A	1	FOR INVERTER (U) COOLING
15		F40085H00AP	FAN BLADE	1	FOR INVERTER (U) COOLING
16		F40256Z80AP	ORIFICE	1	
17		F401W6Z00AP	BLOWER MOTOR (U)	1	SD297S APH/CPH,SD277 APH/CPH,P295WFX CPH
17		F401W6Z60AP	BLOWER MOTOR (U)	1	SA247S CPH,S255WFX CPH,S245WFX CPH
18		F42486Z00AP	FAN CASE C	1	
20		F42505H00AP	SIROCCO FAN C	1	
21		F42676Z80AP	FAN MOTOR B	1	FOR MAGNETRON COOLING
22		F601L6F00AP	SENSOR (BU)	1	SD297S APH/CPH,SD277 APH/CPH,P295WFX CPH
23		F40246Z00AP	EXHAUST GUIDE A	1	
24		F44775H00AP	EXHAUST GUIDE	1	
25		F20025H00AP	RACK SUPPORT	4	
26		F65856Z00AP	INVERTER BRACKET	1	
27		F62386Z00AP	WASHER	1	
28		F62386F00AP	WASHER	1	
32		F100T5H00APG	BACK PLATE(BU)	1	
33		F400B6Z00AP	FILTER (U)	2	
34		F400K5H00APG	EXHAUST ADAPTER	1	
35		F63175H00SAP	LAMP HOLDER	1	SD297S APH
35		F63176F00SAP	LAMP HOLDER	1	SD297S CPH
35		F63175H10BAP	LAMP HOLDER	1	SD277S APH/CPH,SD277B APH/CPH,SA247S CPH
35		F63175H10HAP	LAMP HOLDER	1	SD277W APH/CPH,P295WFX CPH, S255WFX CPH,S245WFX CPH
36		F64375H00AP	GLASS PLATE	1	
37		F41576Z00APG	FAN INSTALLATION PLATE	2	
38		F42176Z00APG	COVER PLATE	1	
39		F42205H00APG	COVER PLATE B	1	
40		F607V6Z00APG	LAMP COVER (U)	1	
41		F61846Z00AP	GROUNDING PLATE	1	
42		F60405H00AP	LAMP MEMBRANE	1	
43		F61446Z00AP	STIRRER MOTOR	1	
44		F20155H00AP	STIRRER	1	
45		F20165H00AP	ANTENNA SUPPORT	1	
46		F60305H00AP	INCANDESCENT LAMP	1	
47		F60305H00AP	INCANDESCENT LAMP	2	EXCEPT SD297S APH/CPH & P295WFX CPH
48		F61525H00AP	SOCKET	1	
49		F61525H00AP	SOCKET	2	EXCEPT SD297S APH/CPH & P295WFX CPH
50		F67536Z00AP	HALOGEN LAMP	2	SD297S APH/CPH,P295WFX CPH
51		F61456F20AP	THERMAL CUTOUT	1	

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
52		F61456N60AP	THERMAL CUTOUT	3	
53	⚠	F606Y8M00AP	H.V.INVERTER (U)	1	
54	⚠	2M261-M32KLP	MAGNETRON	1	APH
54	⚠	2M261-M32JP	MAGNETRON	1	CPH
55	⚠	F62308F00AP	FUSE	1	20A/125V
56		F400B6Z20AP	CARBON FILTER (U)	1	
57		F692Y8F20AP	NOISE FILTER(U)	1	
58		F82605H00AP	NOISE FILTER BRACKET	1	
59		F66986Z30AP	MOTOR CAPACITOR	1	SD297S APH/CPH,SD277 APH/CPH,P295WFX CPH
59		F66986Z80AP	MOTOR CAPACITOR	1	SA247S CPH,S255WFX CPH,S245WFX CPH
60		F63266Z80AP	TURNTABLE MOTOR	1	
61	⚠	F900C6Z80AP	AC CORD W/PLUG	1	APH
61	⚠	F900C6Z80CP	AC CORD W/PLUG	1	CPH
62		F90804W00AP	CANOE CLIP	1	FOR COVER
63		F101V6Z20SAP	VENT GRILLE (U)	1	SD277S APH/CPH
63		F101V6Z30BAP	VENT GRILLE (U)	1	SD277B APH/CPH
63		F101V6Z30HAP	VENT GRILLE (U)	1	SD277W APH/CPH,S255WFX CPH
63		F101V6F10BAP	VENT GRILLE (U)	1	SA247S CPH
63		F101V6F10HAP	VENT GRILLE (U)	1	S245WFX CPH
64		F48436Z00APG	INHALE GUIDE A	1	
69		F01725H00AP	CAUTION LABEL	1	
70		F00565H00AP	CAUTION LABEL	1	
72		F00725H00AP	CAUTION LABEL	1	
73		F03346Z20AP	MENU LABEL	1	SD297S APH,SD277S/B/W APH
73		F03346Z20CP	MENU LABEL	1	SD297S CPH,SD277S/B/W CPH
74		F66396F00AP	MOTOR INSTALLATION BRACKET	1	SD297S APH/CPH,P295WFX CPH
75		F63266F00AP	DRIVE MOTOR	1	SD297S APH/CPH,P295WFX CPH
76		F11736F00AP	SPRING	2	SD297S APH/CPH,P295WFX CPH
77		F11196F00SAP	VENT GRILLE OSTENTATIOUS COVER	1	SD297S APH/CPH
77		F11196Z00HAP	VENT GRILLE OSTENTATIOUS COVER	1	P295WFX CPH
78		F11206F00APG	VENT GRILLE INSTALLATION BRACKET	1	SD297S APH/CPH,P295WFX CPH
79		F11176F00SAP	VENT GRILLE	1	SD297S APH/CPH
79		F11176Z00HAP	VENT GRILLE	1	P295WFX CPH
80		F48236F00AP	CAM	1	SD297S APH/CPH,P295WFX CPH
81		F48246Z00AP	SHAFT	1	SD297S APH/CPH,P295WFX CPH
82		F111B6F00APG	BACKSTOP AU	2	SD297S APH/CPH,P295WFX CPH
83		F111C6F00APG	BACKSTOP BU	1	SD297S APH/CPH,P295WFX CPH
84		J61415G10XN	MICRO SWITCH	1	SD297S APH/CPH,P295WFX CPH
85		F101V6Z00SAP	VENT GRILLE (U)	1	SD297S APH/CPH
85		F101V6Z00HAP	VENT GRILLE (U)	1	P295WFX CPH
86		F90356Z00AP	AC CORD FIXING PLATE	1	
87		A66135H00AP	BRACKET A	3	
88		F04468Q00AP	FUNCTION LABEL	1	SD297S APH
88		F04468Q00CP	FUNCTION LABEL	1	SD297S CPH
88		F04466Z20AP	FUNCTION LABEL	1	SD277S/B/W APH
88		F04466Z20CP	FUNCTION LABEL	1	SD277S/B/W CPH
91		F01956F10AP	CAUTION LABEL	1	SD297S APH
91		F01956F10CP	CAUTION LABEL	1	SD297S CPH,P295WFX CPH
92		F40316Z00APG	AIR BAFFLE C	1	SD297S APH/CPH,SD277* APH/CPH,P295WFX CPH
93		F00067C50AP	CAUTION LABEL	1	APH
93		F00067C50CP	CAUTION LABEL	1	CPH
94		F62315G10XN	FUSE HOLDER	1	
95		XTC4+12BC	SCREW	4	EXCEPT SD277B APH/CPH
95		XTC4+12BB	SCREW	4	SD277B APH/CPH
96		TCTTH4+10BCB	SCREW	3	SD277S APH/CPH,SD277B APH/CPH,SA247S CPH
96		TCTTH4+10BC	SCREW	3	SD277W APH/CPH,S255WFX CPH,S245WFX CPH
97		XTC4+10AFZ	SCREW	1	SD297S APH/CPH
97		XTC4+10AFC	SCREW	1	P295WFX CPH
98		XTTFA4+8BFZ	SCREW	2	SD297S APH/CPH
98		XTTFA4+8BCR	SCREW	2	P295WFX CPH

6.3. DOOR ASSEMBLY

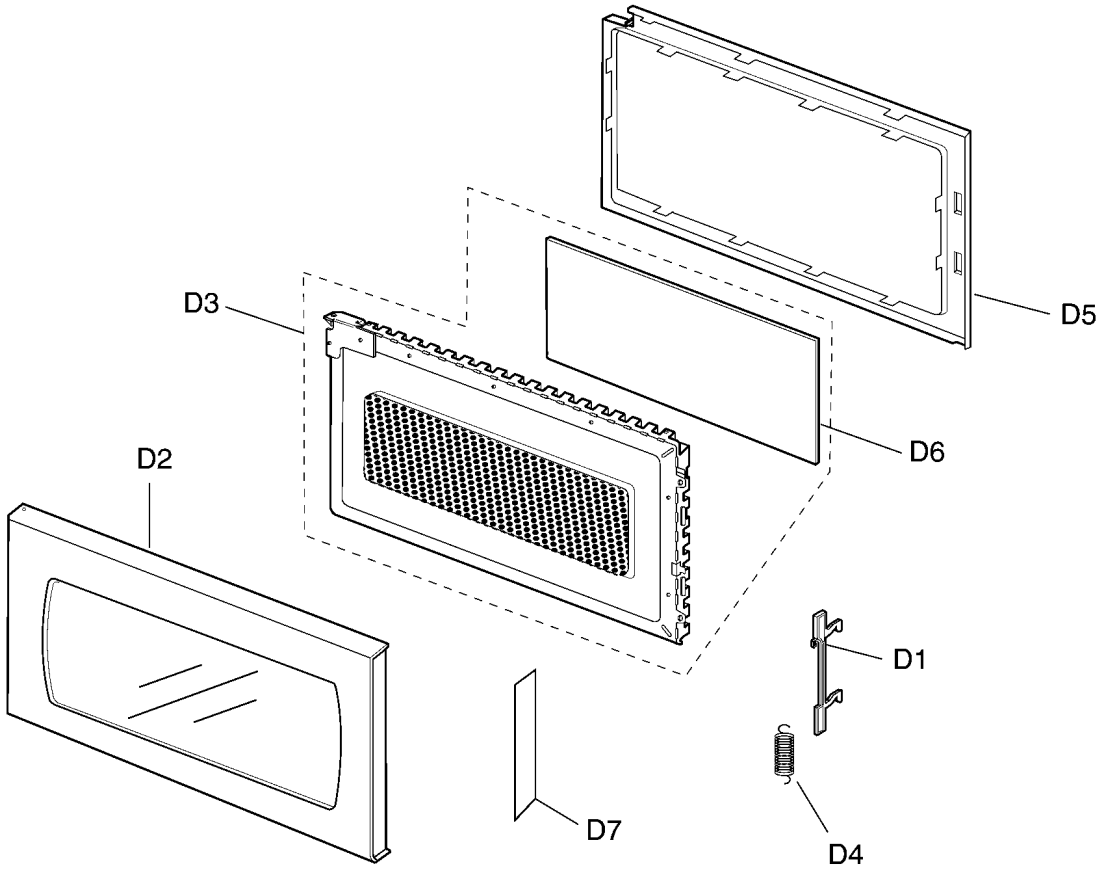

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
D1		F3018-1200	DOOR KEY A	1	
D2	⚠	F302A8Q00SAP	DOOR A (U)	1	SD297S APH/CPH
D2	⚠	F302A8Q50HAP	DOOR A (U)	1	P295WFX CPH
D2	⚠	F302A8Q10SAP	DOOR A (U)	1	SD277S APH/CPH
D2	⚠	F302A8Q10BAP	DOOR A (U)	1	SD277B APH/CPH
D2	⚠	F302A8Q10HAP	DOOR A (U)	1	SD277W APH/CPH,S255WFX CPH
D2	⚠	F302A8Q90SCP	DOOR A (U)	1	SA247S CPH
D2	⚠	F302A8Q90HCP	DOOR A (U)	1	S245WFX CPH
D3	⚠	F302K5H00AP	DOOR E (U)	1	
D4		F30215G10XN	DOOR KEY SPRING	1	
D5	⚠	F30855H00AP	DOOR C	1	
D6	⚠	F31455H00AP	DOOR SCREEN A	1	
D7		F02459660AP	DHHS LABEL	1	APH
D7		F04114180CP	HC LABEL	1	CPH

6.4. ESCUTCHEON BASE ASSEMBLY

6.4.1. NN-SD297S APH/CPH

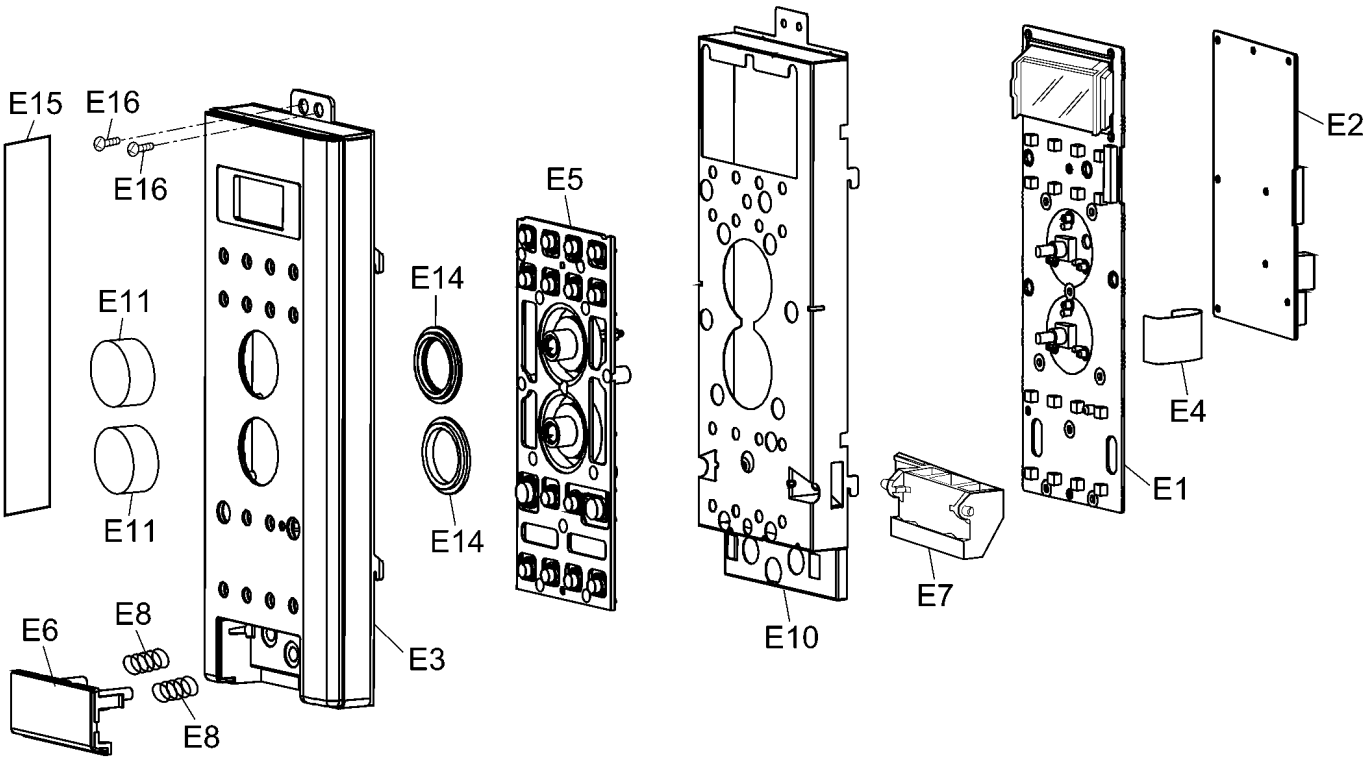

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
E1		F603L8Q00AP	D.P.CIRCUIT (AU)	1	SD297S APH
E1		F603L8Q00CP	D.P.CIRCUIT (AU)	1	SD297S CPH
E2		F603Y6Z00AP	D.P.CIRCUIT (DU)	1	SD297S APH
E2		F603Y6Z00CP	D.P.CIRCUIT (DU)	1	SD297S CPH
E3		F800L8Q00SAP	ESCUTCHEON BASE (U)	1	SD297S APH/CPH
E4		F66166Z00AP	FLAT CABLE	1	SD297S APH/CPH
E5		F82988Q00SAP	BUTTON	1	SD297S APH/CPH
E6		F891P6F00SAP	DOOR OPENING BUTTON (U)	1	SD297S APH/CPH
E7		F82566F00AP	DOOR OPENING LEVER	1	SD297S APH/CPH
E8		F80375950AP	COOK BUTTON SPRING	2	
E10		F81278Q00APG	BACK PANEL	1	SD297S APH/CPH
E11		F83928P00KAP	DIAL	2	SD297S APH/CPH
E14		F80098P00AP	LED COVER A	2	SD297S APH/CPH
E15		F00078Q00SAP	NAME PLATE	1	SD297S APH
E15		F00078Q00SCP	NAME PLATE	1	SD297S CPH
E16		XTWFNE4+12P	SCREW	2	SD297S APH/CPH

6.4.2. NN-P295WFX CPH

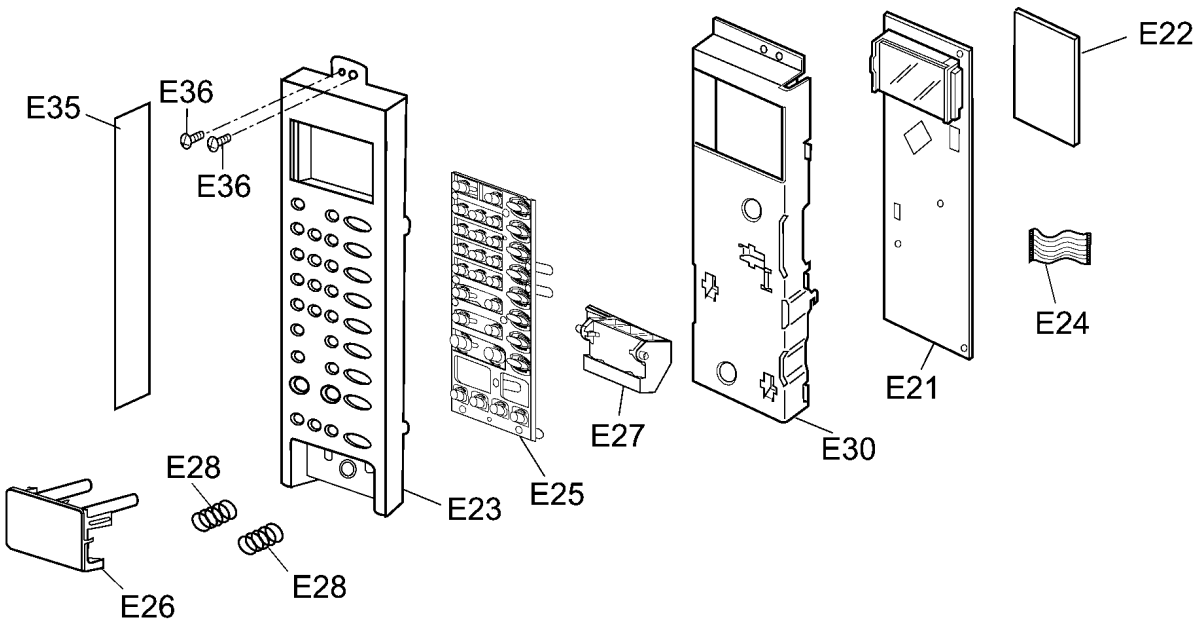

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
E21		F603L8Q50CP	D.P.CIRCUIT (AU)	1	P295WFX CPH
E22		F603Y6Z00CP	D.P.CIRCUIT (DU)	1	P295WFX CPH
E23		F800L6Z00HCP	ESCUTCHEON BASE (U)	1	P295WFX CPH
E24		F66166Z00AP	FLAT CABLE	1	P295WFX CPH
E25		F82986Z00HAP	BUTTON	1	P295WFX CPH
E26		F891P6Z00HAP	DOOR OPENING BUTTON	1	P295WFX CPH
E27		F82566F00AP	DOOR OPENING LEVER	1	P295WFX CPH
E28		F80375950AP	COOK BUTTON SPRING	2	
E30		F81276F00APG	BACK PANEL	1	P295WFX CPH
E35		F00078Q50HCP	NAME PLATE	1	P295WFX CPH
E36		XTWFNE4+12PW	SCREW	2	P295WFX CPH

6.4.3. NN-SD277S/B/W APH, NN-SD277S/B/W CPH

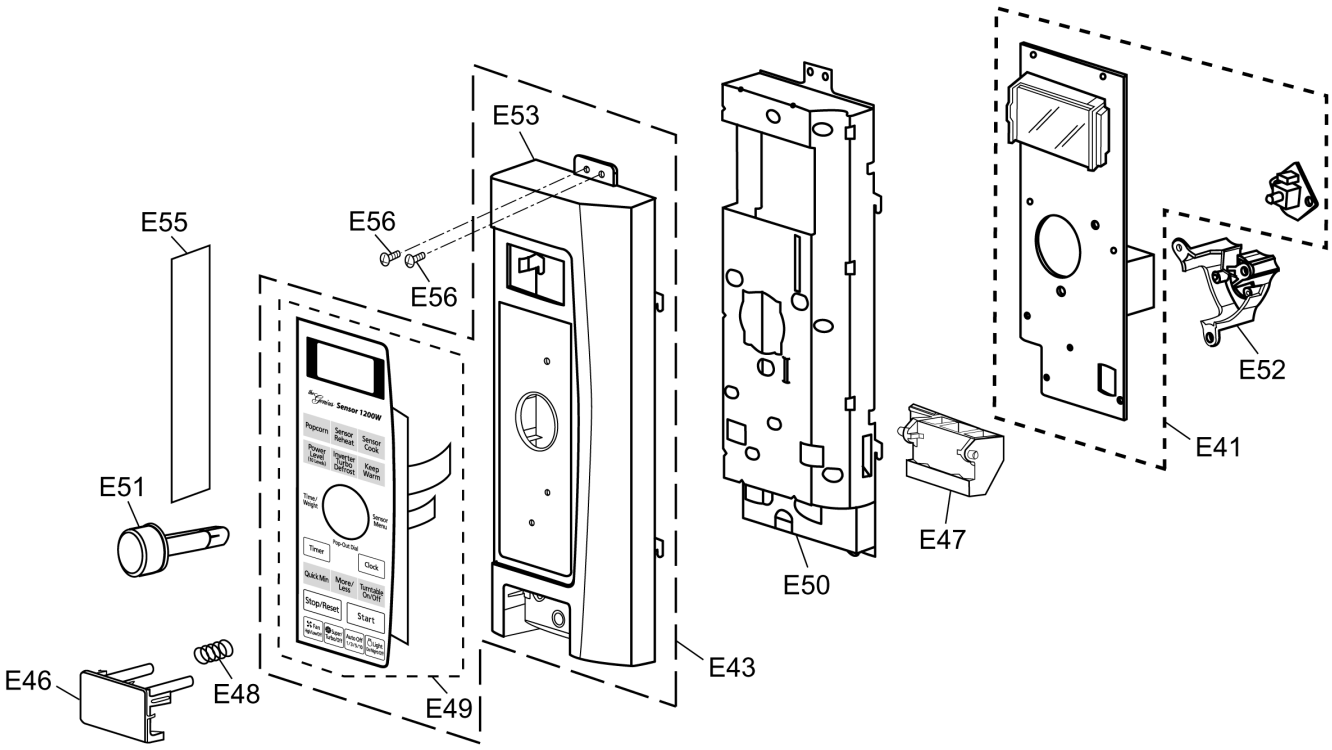

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
E41		F603L8Q10AP	D.P.CIRCUIT (AU)	1	SD277S/B/W APH
E41		F603L8Q10CP	D.P.CIRCUIT (AU)	1	SD277S/B/W CPH
E43		F800L8Q10SAP	ESCUTCHEON BASE (U)	1	SD277S APH
E43		F800L8Q10SCP	ESCUTCHEON BASE (U)	1	SD277S CPH
E46		F891P6Z20SAP	DOOR OPENING BUTTON (U)	1	SD277S APH/CPH
E46		F80726Z30BAP	DOOR OPENING BUTTON	1	SD277B APH/CPH
E46		F80726Z30HAP	DOOR OPENING BUTTON	1	SD277W APH/CPH
E47		F82566F00AP	DOOR OPENING LEVER	1	SD277S/B/W APH,SD277S/B/W CPH
E48		F80375950AP	COOK BUTTON SPRING	1	
E49		F630Y8Q10SAP	MEMBRANE SWITCH (U)	1	SD277S APH
E49		F630Y8Q10SCP	MEMBRANE SWITCH (U)	1	SD277S CPH
E49		F630Y8Q10BAP	MEMBRANE SWITCH (U)	1	SD277B APH
E49		F630Y8Q10BCP	MEMBRANE SWITCH (U)	1	SD277B CPH
E49		F630Y8Q10HAP	MEMBRANE SWITCH (U)	1	SD277W APH
E49		F630Y8Q10HCP	MEMBRANE SWITCH (U)	1	SD277W CPH
E50		F81276Z20APG	BACK PANEL	1	SD277S/B/W APH,SD277S/B/W CPH
E51		F803G8Q10BAP	POP-UP DIAL (U)	1	SD277S/B APH,SD277S/B CPH
E51		F803G8Q10HAP	POP-UP DIAL (U)	1	SD277W APH,SD277W CPH
E52		F80186Z20AP	BACKSTOP	1	SD277S/B/W APH,SD277S/B/W CPH
E53		F80346Z30BAP	ESCUTCHEON BASE	1	SD277B APH/CPH
E53		F80346Z30HAP	ESCUTCHEON BASE	1	SD277W APH/CPH
E55		F00078Q10SAP	NAME PLATE	1	SD277S APH
E55		F00078Q10SCP	NAME PLATE	1	SD277S CPH
E55		F00078Q10BAP	NAME PLATE	1	SD277B APH
E55		F00078Q10BCP	NAME PLATE	1	SD277B CPH
E55		F00078Q10HAP	NAME PLATE	1	SD277W APH
E55		F00078Q10HCP	NAME PLATE	1	SD277W CPH
E56		XTWFNE4+12P	SCREW	2	SD277S APH/CPH,SD277B APH/CPH
E56		XTWFNE4+12PW	SCREW	2	SD277W APH/CPH

6.4.4. NN-SA247S CPH, S255WFX CPH, S245WFX CPH

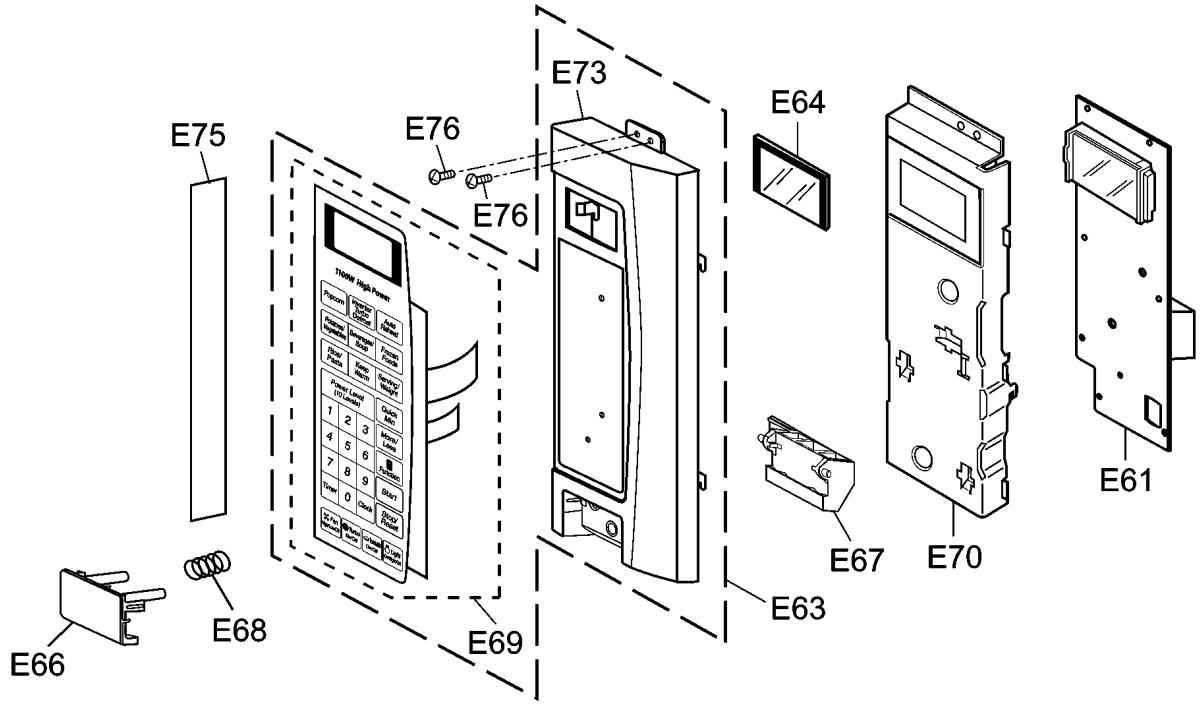

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
E61		F603L8Q60CP	D.P.CIRCUIT (AU)	1	S255WFX CPH
E61		F603L8Q90CP	D.P.CIRCUIT (AU)	1	SA247S CPH,S245WFX CPH
E63		F800L8Q90SCP	ESCUTCHEON BASE (U)	1	SA247S CPH
E64		F80025H00AP	ESCUTCHEON B	1	SA247S CPH,S245WFX CPH
E66		F80725H00SAP	DOOR OPENING BUTTON	1	SA247S CPH
E66		F80726Z30HAP	DOOR OPENING BUTTON	1	S255WFX CPH
E66		F80725H10HAP	DOOR OPENING BUTTON	1	S245WFX CPH
E67		F82566F00AP	DOOR OPENING LEVER	1	S255WFX CPH
E67		F82565H00AP	DOOR OPENING LEVER	1	SA247S CPH,S245WFX CPH
E68		F80375950AP	COOK BUTTON SPRING	1	
E69		F630Y8Q90SCP	MEMBRANE SWITCH (U)	1	SA247S CPH
E69		F630Y6Z60HCP	MEMBRANE SWITCH (U)	1	S255WFX CPH
E69		F630Y8Q90HCP	MEMBRANE SWITCH (U)	1	S245WFX CPH
E70		F81276Z60APG	BACK PLATE	1	S255WFX CPH
E70		F81275H00APG	BACK PLATE	1	SA247S CPH,S245WFX CPH
E73		F80346Z60HAP	ESCUTCHEON BASE	1	S255WFX CPH
E73		F80345H10HAP	ESCUTCHEON BASE	1	S245WFX CPH
E75		F00078Q90SCP	NAME PLATE	1	SA247S CPH
E75		F00078Q60HCP	NAME PLATE	1	S255WFX CPH
E75		F00078Q90HCP	NAME PLATE	1	S245WFX CPH
E76		XTWFNE4+12P	SCREW	2	SA247S CPH
E76		XTWFNE4+12PW	SCREW	2	S255WFX CPH,S245WFX CPH

6.5. PACKING AND ACCESSORIES

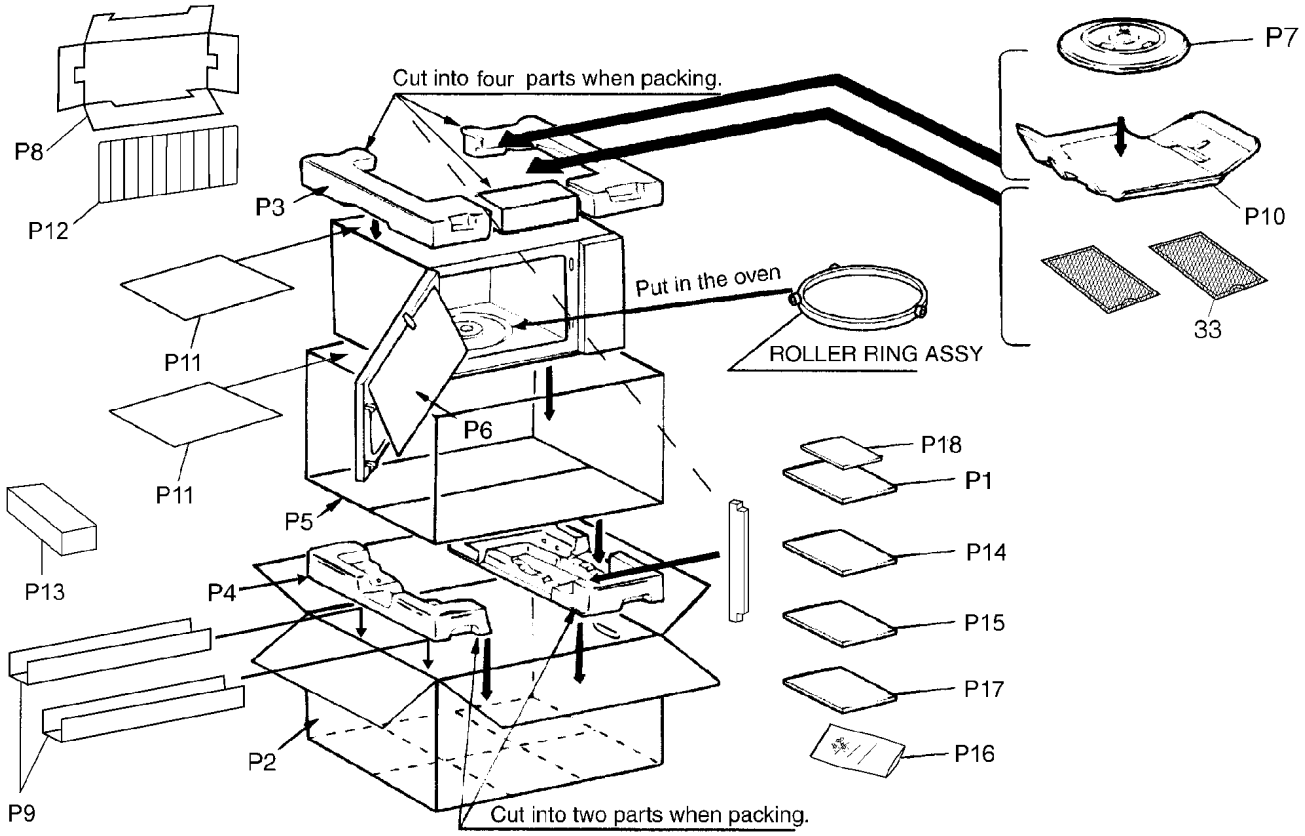

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
P1		F00038Q00AP	INSTRUCTION MANUAL	1	SD297S APH
P1		F00038Q00CP	INSTRUCTION MANUAL	1	SD297S CPH
P1		F00038Q10AP	INSTRUCTION MANUAL	1	SD277S/B/W APH
P1		F00038Q10CP	INSTRUCTION MANUAL	1	SD277S/B/W CPH
P1		F00038Q50CP	INSTRUCTION MANUAL	1	P295SFX CPH
P1		F00038Q60CP	INSTRUCTION MANUAL	1	S255WFX CPH
P1		F00038Q90CP	INSTRUCTION MANUAL	1	SA247S CPH,S245WFX CPH
P2		F01028Q00SAP	PACKING CASE ,PAPER	1	SD297S APH
P2		F01028Q00SCP	PACKING CASE ,PAPER	1	SD297S CPH
P2		F01028Q10SAP	PACKING CASE ,PAPER	1	SD277S APH
P2		F01028Q10SCP	PACKING CASE ,PAPER	1	SD277S CPH
P2		F01028Q10BAP	PACKING CASE ,PAPER	1	SD277B APH
P2		F01028Q10BCP	PACKING CASE ,PAPER	1	SD277B CPH
P2		F01028Q10HAP	PACKING CASE ,PAPER	1	SD277W APH
P2		F01028Q10HCP	PACKING CASE ,PAPER	1	SD277W CPH
P2		F01028Q50HCP	PACKING CASE ,PAPER	1	P295WFX CPH
P2		F01028Q60HCP	PACKING CASE ,PAPER	1	S255WFX CPH
P2		F01028Q90SCP	PACKING CASE ,PAPER	1	SA247S CPH
P2		F01028Q90HCP	PACKING CASE ,PAPER	1	S245WFX CPH
P3		F01045H00AP	UPPER FILLER	1	SD297S APH/CPH,P295WFX CPH, SA247S CPH,S245WFX CPH
P3		F01046Z20AP	UPPER FILLER	1	SD277S/B/W APH,SD277S/B/W CPH,S255WFX CPH
P4		F01055H00AP	LOWER FILLER	1	SD297S APH/CPH,P295WFX CPH, SA247S CPH,S245WFX CPH
P4		F01056Z20AP	LOWER FILLER	1	SD277S/B/W APH,SD277S/B/W CPH,S255WFX CPH
P5		F01066Z20AP	P.E.BAG	1	
P6		F01075H00AP	DOOR SHEET	1	
P7		A06015H00AP	COOKING TRAY	1	
P8		F01175H00AP	TRAY PACKING B	1	EXCEPT SA247S CPH & S245WFX CPH
P9		F01485H00AP	REINFORCE BRACKET	2	
P10		F01085H00AP	TRAY PACKING	1	
P11		F01925H00AP	SHEET	2	
P12		F06025H00AP	OVEN RACK	1	
P13		F02185H00AP	PROTECTOR PACKING	1	
P14		F03138Q00AP	INSTALLATION INSTRUCTION	1	APH

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
P14		F03138Q00CP	INSTALLATION INSTRUCTION	1	CPH
P15		F04318Q00AP	UPPER-CABINET TEMPLATE	1	APH
P15		F04318Q00CP	UPPER-CABINET TEMPLATE	1	CPH
P16		F011F6Z00AP	ATTACHMENT	1	
P17		F04845V10AP	FILTER PURCHASE NOTICE	1	APH
P18		F04458Q00SCP	OVERLAY	1	SD297S CPH
P18		F04458Q10SCP	OVERLAY	1	SD277S CPH
P18		F04458Q10BCP	OVERLAY	1	SD277B CPH
P18		F04458Q10HCP	OVERLAY	1	SD277W CPH
P18		F04456Z00HCP	OVERLAY	1	P295WFX CPH
P18		F04456F20BCP	OVERLAY	1	SA247S CPH
P18		F04456Z60HCP	OVERLAY	1	S255WFX CPH
P18		F04456F20HCP	OVERLAY	1	S245WFX CPH
P19		F011G6Z00AP	ATTACHMENT B	1	
33		F400B6Z00AP	FILTER (U)	2	

6.6. WIRING MATERIALS

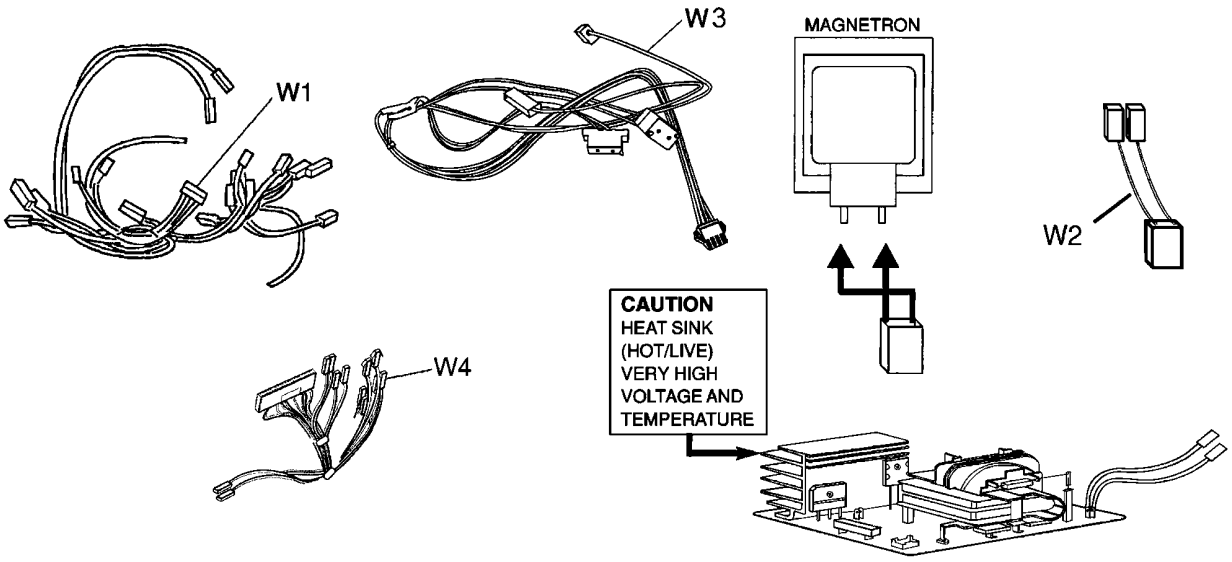

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
W1		F030A6Z00AP	LEAD WIRE HARNESS	1	SD297S APH
W1		F030A6Z00CP	LEAD WIRE HARNESS	1	SD297S CPH,P295WFX CPH
W1		F030A6Z20AP	LEAD WIRE HARNESS	1	SD277S/B/W APH
W1		F030A6Z20CP	LEAD WIRE HARNESS	1	SD277S/B/W CPH
W1		F030A6Z60CP	LEAD WIRE HARNESS	1	S255WFX CPH
W1		F030A6Y90CP	LEAD WIRE HARNESS	1	SA247S CPH,S245WFX CPH
W2		F030E5H00AP	H.V.LEAD WIRE	1	APH
W2		F030E5H00CP	H.V.LEAD WIRE	1	CPH
W3		F03536F00AP	LEAD WIRE HARNESS U	1	(INCLUDING CABEL CONNECTOR CN4)
W4		F03556Z00AP	LEAD WIRE HARNESS	1	SD297S APH/CPH,P295WFX CPH (INCLUDING SOCKET)
W4		F03556Z20AP	LEAD WIRE HARNESS	1	EXCEPT SD297S APH/CPH,P295WFX CPH

7 DIGITAL PROGRAMMER CIRCUIT

7.1. NN-SD297S APH/CPH

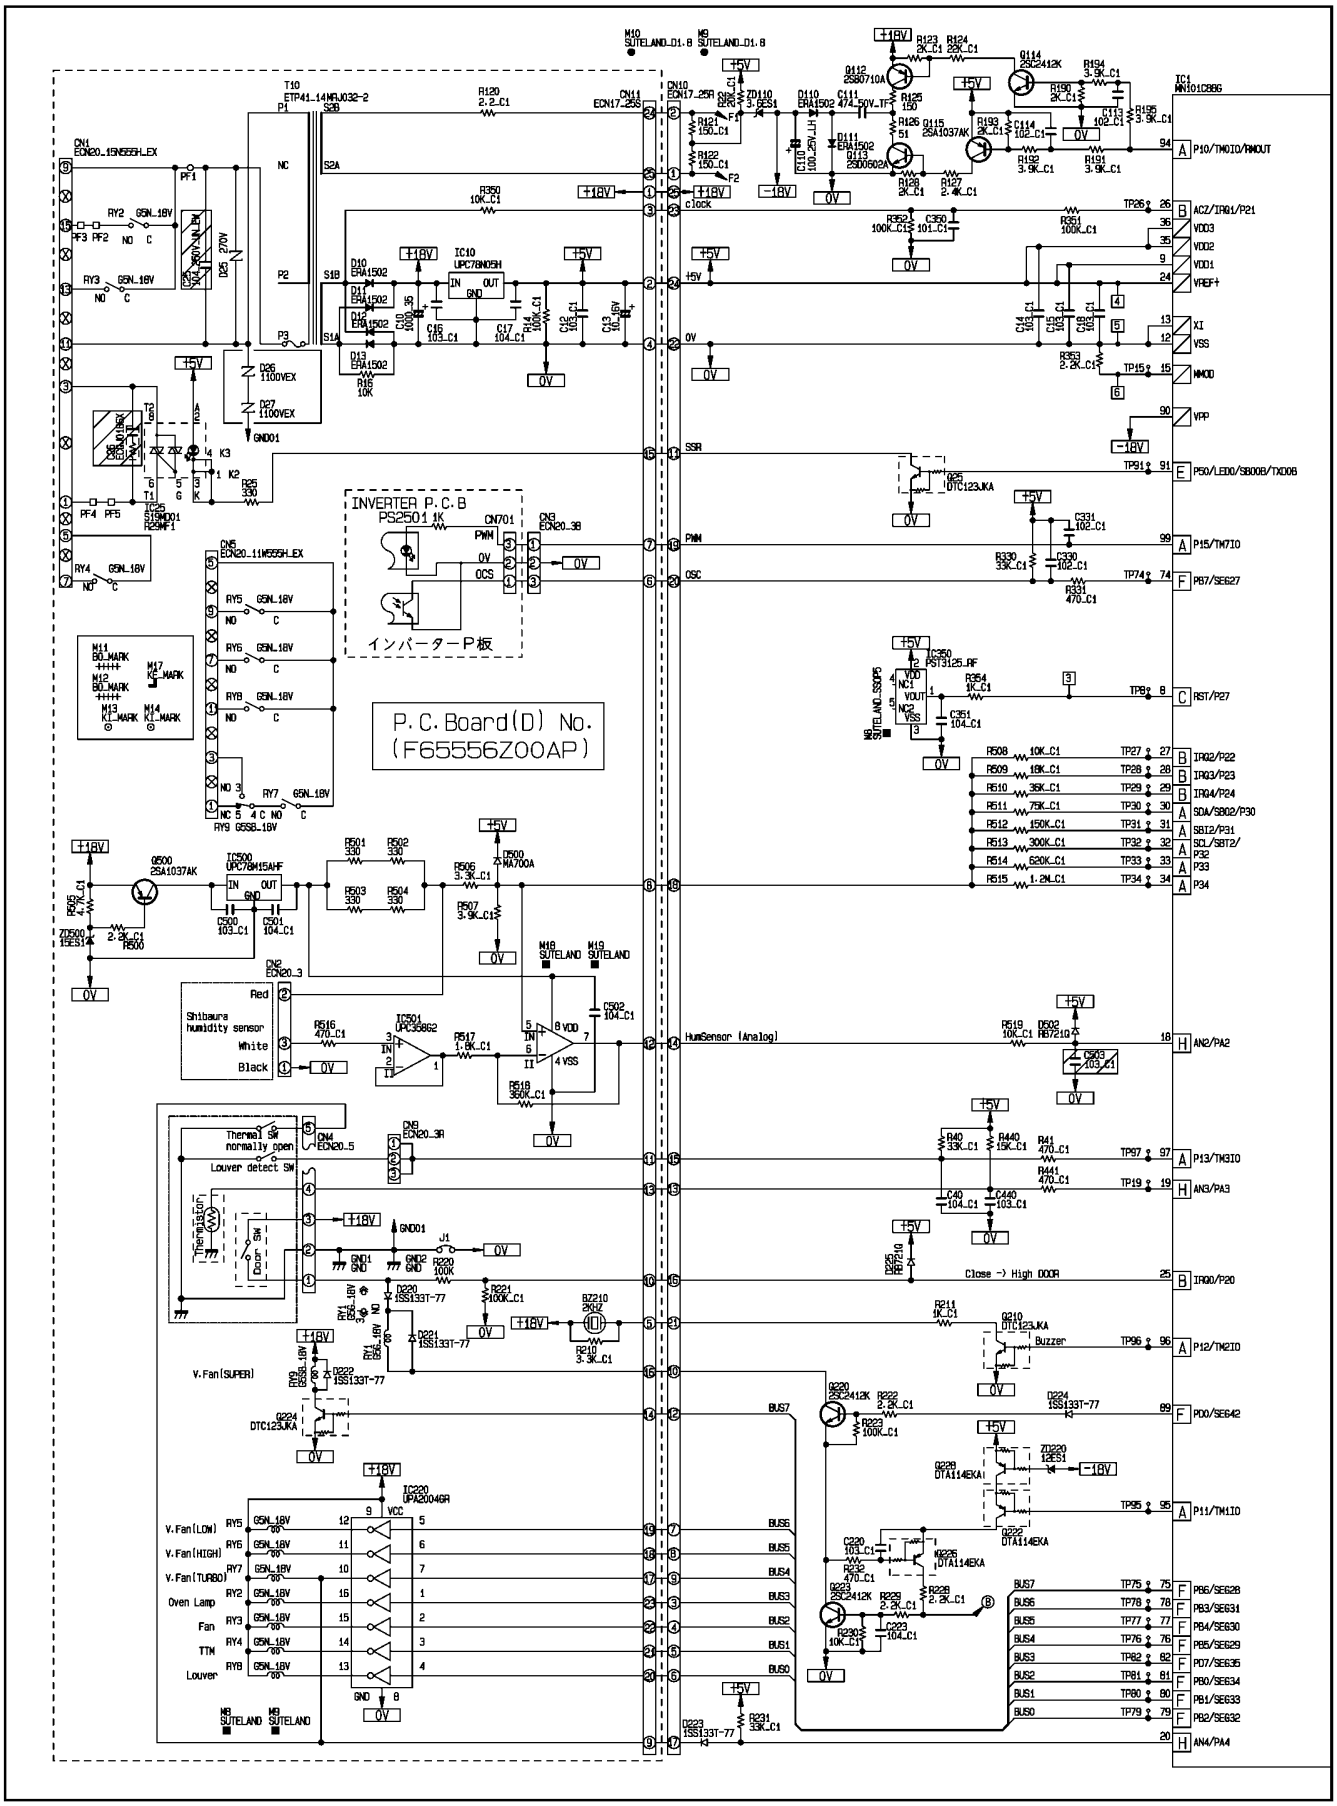

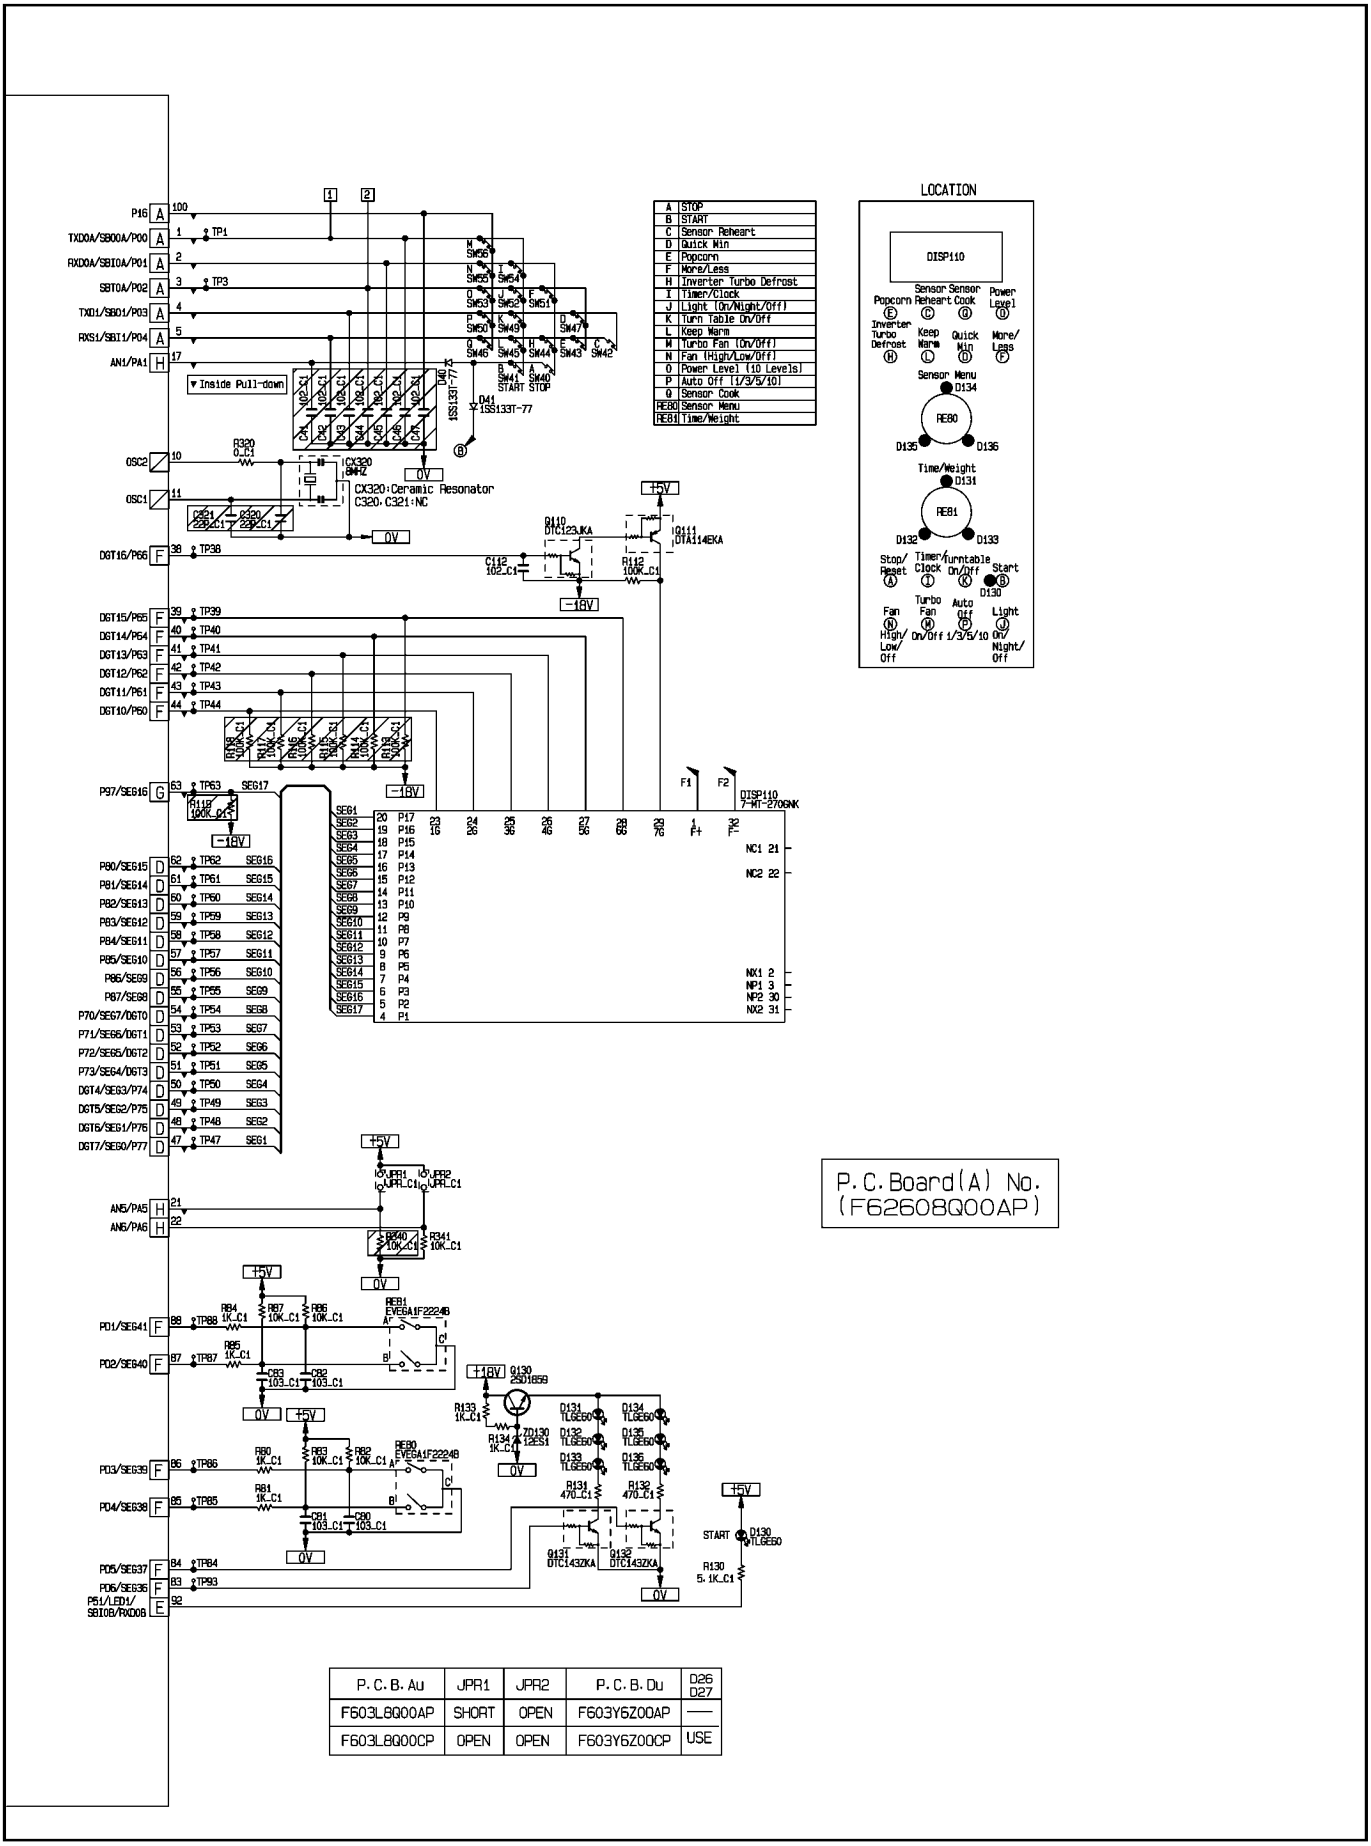

P.C.B.Au	JPR1	JPR2	P.C.B.Du	D26 D27
F603L8Q00AP	SHORT	OPEN	F603Y6Z00AP	——
F603L8Q00CP	OPEN	OPEN	F603Y6Z00CP	USE

7.2. NN-P295WFX CPH

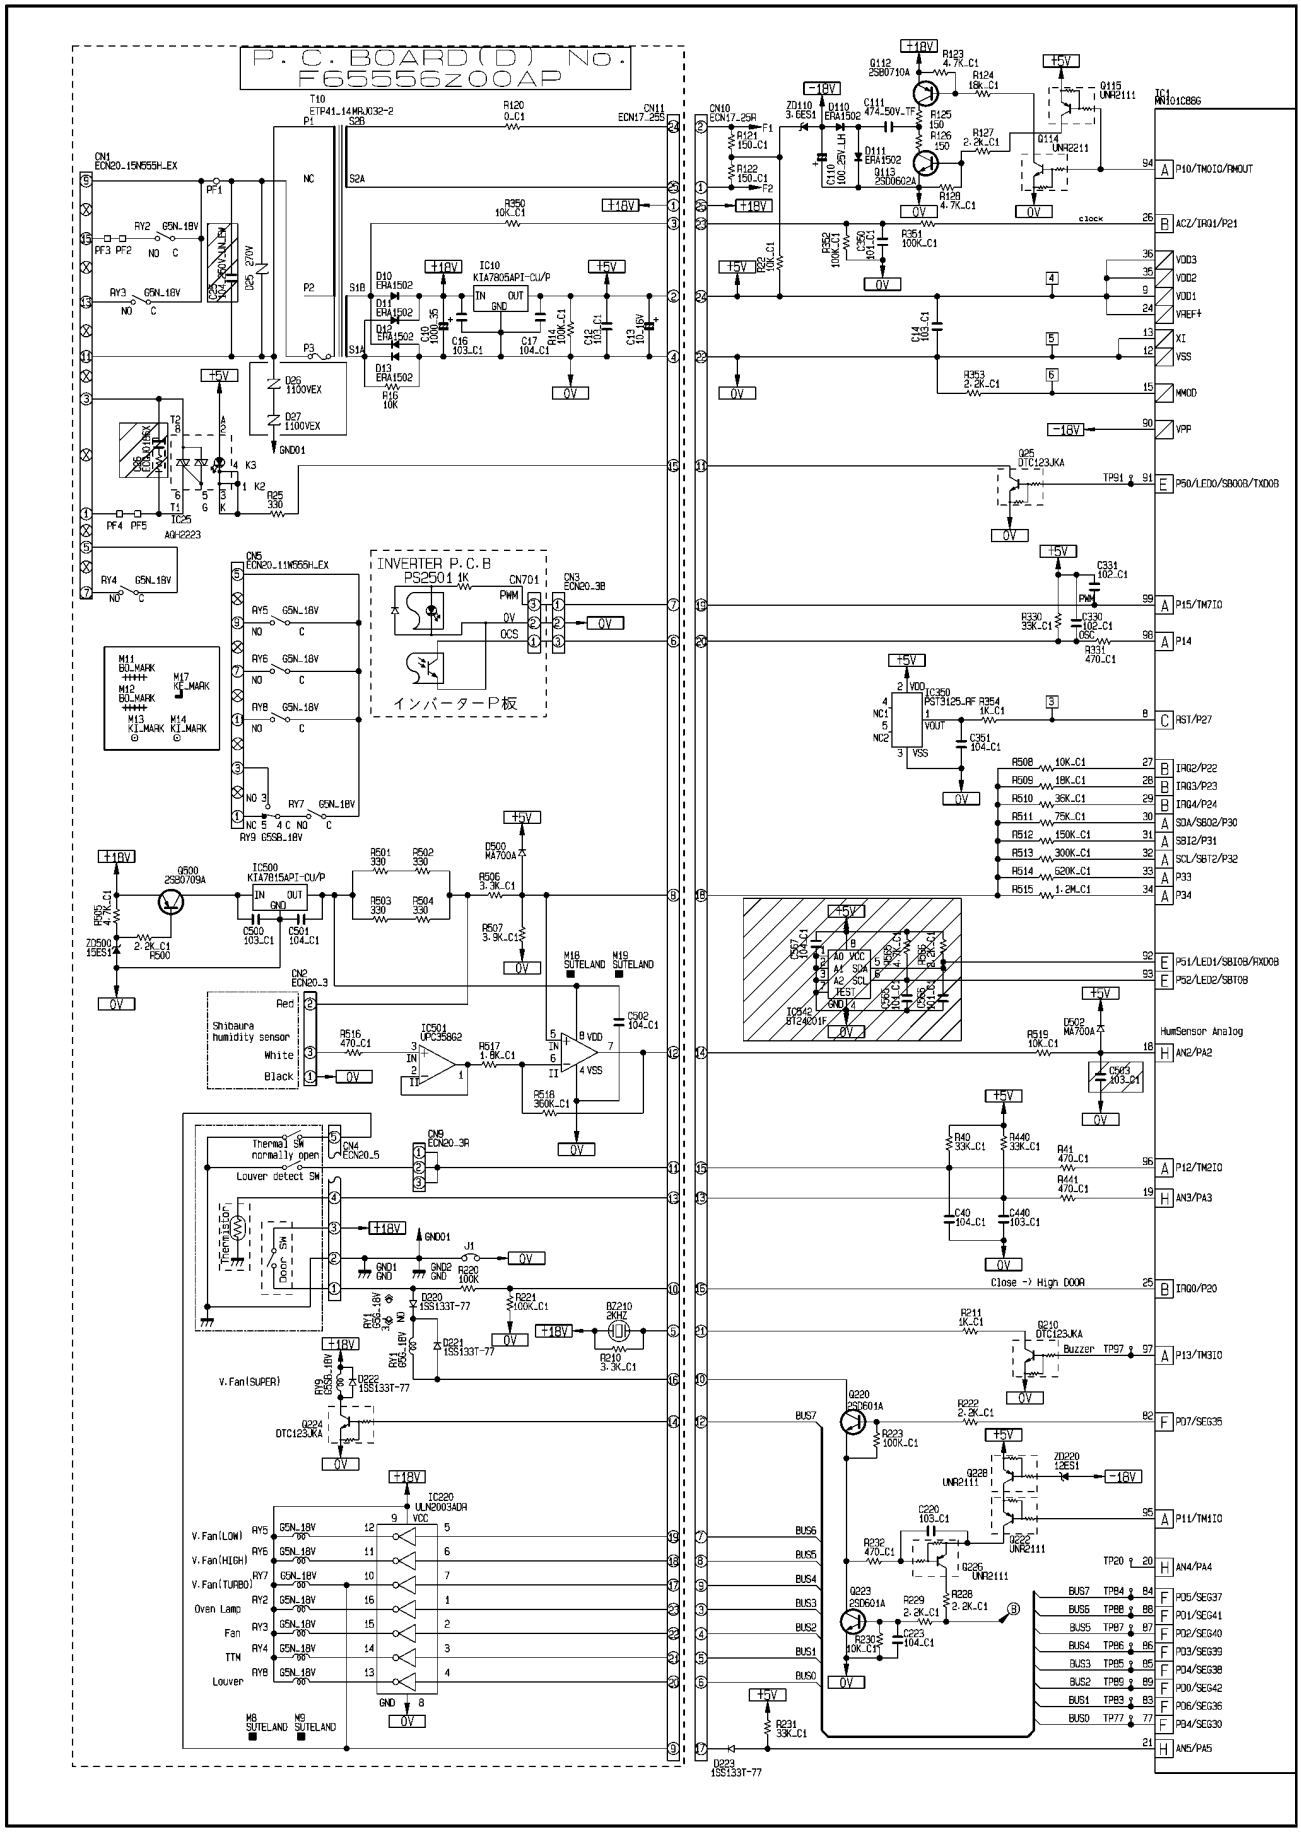

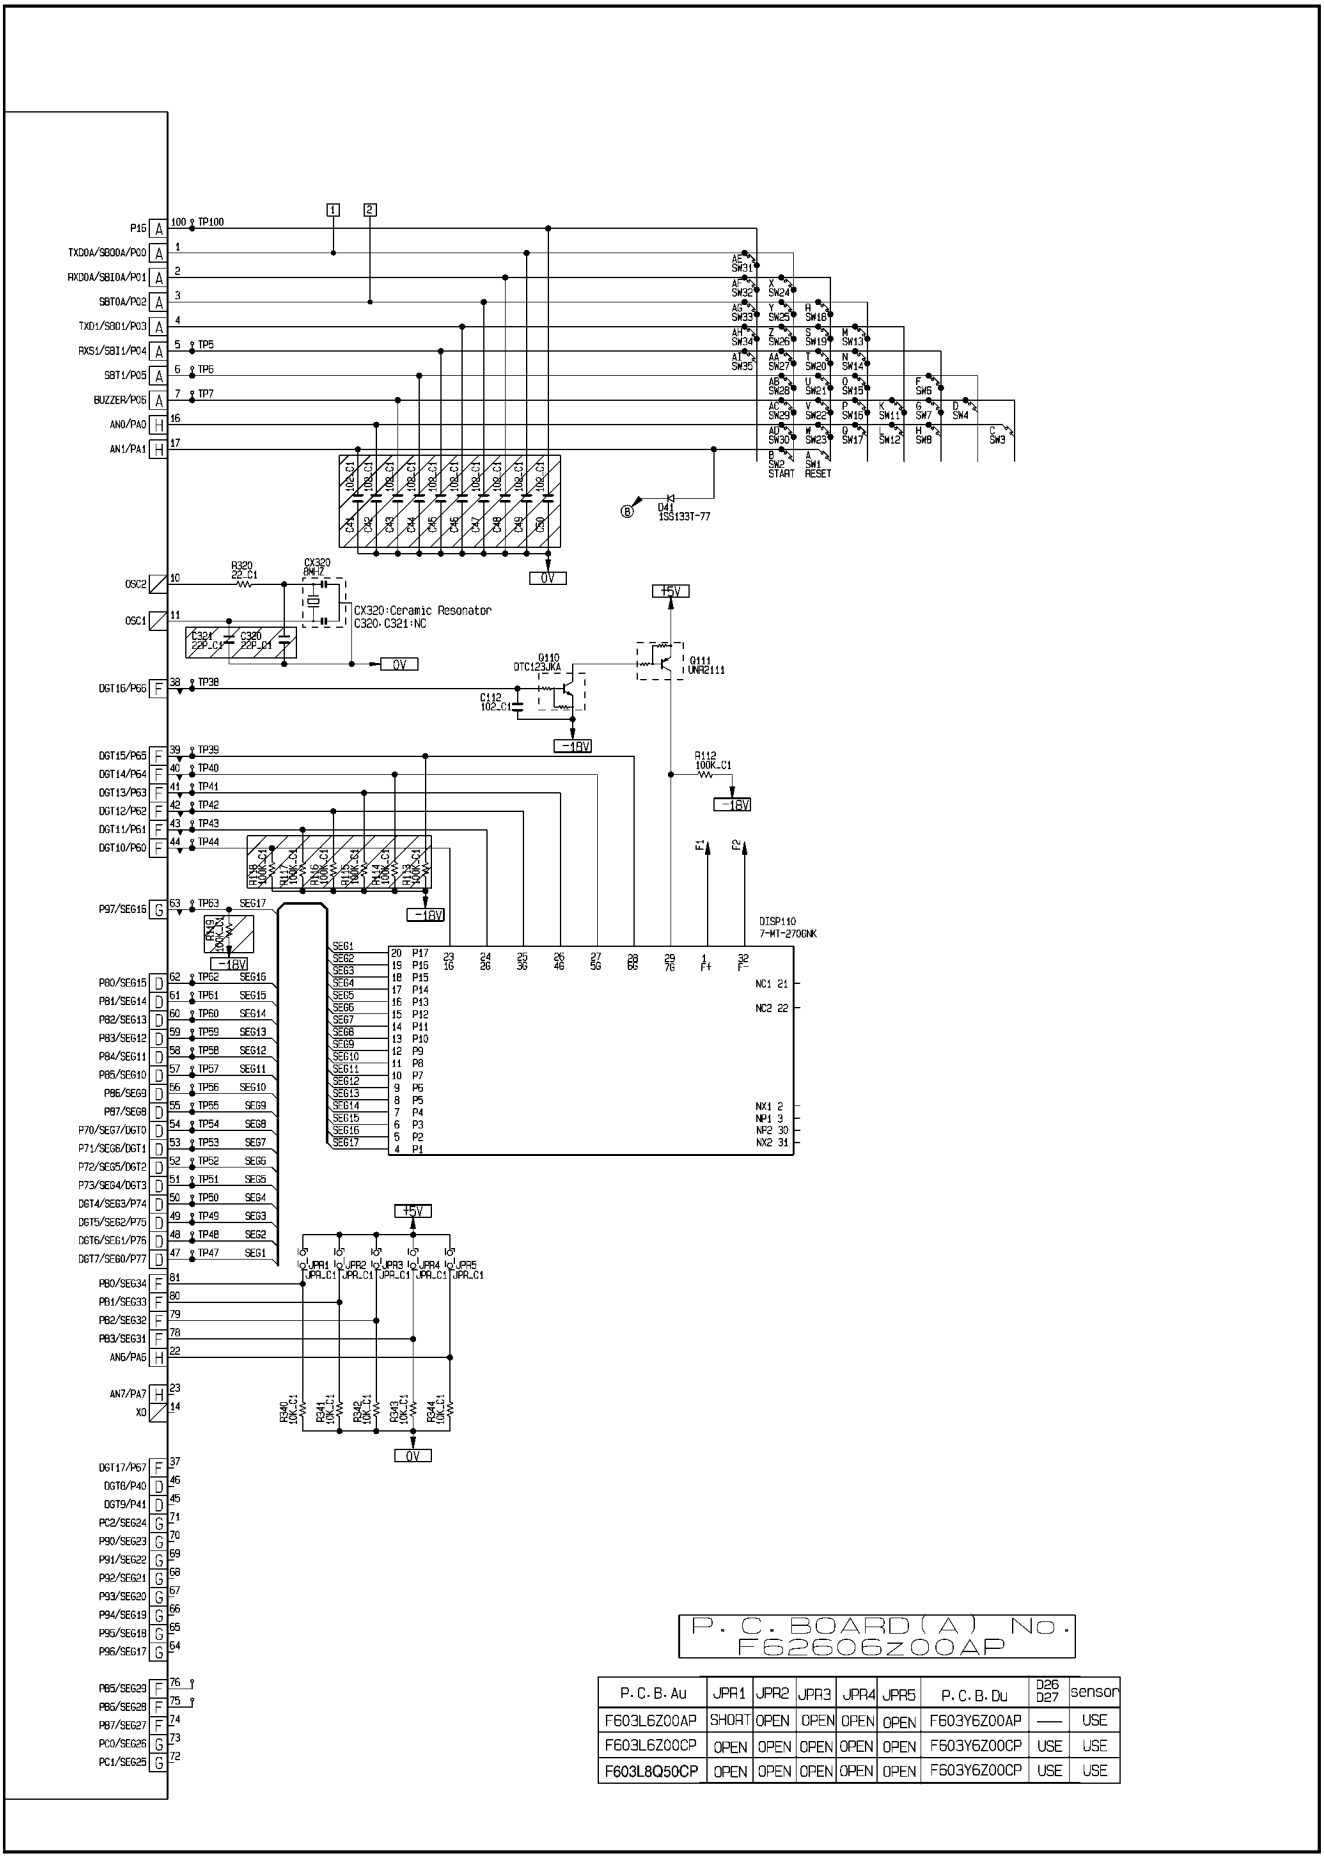

P. C. BOARD (A) No.
F626062Z00AP

P. C. B. Au	JPR1	JPR2	JPR3	JPR4	JPR5	P. C. B. Du	D26 D27	sensor
F603L6Z00AP	SHORT	OPEN	OPEN	OPEN	OPEN	F603Y6Z00AP	——	USE
F603L6Z00CP	OPEN	OPEN	OPEN	OPEN	OPEN	F603Y6Z00CP	USE	USE
F603L8Q50CP	OPEN	OPEN	OPEN	OPEN	OPEN	F603Y6Z00CP	USE	USE

7.3. NN-SD277 APH/CPH, NN-S255WFX CPH

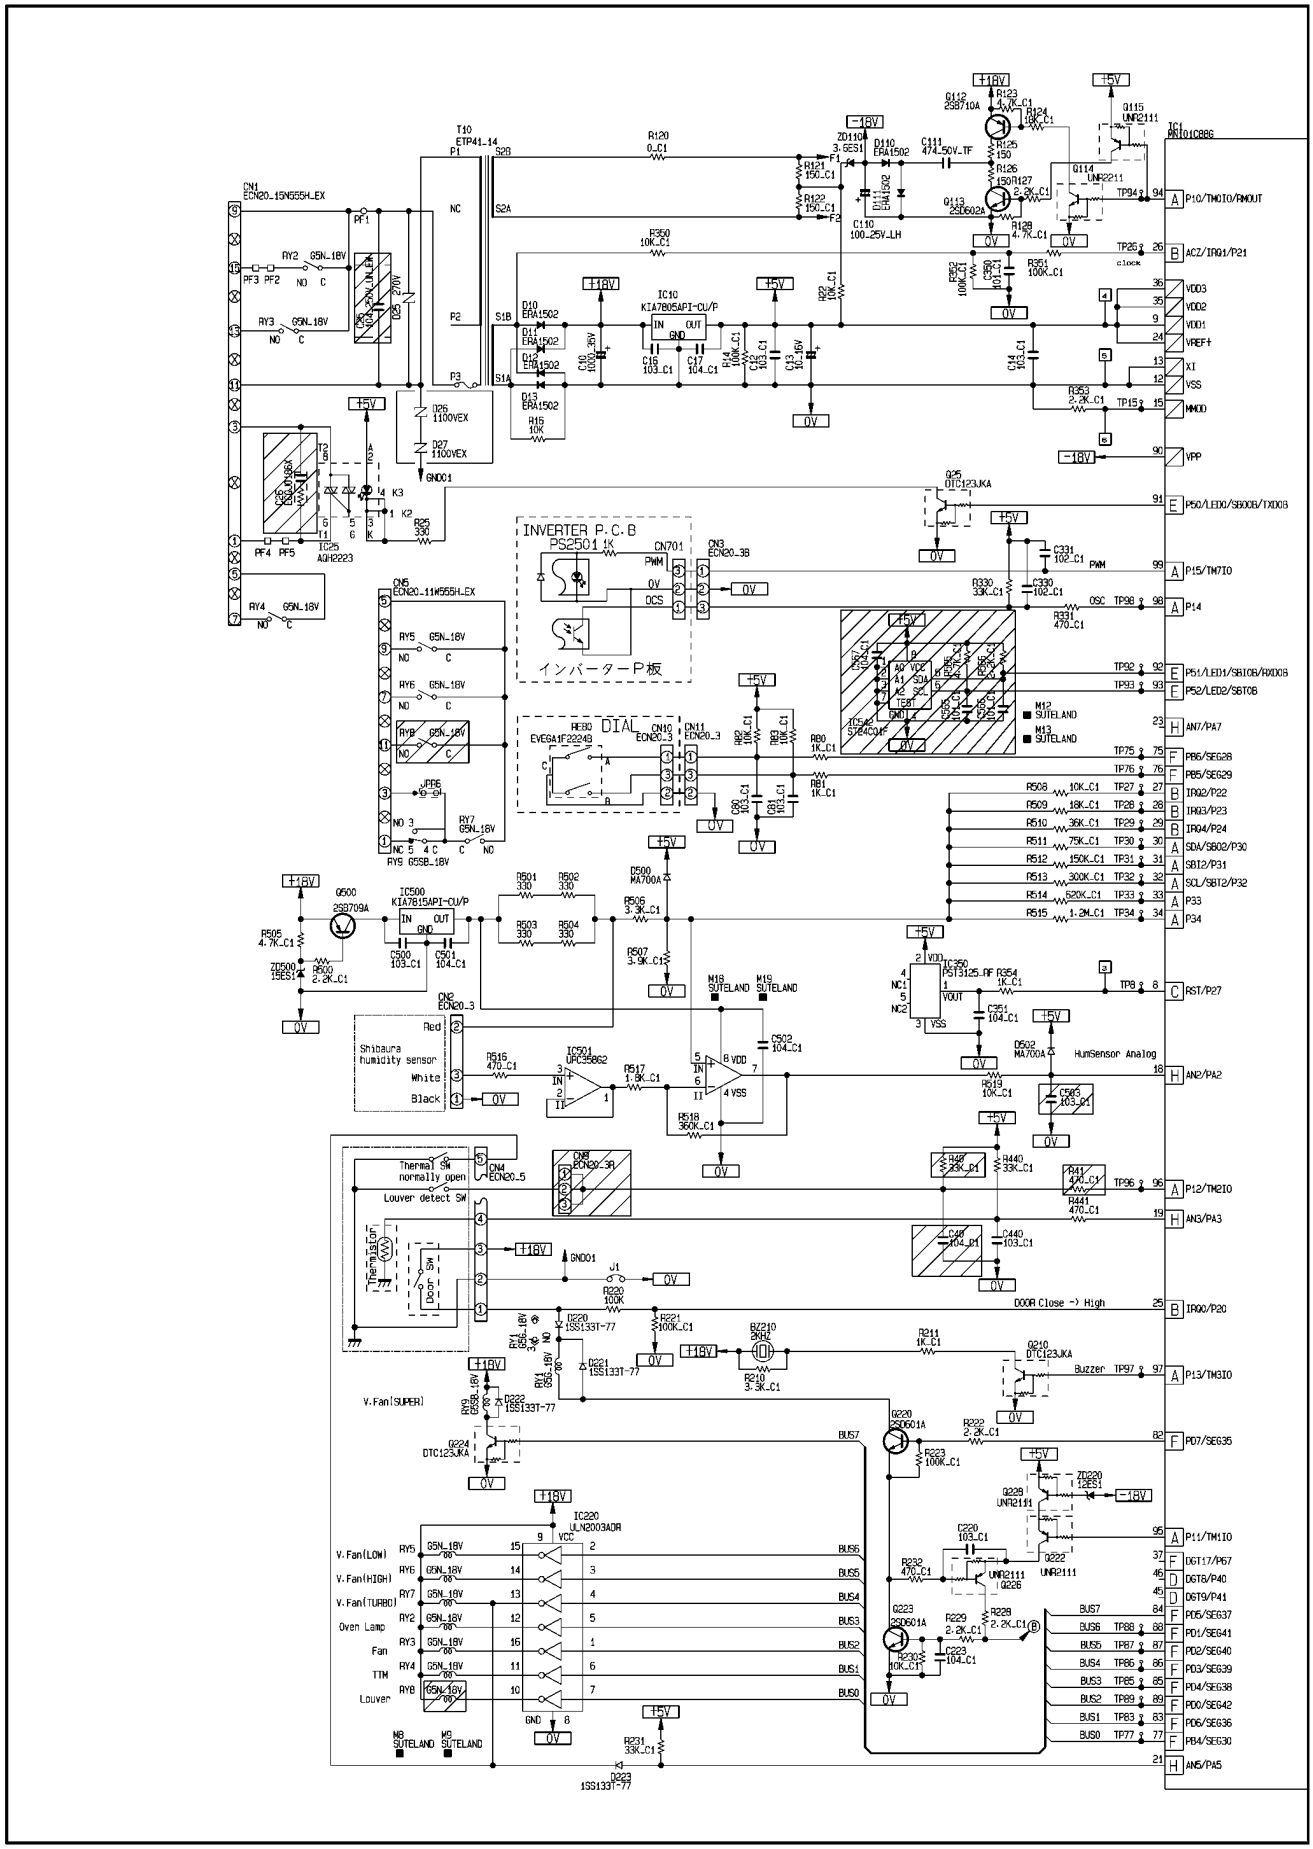

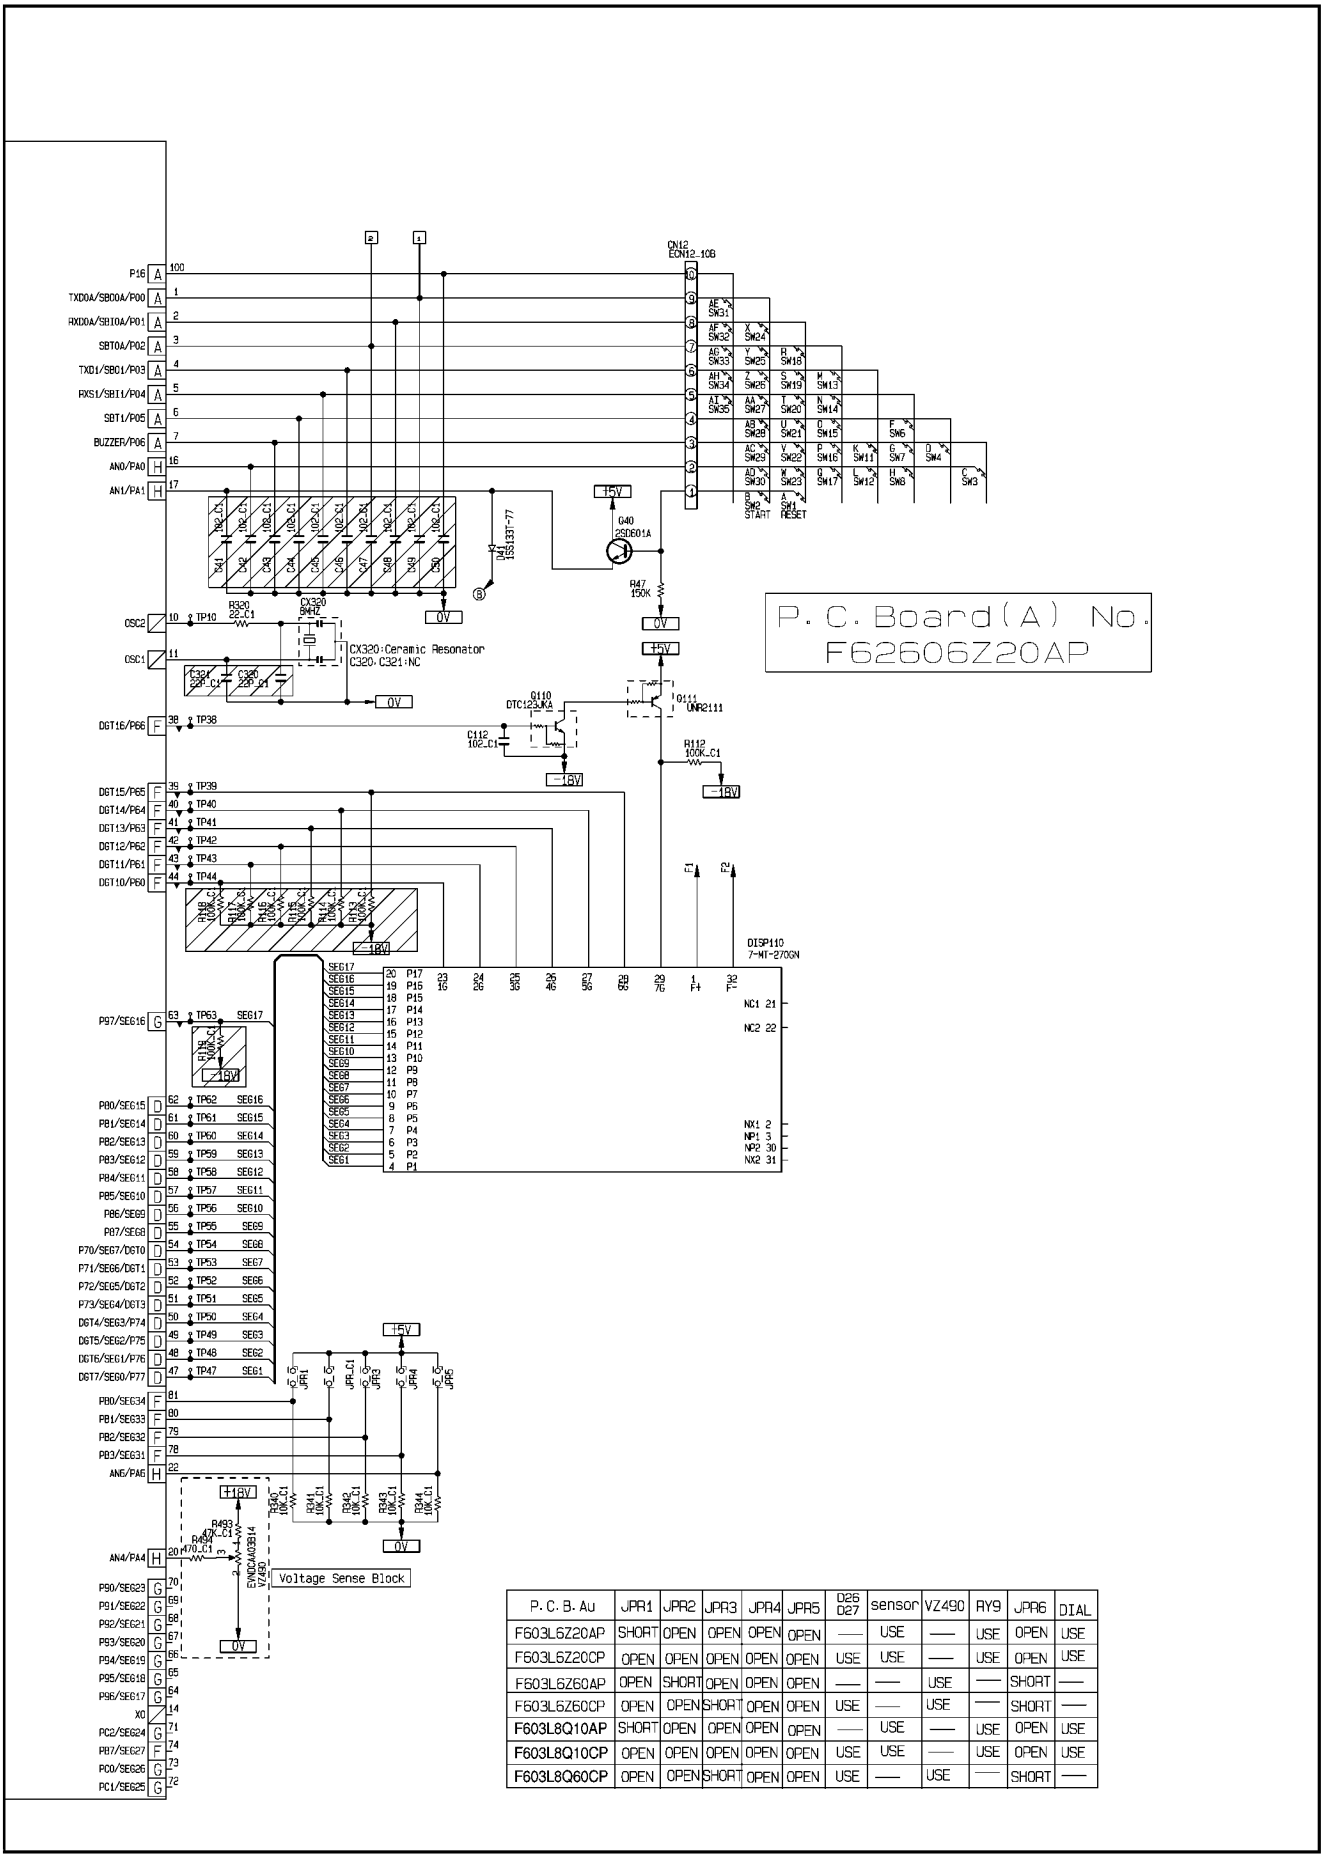

P. C. B. Au	JPR1	JPR2	JPR3	JPR4	JPR5	D26 D27	sensor	VZ490	AY9	JPR6	DIAL
F603L6Z20AP	SHORT	OPEN	OPEN	OPEN	OPEN	—	USE	—	USE	OPEN	USE
F603L6Z20CP	OPEN	OPEN	OPEN	OPEN	OPEN	USE	USE	—	USE	OPEN	USE
F603L6Z60AP	OPEN	SHORT	OPEN	OPEN	OPEN	—	—	USE	—	SHORT	—
F603L6Z60CP	OPEN	OPEN	SHORT	OPEN	OPEN	USE	—	USE	—	SHORT	—
F603L8Q10AP	SHORT	OPEN	OPEN	OPEN	OPEN	—	USE	—	USE	OPEN	USE
F603L8Q10CP	OPEN	OPEN	OPEN	OPEN	OPEN	USE	USE	—	USE	OPEN	USE
F603L8Q60CP	OPEN	OPEN	SHORT	OPEN	OPEN	USE	—	USE	—	SHORT	—

7.4. NN-SA247S CPH, S245WFX CPH

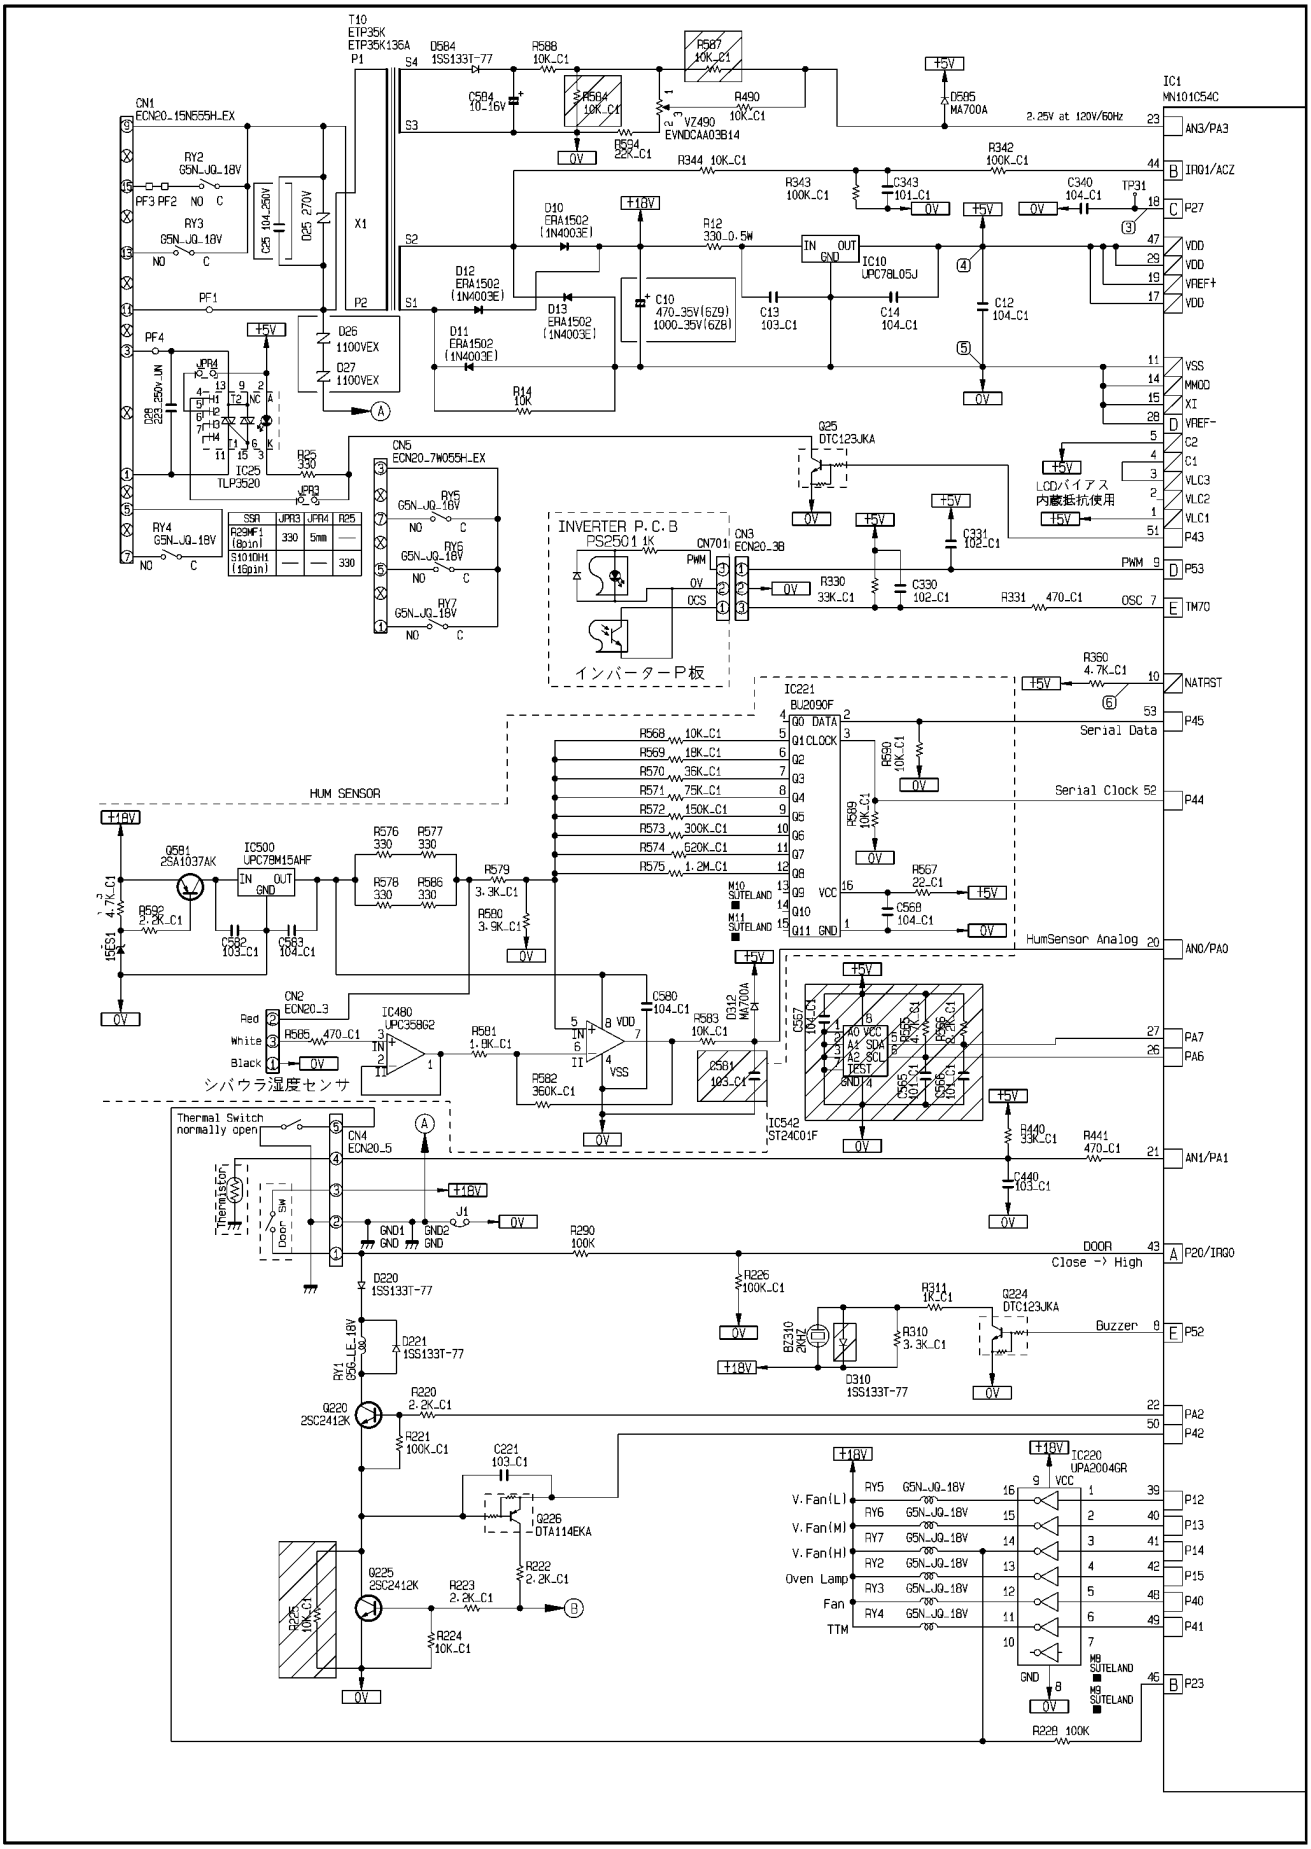

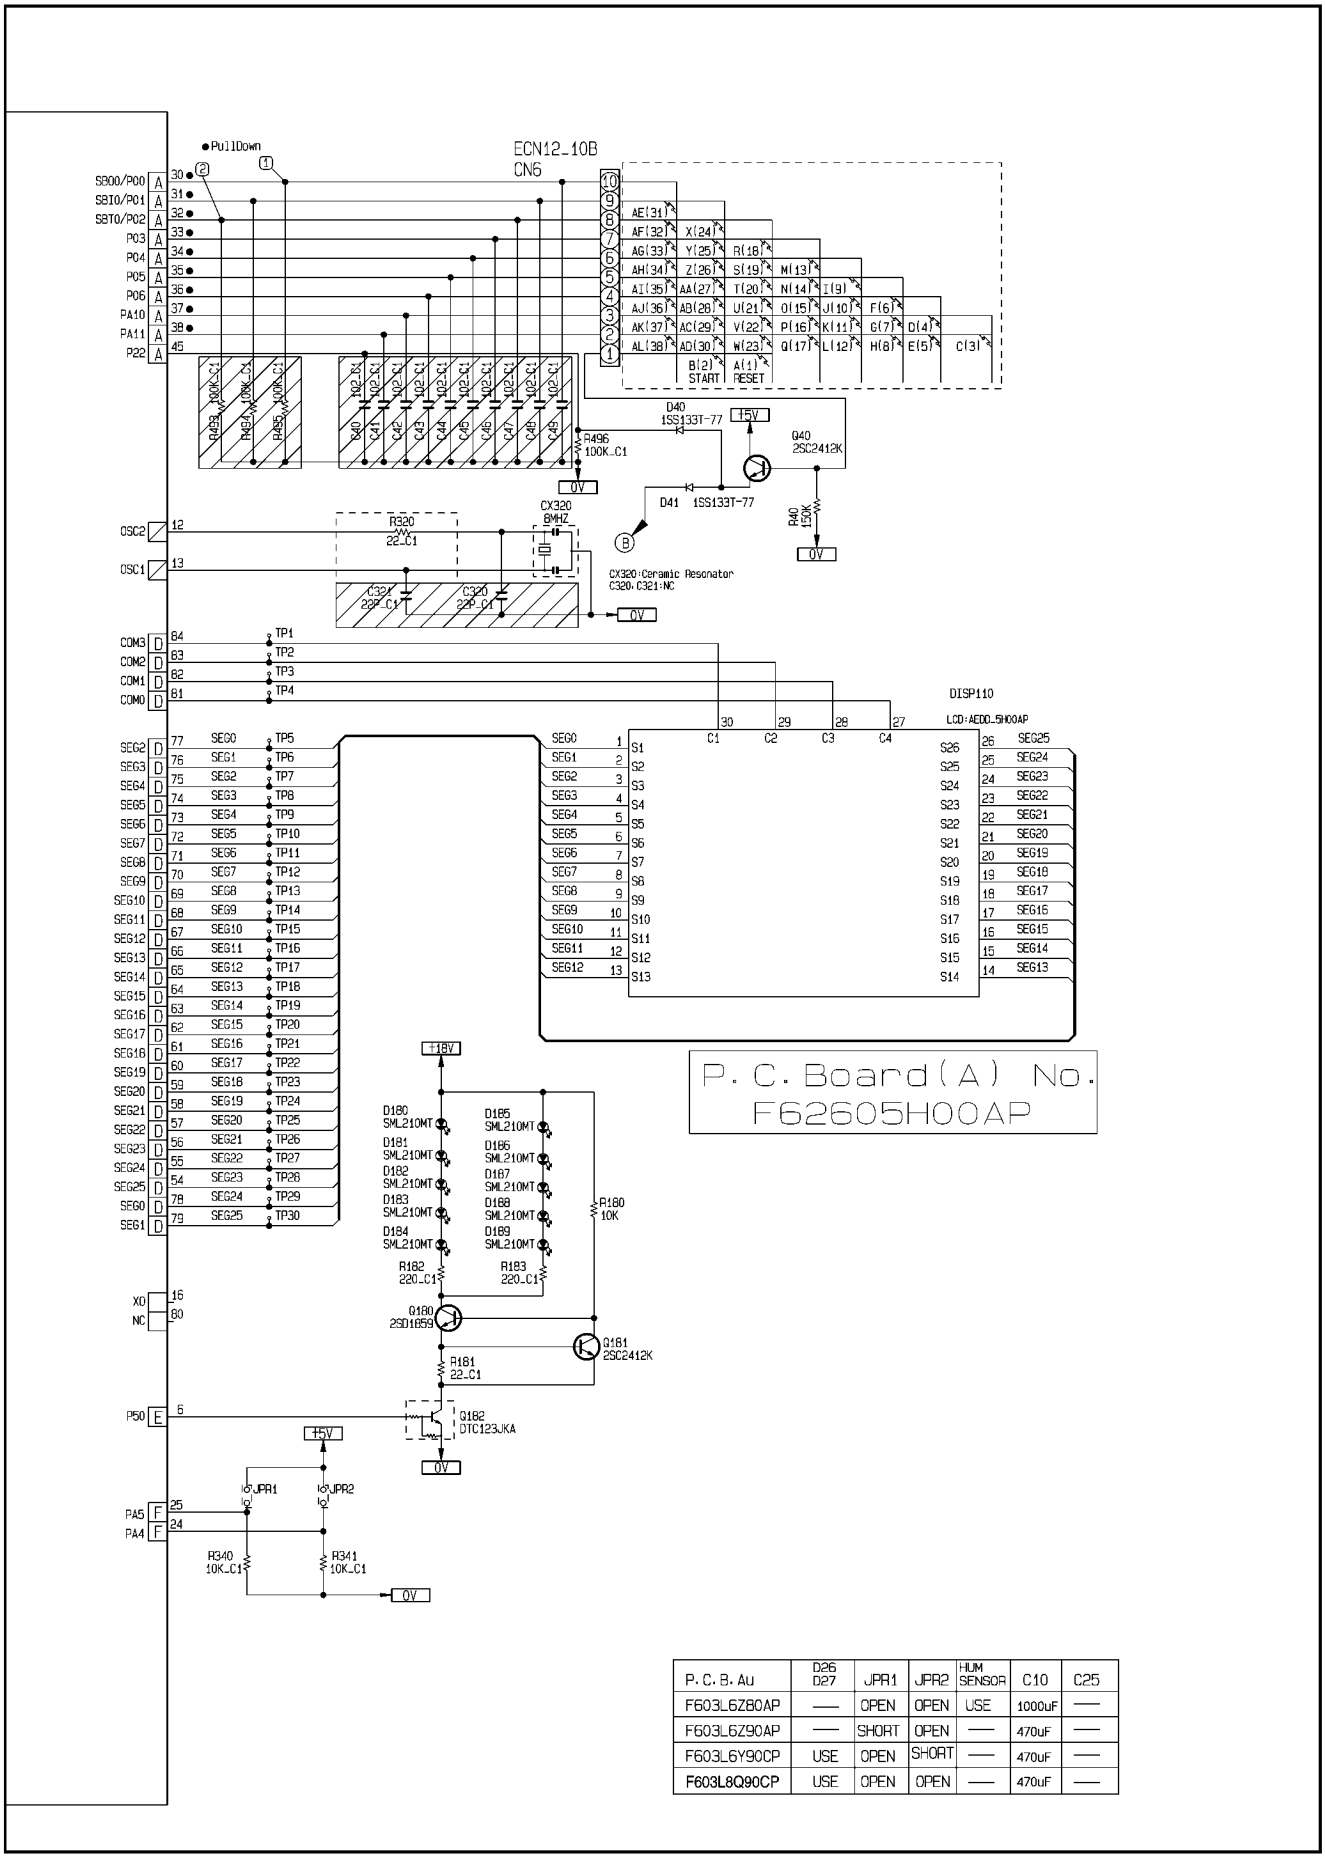

P. C. B. Au	D26 D27	JPR1	JPR2	HUM SENSOR	C10	C25
F603L6Z80AP	——	OPEN	OPEN	USE	1000uF	——
F603L6Z90AP	——	SHORT	OPEN	——	470uF	——
F603L6Y90CP	USE	OPEN	SHORT	——	470uF	——
F603L8Q90CP	USE	OPEN	OPEN	——	470uF	——

7.5. PARTS LIST

7.5.1. NN-SD297S APH/CPH

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
BZ210		L0DDEA000014	BUZZER	1	2.0KHz
C110		ECEA1EKS101I	AL CHEM CAPACITOR	1	100µF/25V
C111		ECQV1H474JL2	CAPACITOR	1	0.47µF/50V
C10		AECETK1V102B	AL CHEM CAPACITOR	1	1000µF/35V
C13		AECETS1C220B	AL CHEM CAPACITOR	1	22µF/16V
CX320		EFOEC8004A4	CERAMIC RESONATOR	1	8.0MHz
DISP		A2BB00000150	VACUUM FLUORESCENCE DISPLAY	1	
DISP HOLDER		F66176Z00AP	LCD HOLDER	1	
		F64578P00AP	DIFFUSION SHEET	1	
D40,D41,D220-D222		MA2C19600E	DIODE	5	
D10-D13,D110,D111		B0EAKT000025	DIODE	6	
D224,D500,D502		MA2C700A0F	DIODE	3	
D130-D133		AE3294UBCA7	LED	4	
IC1		MN101C88ADA	L.S.I.	1	
IC10		C0CAADG00060	IC	1	
IC25		B3PAC0000060	IC	1	
IC220		B1HBGFF00007	IC	1	
IC350		C0EBH0000264	IC	1	
IC501		C0ABBA000230	IC	1	
IC550		C0CAALG00023	IC	1	
Q130		B1BAAJ000003	TRANSISTOR	1	
D25		D4EAY271A036	ZENER RESISTOR	1	270V
D26,D27		D4EAY112A036	ZENER RESISTOR	2	1100V (CPH)
RY1		K6B1AZA00005	POWER RELAY	1	18V
RY2-RY8		K6B1AZA00011	POWER RELAY	7	
RY9		K6B1CZA00004	POWER RELAY	1	
T10		G4C4AAD00006	LOW VOLTAGE TRANSFORMER	1	120V
RE80,RE81		EVEJ1HF2224B	REVOLVING ENCODER	2	
SW40-SW47,SW49-SW56		EVQ11L05R	SWITCH	16	
ZD110		B0BA3R500006	ZENER DIODE	1	
ZD130,ZD220		B0BA01100004	ZENER DIODE	2	
ZD500		B0BA01400009	ZENER DIODE	1	

7.5.2. NN-P295WFX CPH

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
BZ210		L0DDEA000014	BUZZER	1	2.0KHz
C110		ECEA1EKS101I	AL CHEM CAPACITOR	1	100µF/25V
C111		ECQV1H474JL2	CAPACITOR	1	0.47µF/50V
C10		AECETK1V102B	AL CHEM CAPACITOR	1	1000µF/35V
C13		AECETS1C220B	AL CHEM CAPACITOR	1	22µF/16V
CX320		EFOEC8004A4	CERAMIC RESONATOR	1	8.0MHz
DISP		A2BB00000150	VACUUM FLUORESCENCE DISPLAY	1	
DISP HOLDER		F66176Z00AP	LCD HOLDER	1	
D41,D220-D223		MA2C19600E	DIODE	5	
D10-D13,D110,D111		B0EAKT000025	DIODE	6	
D224,D500,D502		MA2C700A0F	DIODE	3	
IC1		MN101C88ADF	L.S.I.	1	
IC10		C0CAADG00060	IC	1	
IC25		B3PAC0000060	IC	1	
IC220		B1HBGFF00007	IC	1	
IC350		C0EBH0000264	IC	1	
IC501		C0ABBA000230	IC	1	
IC550		C0CAALG00023	IC	1	
D25		D4EAY271A036	ZENER RESISTOR	1	270V
D26,D27		D4EAY112A036	ZENER RESISTOR	2	1100V (CPH)
RY1		K6B1AZA00005	POWER RELAY	1	18V
RY2-RY8		K6B1AZA00011	POWER RELAY	7	
RY9		K6B1CZA00004	POWER RELAY	1	
T10		G4C4AAD00006	LOW VOLTAGE TRANSFORMER	1	120V
SW1-SW4,SW6-SW8,SW11-SW35		EVQ11L05R	SWITCH	32	
ZD110		B0BA3R500006	ZENER DIODE	1	
ZD220		B0BA01100004	ZENER DIODE	1	
ZD500		B0BA01400009	ZENER DIODE	1	

7.5.3. NN-SD277* APH/CPH,S255WFX CPH

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
BZ210		L0DDEA000014	BUZZER	1	2.0KHz
C110		ECEA1EKS101I	AL CHEM CAPACITOR	1	100µF/25V
C111		ECQV1H474JL2	CAPACITOR	1	0.47µF/50V
C10		AECETK1V102B	AL CHEM CAPACITOR	1	1000µF/35V
C13		AECETS1C220B	AL CHEM CAPACITOR	1	22µF/16V
CX320		EFOEC8004A4	CERAMIC RESONATOR	1	8.0MHz
DISP		A2BB00000150	VACUUM FLUORESCENCE DISPLAY	1	
DISP HOLDER		F66176Z00AP	LCD HOLDER	1	
D41,D220-D223		MA2C19600E	DIODE	5	
D10-D13,D110,D111		B0EAKT000025	DIODE	6	
D224		MA2C700A0F	DIODE	1	
D500,D502		MA2C700A0F	DIODE	2	SD277* APH/CPH
IC1		MN101C88ADE	L.S.I.	1	SD277* APH/CPH
IC1		MN101C88ADF	L.S.I.	1	S255WFX CPH
IC10		C0CAADG00060	IC	1	
IC25		B3PAC0000060	IC	1	
IC220		B1HBGFF00007	IC	1	
IC350		C0EBH0000264	IC	1	
IC501		C0ABBA000230	IC	1	SD277* APH/CPH
IC550		C0CAALG00023	IC	1	SD277* APH/CPH
D25		D4EAY271A036	ZENER RESISTOR	1	270V
D26,D27		D4EAY112A036	ZENER RESISTOR	2	1100V (CPH)
RY1		K6B1AZA00005	POWER RELAY	1	18V
RY2-RY7		K6B1AZA00011	POWER RELAY	6	
RY9		K6B1CZA00004	POWER RELAY	1	SD277* APH/CPH
T10		G4C4AAD00006	LOW VOLTAGE TRANSFORMER	1	120V
RE80		EVEJ1HF2224B	REVOLVING ENCODER	1	SD277* APH/CPH
VZ490		D3BB6103A006	VARISTOR	1	S255WFX CPH
ZD110		B0BA3R500006	ZENER DIODE	1	
ZD220		B0BA01100004	ZENER DIODE	1	
ZD500		B0BA01400009	ZENER DIODE	1	SD277* APH/CPH

7.5.4. NN-SA247S CPH,S245WFX CPH

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
BZ210		L0DDEA000014	BUZZER	1	2.0KHz
C584		AECETS1C100B	AL CHEM CAPACITOR	1	10µF/16V
C10		AECETK1V471B	AL CHEM CAPACITOR	1	470µF/35V
CX320		EFOEC8004A4	CERAMIC RESONATOR	1	8.0MHz
DISP110		L5AAAFD00025	VACUUM FLUORESCENCE DISPLAY	1	
DISP HOLDER		F66175E40AP	LCD HOLDER	1	
		F67525E40XN	DIFFUSION SHEET	1	
D40,D41,D220,D221,D584		MA2C19600E	DIODE	5	
D10-D13		B0EAKT000025	DIODE	4	
D585		MA2C700A0F	DIODE	1	
IC1		MN101C54CHP	L.S.I.	1	
IC10		C0CAADG00060	IC	1	
IC25		B3PAC0000060	IC	1	
IC220		B1HBGFF00007	IC	1	
Q180		B1BAAJ000003	TRANSISTOR	1	
D25		D4EAY271A036	ZENER RESISTOR	1	270V
D26,D27		D4EAY112A036	ZENER RESISTOR	2	1100V
RY1		K6B1AZA00005	POWER RELAY	1	18V
RY2-RY7		K6B1AZA00011	POWER RELAY	6	
T10		G4C4AAD00006	LOW VOLTAGE TRANSFORMER	1	120V
VZ490		D3BB6103A006	VARISTOR	1	

ORDER NO.SIMMC 0203005C1
E2

Service Manual

Microwave Oven

NN-S262SF / NN-S262BF / NN-S262WF / NN-S252BF / NN-S252WF

APH(USA)
CPH(CANADA)

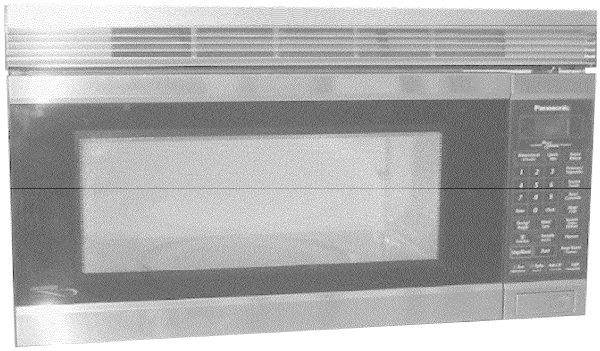

SPECIFICATIONS

Specifications for APH:

Specifications: / Model:	NN-S262SF APH	NN-S262BF/WF APH	NN-S252BF/WF APH
Power Source:	120V AC Single Phase, 60Hz		
Power Requirement:	1430W	1430W	1430W
Output(IEC705-88):	1200W	1200W	1200W
Microwave Frequency:	*2450MHz		
Timer:	*99 min. 99 sec.		
Outside Dimensions:	*29 7/8"(759mm)(W) x 15"(381mm)(D) x 16 7/16"(418mm)(H)		
Oven Cavity Dimensions:	*23 1/4"(591mm)(W) x 14 7/16"(367mm)(D) x 9 1/2"(242mm)(H)		
Weight:	*55lbs. (25.0 kg)	*53lbs. (24.0 kg)	*53lbs. (24.0 kg)
PbF	This product with PbF		
Output power: IEC705-88 Test Procedure			
Specifications subject to change without notice.			

Specifications for CPH:

Specifications: / Model:	NN-S262SF CPH	NN-S262BF/WF CPH	NN-S252BF/WF CPH
Power Source:	120V AC Single Phase, 60Hz		
Power Requirement:	1430W	1430W	1430W
Output(IEC705-88):	1100W	1100W	1100W
Microwave Frequency:	*2450MHz		
Timer:	*99 min. 99 sec.		
Outside Dimensions:	*29 7/8"(759mm)(W) x 15"(381mm)(D) x 16 7/16"(418mm)(H)		
Oven Cavity Dimensions:	*23 1/4"(591mm)(W) x 14 7/16"(367mm)(D) x 9 1/2"(242mm)(H)		
Weight:	*55lbs. (25.0 kg)	*53lbs. (24.0 kg)	*53lbs. (24.0 kg)
PbF	This product with PbF		
Output power: IEC705-88 Test Procedure			
Specifications subject to change without notice.			

© 2002 Shanghai Matsushita Microwave Oven Co., Ltd. / All rights

Microwave Oven 1
1. FEATURE CHART 5
2. CONTROL PANEL (APH) 6
3. CONTROL PANEL (CPH) 7
4. OPERATION AND DIGITAL PROGRAMMER CIRCUIT TEST PROCEDURE 8
4.1. To set clock 8
4.2. Time cooking for two stage 9
4.3. Inverter turbo defrost 10
4.4. Inverter auto cooking 10
4.5. Popcorn 11
4.6. Auto reheat 11
4.7. Power level 12
5. SCHEMATIC DIAGRAM (APH) 12
6. SCHEMATIC DIAGRAM (CPH) 13
7. DESCRIPTION OF OPERATING SEQUENCE 14
7.1. Variable power cooking control 14
Variable Power Cooking 14
7.2. Inverter power supply circuit [NEW H.V.] 15
7.3. Inverter turbo defrost 15
Inverter Turbo Defrost 16
8. CAUTIONS TO BE OBSERVED WHEN TROUBLESHOOTING 16
8.1. Check the grounding 16
8.2. Inverter warnings [NEW H.V.] 16
8.3. When parts must be replaced, remove the power plug from the outlet. 18
8.4. When the 18 Amp fuse is blown due to the operation of short switch: 18
8.5. Avoid inserting nails, wire, etc. through any holes in the unit during operation. 18
8.6. Confirm after repair 19
9. DISASSEMBLY AND PARTS REPLACEMENT PROCEDURE 20
9.1. Magnetron 20
9.2. Digital programmer circuit (DPC) and membrane key board. 20
9.3. Low voltage transformer and/or power relays (RY1, RY2) 21
9.4. Inverter power supply (U) 22
9.5. Door assembly 24
9.6. Stirrer motor 25
9.7. Blower motor (U) 25
9.8. Fan motor A (for H.V. inverter (U) cooling) 25
9.9. Fan motor B (for magnetron cooling) 26
9.10. Turntable motor 26
10. COMPONENT TEST PROCEDURE 27
10.1. Primary latch switch, secondary (secondary latch switch and power relay B) interlocks. 27
10.2. Short switch & monitor 27
10.3. Magnetron 28
10.4. Membrane key board (Membrane switch assembly) 28
10.5. Inverter power supply (U) 28
11. MEASUREMENTS AND ADJUSTMENTS 30
11.1. Adjustment of primary latch switch, secondary latch switch and short switch. 30
11.2. Measurement of microwave output 31
TABLE (1L-1min.test) 31
12. PROCEDURE FOR MEASURING MICROWAVE ENERGY LEAKAGE 32
12.1. Equipment 32
12.2. Procedure for measuring radiation leakage 32

12.2.1. Measurement with the outer panel removed. 33
12.2.2. Measurements with a fully assembled oven. 33
12.3. Record keeping and notification after measurement 33
12.4. At least once a year, have the radiation monitor checked for calibration by its manufacturer. 33
13. TROUBLESHOOTING GUIDE 34
13.1. Trouble related to digital programmer circuit 36
13.2. Troubleshooting of inverter circuit (U) and magnetron [NEW H.V.] 38
13.3. How to check the semiconductors using an OHM meter 38
14. EXPLODED VIEW AND PARTS LIST 39
15. PARTS LIST 39
16. DOOR ASSEMBLY 43
17. WIRING MATERIALS 43
18. ESCUTCHEON BASE ASSEMBLY 44
19. PACKING AND ACCESORIES 45
20. DIGITAL PROGRAMMER CIRCUIT 46
21. DIGITAL PROGRAMMER CIRCUIT 48

reserved. Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product.
Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

WARNING

1. This product should be serviced only by trained, qualified personnel.
2. Though this product has been manufactured in compliance with:
   "Federal Performance Standard 21 CFR Subchapter J"(D.H.H.S): U.S.A. models
   or "Radiation Emitting Devices Act"(Health and Welfare Canada): Canadian models
   it is very important all repairs should be made in accordance with procedures described in this manual to avoid being exposed to excessive microwave radiation.
3. Check for radiation leakage before and after every servicing according to the "procedure for measuring radiation leakage."
4. If the unit cannot be repaired on site, advise the customer not to use until unit is repaired.
5. Any serviceman who learns of any accident pertaining to microwave radiation leakage including the oven operating with open door should immediately notify the appropriate address listed below and Center for Devices and Radiological Health, DHHS.

IN U.S.A. (PASC)	Panasonic Services Company 50 Meadowland Parkway, Secaucus, New Jersey 07094 Attention: Technical Service Division. (201)348-7000	IN PUERTO RICO (PSC)	PSC San Gabriel Industrial Park 65th Infantry Ave. Km.9.5 Carolina, Puerto Rico 00985 (787)750-4300
		IN CANADA (PCI)	Panasonic Canada Inc. 5770 Ambler Drive, Mississauga, Ontario, L4W2T3 (905)624-5010

6. There are special components used in the microwave oven which are important for safety. These parts are marked with a ⚠ on the replacement parts list. It is essential that these critical parts be replaced only with the manufacture's specified parts to prevent microwave leakage, shock, fire, or other hazards. Do not modify the orginal design.

PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(A) Do not operate or allow the oven to be operated with the door open.

(B) Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary:
   (1) Interlock operation
   (2) Proper door closing
   (3) Seal and sealing surfaces (arcing, wear, and other damage)
   (4) Damage to or loosening of hinges and latches.
   (5) Evidence of dropping or abuse

(C) Before turning on microwave power for any service test or inspection within the microwave generating compartments, check the magnetron, waveguide or transmission line, and cavity for proper alignment, integrity and connections.

(D) Any defective or misadjusted components in the interlock, monitor, door seal, and microwave generation and transmission systems shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.

(E) A microwave leakage check to verify compliance with the Federal Performance Standard should be performed on each oven prior to release to the owner.

CAUTION

About lead free solder (PbF)

Distinction of PbF PCB: PCBs (manufactured) using lead free solder will have a PbF stamp on the PCB.

Caution:
- Pb free solder has a higher melting point than standard solder; Typically the melting point is 50-70˚F(30 - 40˚C) higher. Please use a high temperature soldering iron. In case of the soldering iron with temperature control, please set it to 700± 20˚F (370 ± 10˚C).
- Pb free solder will tend to splash when heated too high (about 1100˚F/600˚C).

Panasonic®

DANGER OF HIGH VOLTAGE AND HIGH TEMPERATURE (HOT/LIVE) OF THE INVERTER POWER SUPPLY (U)

INVERTER WARNING

This Inverter board looks like a regular PCB. However, this PCB drives the magnetron tube with extremely high voltage and high current. NEW H.V.

IT HAS: 1. **Very high voltage and high current circuits.**
It functions the same as the high voltage transformer and high voltage capacitor in ordinary microwave ovens.

2. **Aluminum heat sink is energized with very high voltages and high heat energy.**
3. **Very high voltage may remain in circuitry even when oven is off. High voltage may remain in the capacitors on the board.**

DO NOT:

* 1. **Do not touch circuitry because it has very hot (high voltage) circuitry. Even when replacing board, extreme care should be taken to avoid possible electric shock hazards. High voltage may remain in circuit.**
* 2. **Do not touch aluminum heat sink because it is very hot in high voltage and also very hot in high heat energy.**
* 3. **Do not try to adjust or tamper with preset volume on the Inverter board because it is very dangerous to adjust without proper test equipment.**
* 4. **Do not test oven while Inverter grounding plate or screws are loose. It is very dangerous to operate H.V. Inverter Circuit (U) with loose mounting screws or if improperly grounded.**
* 5. **For USA only:**
Do not try to repair Inverter PCB because it is very dangerous to repair it. Replace as whole High Voltage Inverter Circuit unit and return fully re-packed with original shipping box and shipping materials.

INVERTER POWER SUPPLY

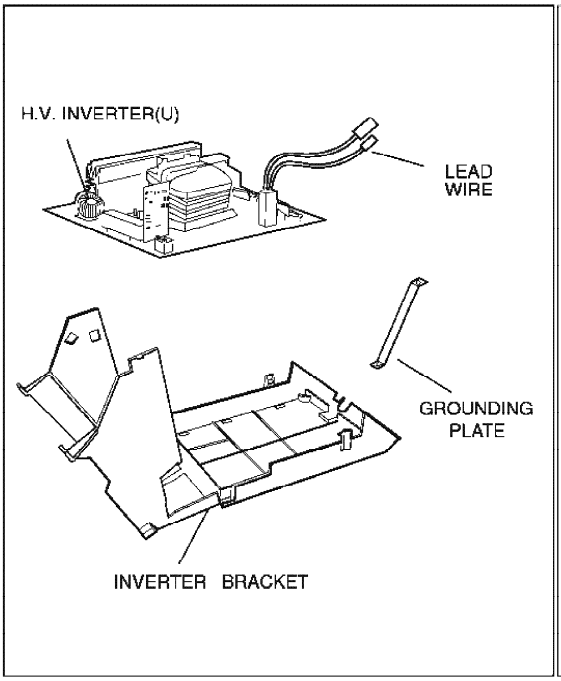

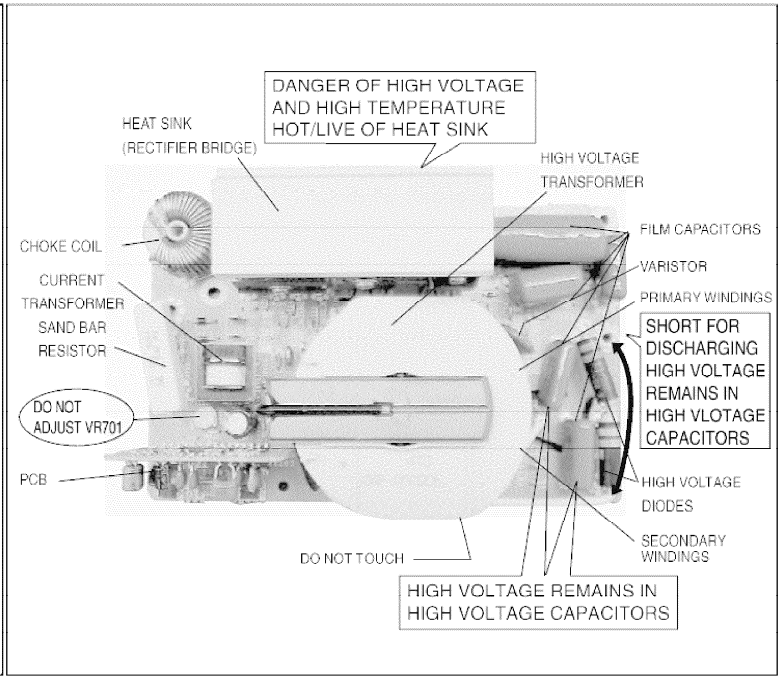

1. FEATURE CHART

MODEL / FEATURE	NN-S262	NN-S252
Five Stage Cooking	O	O
Inverter Turbo Defrost	O	O
Sensor Reheat	O	-
Sensor Cooking	O	-
Auto Reheat	-	O
Inverter Auto Cooking	-	O
Quick Min	O	O
Popcorn	O	O
Digital Clock	O	O
Timer	O	O
Child Safety Lock	O	O
Vent Fan	O	O
Cooktop Light	O	O

2. CONTROL PANEL (APH)

NN-S262

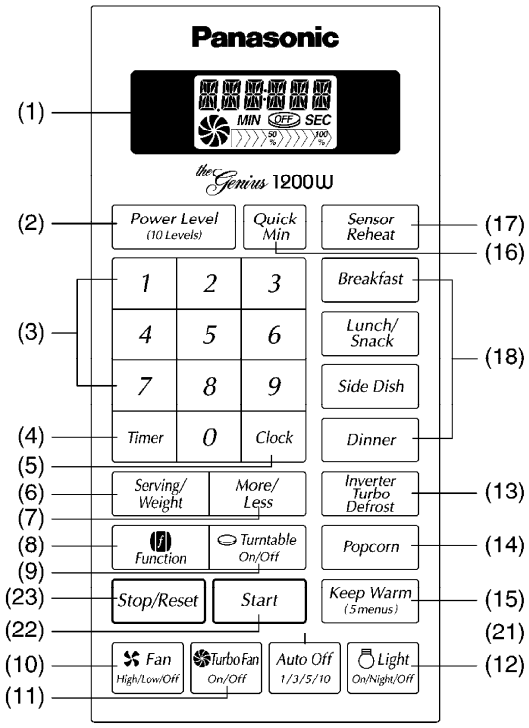

NN-S252

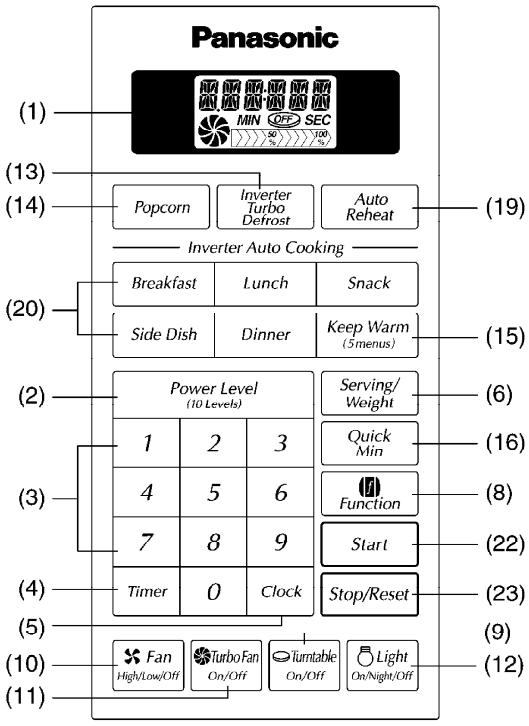

(1) Display Window
(2) Power Level Pad
(3) Number Pads
(4) Timer Pad
(5) Clock Pad
(6) Serving/Weight Pad
(7) More/Less Pad
(8) Function Pad
(9) Turntable On/Off Pad
(10) Fan High/Low/Off Pad
(11) Turbo Fan On/Off Pad
(12) Light On/Night/Off Pad
(13) Inverter Turbo Defrost Pad
(14) Popcorn Pad
(15) Keep Warm Pad
(16) Quick Min Pad
(17) Sensor Reheat Pad
(18) Sensor Cooking Pads
(19) Auto Reheat Pad
(20) Inverter Auto Cooking Pads
(21) Auto Off Pad

(22) Start Pad

One tap allows oven to begin functioning. If door is opened or STOP/RESET Pad is pressed once during oven operation, START Pad must again be pressed to restart oven.

(23) Stop/Reset Pad

Before cooking: One tap clears your instructions.
During cooking: One tap temporarily stops the cooking process. Another tap cancels all your instructions and time of day or colon appears on the display window.

3. CONTROL PANEL (CPH)

NN-S262

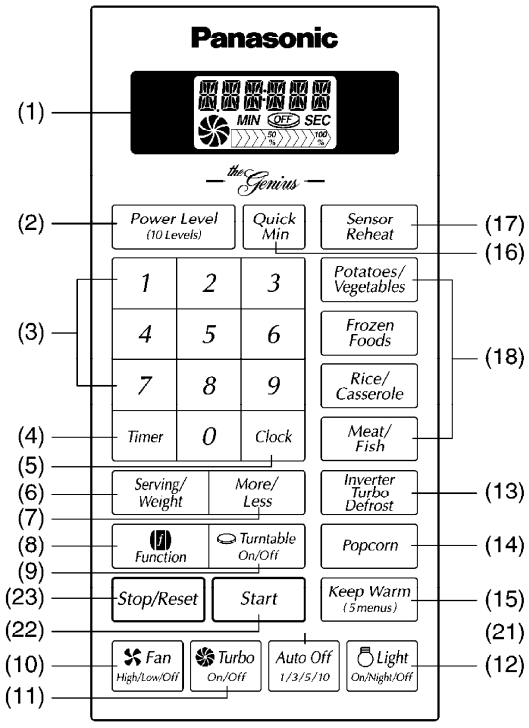

NN-S252

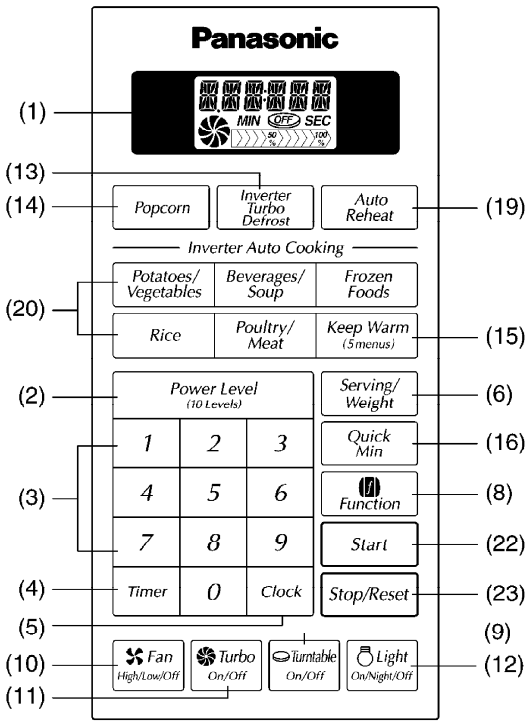

(1) Display Window
(2) Power Level Pad
(3) Number Pads
(4) Timer Pad
(5) Clock Pad
(6) Serving/Weight Pad
(7) More/Less Pad
(8) Function Pad
(9) Turntable On/Off Pad
(10) Fan High/Low/Off Pad
(11) Turbo Fan On/Off Pad
(12) Light On/Night/Off Pad
(13) Inverter Turbo Defrost Pad
(14) Popcorn Pad
(15) Keep Warm Pad
(16) Quick Min Pad
(17) Sensor Reheat Pad
(18) Sensor Cooking Pads
(19) Auto Reheat Pad
(20) Inverter Auto Cooking Pads
(21) Auto Off Pad

(22) Start Pad

One tap allows oven to begin functioning. If door is opened or STOP/RESET Pad is pressed once during oven operation, START Pad must again be pressed to restart oven.

(23) Stop/Reset Pad

Before cooking: One tap clears your instructions.
During cooking: One tap temporarily stops the cooking process. Another tap cancels all your instructions and time of day or colon appears on the display window.

4. OPERATION AND DIGITAL PROGRAMMER CIRCUIT TEST PROCEDURE

4.1. To set clock

OPERATION	SCROLL DISPLAY
1. Plug the power supply cord into wall outlet.	BEFORE USE REFER TO OPERATING INSTRUCTIONS
2. Press [Clock] pad.	☼ ☼
3. Enter time of day (TOD) by pressing appropriate [Number] pads.	11 ☼ 25
4. Press [Clock] pad. TOD has now been resistered into the digital programmer circuit and will count up by minutes.	11 : 25

4.2. Time cooking for two stage

OPERATION	SCROLL DISPLAY
1. Place a water load in the oven.	
2. Press [Power Level] pad once to set High power. (1st stage)	P 10
3. Set for 5 seconds by pressing [Number] pads. 5 sec.= [5]	5 SEC
4. Press [Power Level] pad 6 times to set Medium power. (2nd stage)	P 5
5. Set for 1 minute by pressing [Number] pads. 1 Min.= [1] [0] [0]	1 00 MIN SEC

OPERATION	SCROLL DISPLAY
6. Press [Start] pad.	5 SEC
7. When 1st stage cooking time has elapsed. Oven beeps twice and automatically switches to 2nd stage cooking.	1 MIN 0 0 SEC
8. When 2nd stage cooking time has elapsed, oven beeps 5 times and shuts off.	Time of day or colon if set appears in the display

4.3. Inverter turbo defrost

OPERATION	SCROLL DISPLAY
1. Press [Inverter Turbo Defrost] Pad.	INVERTER TURBO DEFROST SET WEIGHT
2. Set the weight for 1 lb by pressing [Number] pads. 1 lb= [1] [0]	1.0 LB
3. Press [Start] pad.	5 MIN 28 SEC
4. Press [Stop/Reset] Pad twice.Oven shuts off.	Time of day or colon if set appears in the display.

4.4. Inverter auto cooking

OPERATION	SCROLL DISPLAY
1. Press [Beverages] pad once.	BEVERAGES PRESS SERVING WEIGHT
2. Press [Serving/Weight] pad twice to select 2 cups	2 CUPS
3. Press [Start] pad.	
When cooking time has elapsed, Oven beeps 5 times and shuts off.	Time of day or colon if set appears in the display.

4.5. Popcorn

OPERATION	SCROLL DISPLAY
1. Press [Popcorn] pad once for 3.5 oz serving. (Select 3.5, 3.0, 2.85, 2.65, 1.75 oz)	
2. Press [Start] pad.	
When cooking time has elapsed, Oven beeps 5 times and shuts off.	Time of day or colon if set appears in the display.

4.6. Auto reheat

OPERATION	SCROLL DISPLAY
1. Press [Auto Reheat] pad twice for two servings.	AUTO REHEAT
2. Press [Start] pad.Auto Reheat cycle begins time counts down.	1 MIN 21 SEC
3.When cooking time has elapsed, Oven beeps 5 times and shuts off.	Time of day or colon if set appears in the display.

4.7. Power level

Press Power Level	Power Level	Display Window
once	P10 (HIGH)	P10
twice	P9	P9
3 times	P8	P8
4 times	P7 (MED.HIGH)	P7
5 times	P6 (MEDIUM)	P6
6 times	P5	P5
7 times	P4	P4
8 times	P3 (MEDIUM-LOW)	P3
9 times	P2	P2
10 times	P1 (LOW)	P1

5. SCHEMATIC DIAGRAM (APH)

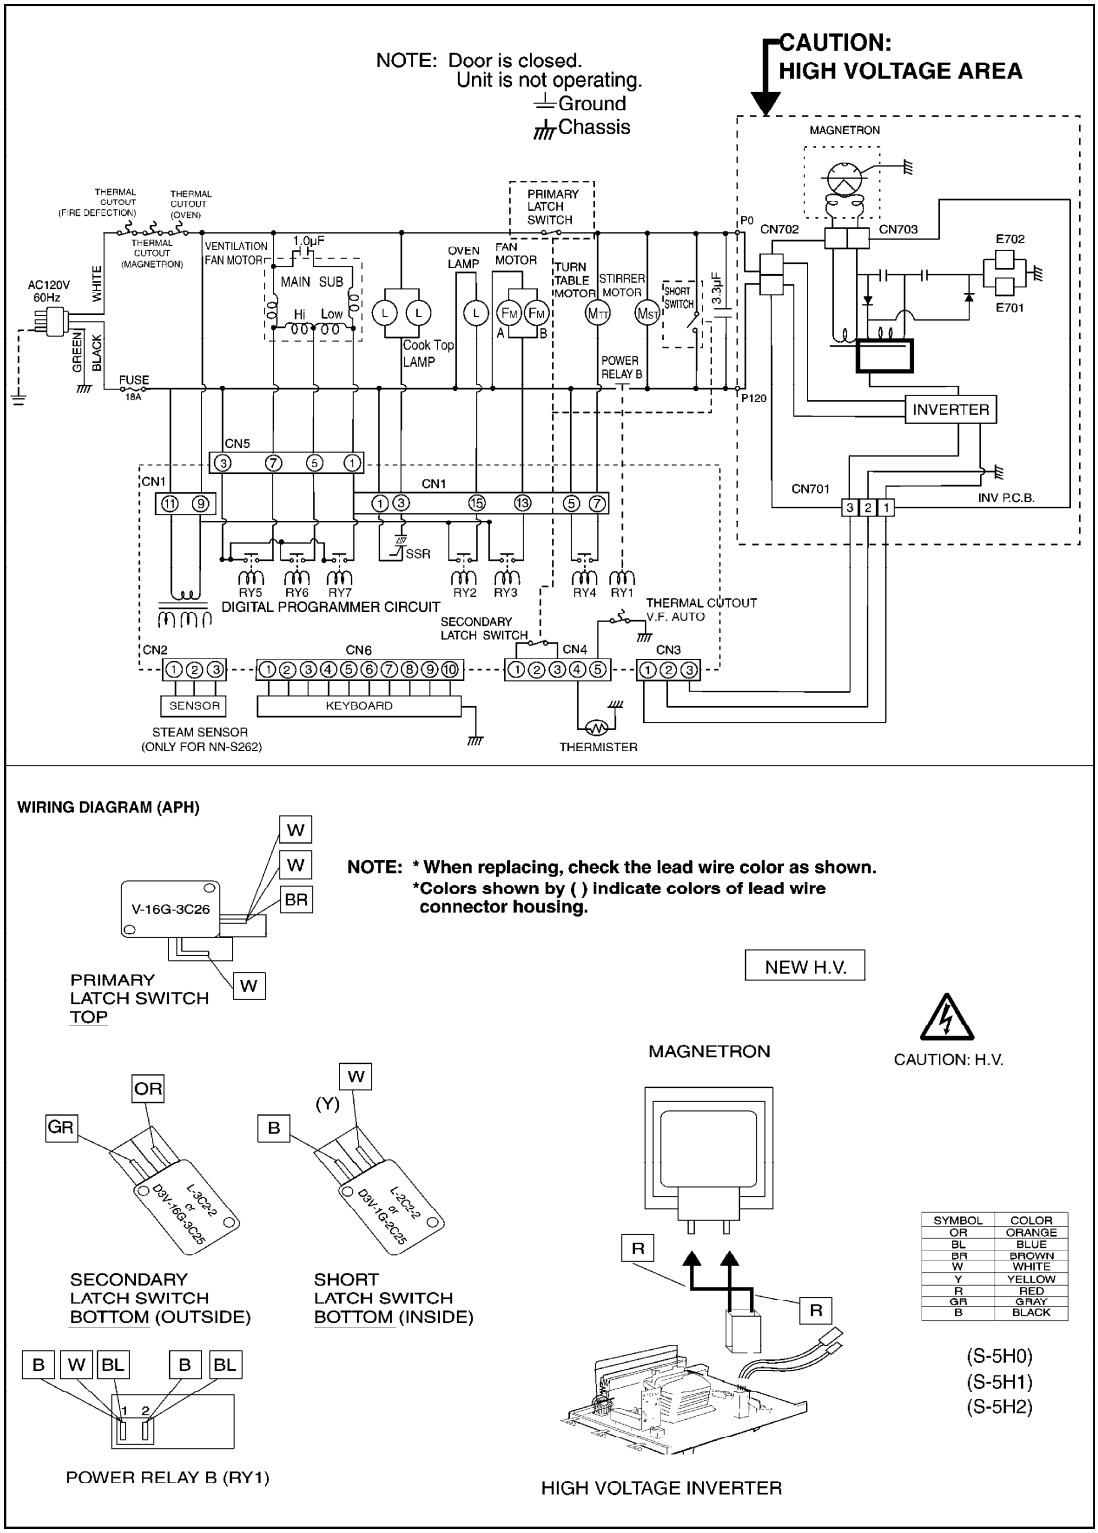

6. SCHEMATIC DIAGRAM (CPH)

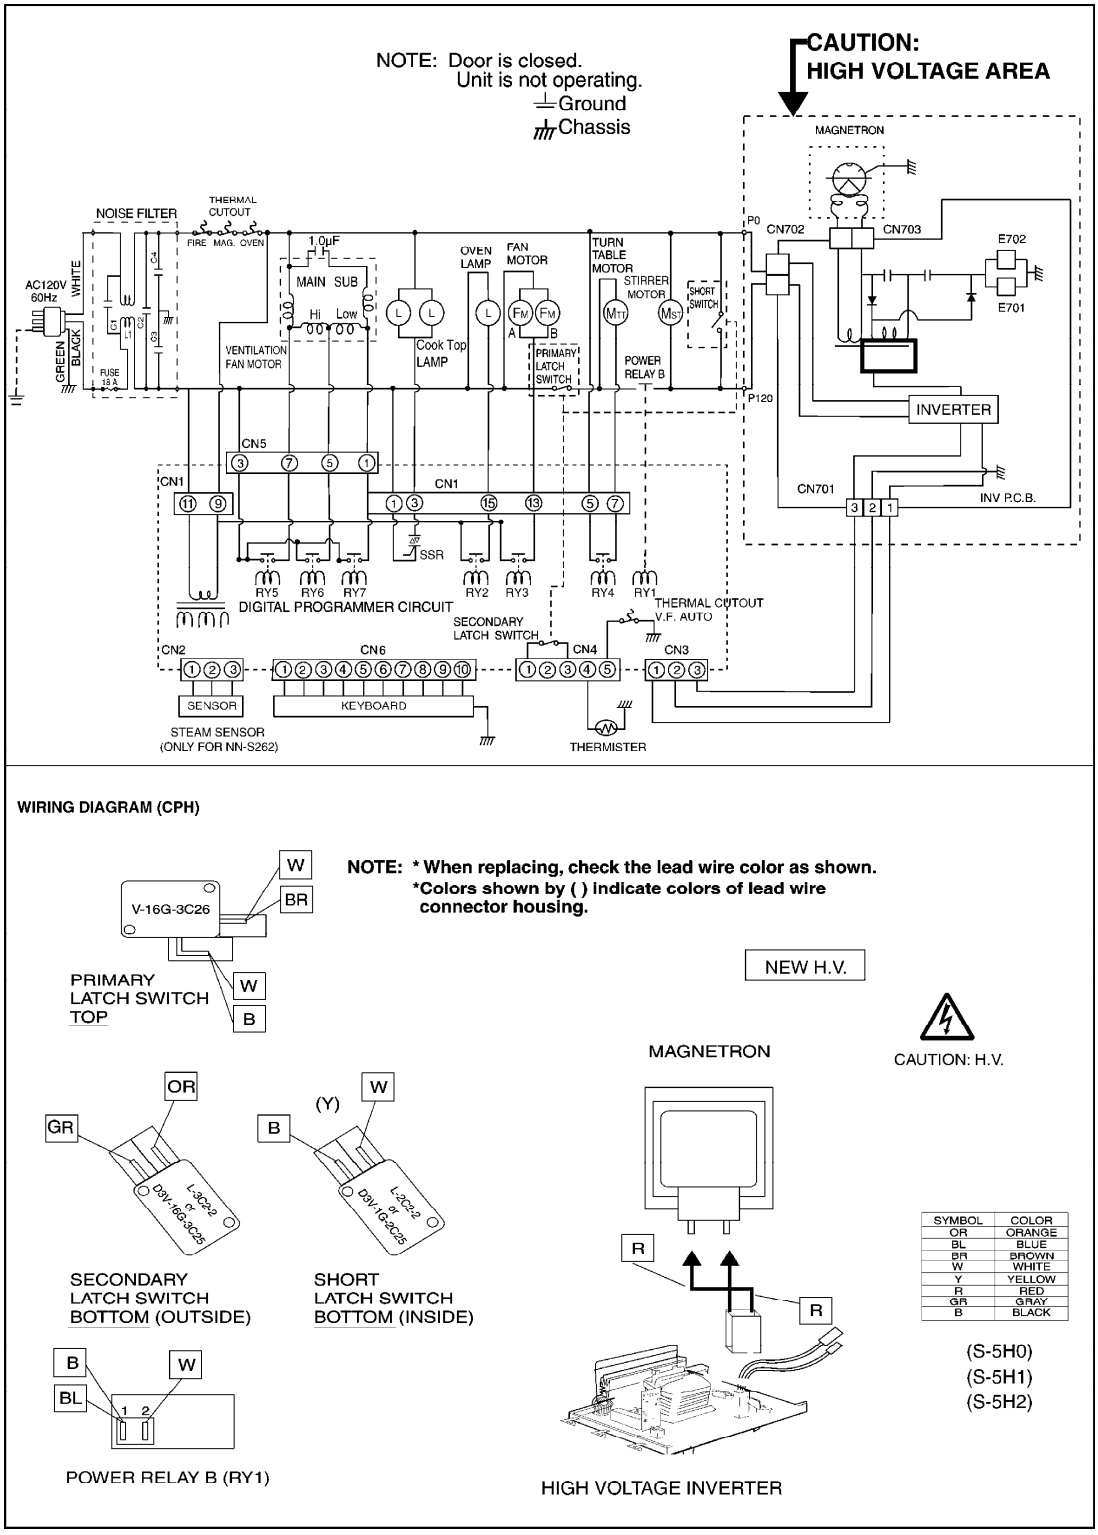

7. DESCRIPTION OF OPERATING SEQUENCE

7.1. Variable power cooking control

High Voltage Inverter Power supply (U) controls output power by the signal from Digital Programmer Circuit (DPC). Power relay stays ON for P4 to P10 and For P1 to P3, both inverter drive signal and power relay to control output power.

NOTE:

The ON/OFF time ratio does not correspond with the percentage of microwave power since approximately 2 seconds are required for heating of magnetron filament.

Variable Power Cooking

POWERSETTING		OUTPUT POWER(%)	ON-OFF TIME OF POWER RELAY B (RY1)	
		APPROX.	ON(SEC)	OFF(SEC)
HIGH	P10	100%	22	0
	P9	90%	22	0
	P8	80%	22	0
MEDIUM-HIGH	P7	70%	22	0
MEDIUM	P6	60%	22	0
	P5	50%	22	0
	P4	40%	22	0
MEDIUM-LOW	P3	30%	17	5
	P2	20%	11	11
	P1	10%	6	16
DEFROST	P3	30%	17	5

7.2. Inverter power supply circuit [NEW H.V.]

This Inverter Power Supply Circuit supplies 4,000V DC to the magnetron tube from the line voltage, 120V 60Hz AC input. functions as the H.V. transformer, the H.V.capacitor and H.V.Diode.

1. **The AC input voLtage 120V 60Hz is rectified to DC voltage immediately.**
2. **DC voltage will be supplied to the switching devices called IGBT. These devices will be switched ON-OFF by the 20 to 40 kHz PWM. (pulse width modulation) signal from the microcomputer in the DPC.**
3. **This drives the High voltage transformer to increase up to 2,000V AC and approximately 3V AC by means of transformer.**
4. **Then the half-wave doubler voltage rectifier circuit, consisting of the H.V. diodes and Capacitors, generates the necessary 4,000V DC needed for the magnetron.**
5. **Output power of the magnetron tube is always monitored by the signal output from the current transformer built into the inverter ciruit.**
6. **Then this signal will be fed back to the microcomputer in the DPC to determine operating conditions and output necessary to control PWM signal to the Inverter Power Supply to control output power.**

7.3. Inverter turbo defrost

When this Auto Control feature is selected and the Start Pad is tapped:

1. **The digital programer circuit determines the power level and cooking time to complete cooking and indicates the operating state in the display window. Table shows the corresponding cooking times for respective serving by categories.**
2. **When cooking time the display window has elapsed, the oven tums off automatically by a control signal from the digital programmer circuit.**

Inverter Turbo Defrost

WEIGHT SELECTED	COOKING TIME
1.0LB	5 min.28 sec.

8. CAUTIONS TO BE OBSERVED WHEN TROUBLESHOOTING

Unlike many other appliances, the microwave oven is high-voltage, high-current equipment. Though it is free from danger in ordinary use, extreme care should be taken during repair.

CAUTION
Servicemen should remove their watches whenever working close to or replacing the magnetron.

8.1. Check the grounding

Do not operate on a 2-wire extension cord. The microwave oven is designed to be used when grounded. When it is inoperative, make sure it is grounded properly before beginning repair work.

8.2. Inverter warnings [NEW H.V.]

DANGER OF HIGH VOLTAGE AND HIGH / TEMPERATURE (HOT/LIVE) OF THE INVERTER / POWER SUPPLY (U)

This High Voltage Inverter Power Supply circuit supplies very high voltage and very high current for the magnetron tube. Though it is free from danger in ordinary use, extreme care should be taken during repair. As you can see, it looks like a TV flyback transformer, however the current is extremely large and so danger exists because of its high current and high voltages.

The aluminum heat sink is also energized with high voltage (HOT), so do not touch when AC input terminal is connected to the power line because one of the IGBT switching power devices (Collector) is directly connected to the Aluminum heat sink.

The Aluminum heat sink may be HOT from heat energy; therefore, extreme care should be taken during servicing and replacing.

WARNING OF INVERTER POWER SUPPLY (U) / GROUNDING

Check the High Voltage Inverter Power Supply circuit grounding. This High Voltage Inverter Power Supply circuit board must have a proper chassis ground by the grounding bracket to the chassis ground; otherwise, this H.V. Inverter circuit board will expose very high voltage and cause extreme DANGER! Be sure to have proper grounding by the grounding plate and screws.

WARNING OF DISCHARGING HIGH VOLTAGE CAPACITORS

Warning about the electric charge in the high voltage capacitors. For about 30 seconds after the oven is turned off, an electric charge remains in the high voltage capacitors in the inverter power supply circuit board.

When replacing or checking parts, remove the power plug from the outlet and short the Inverter output terminal of the magnetron filament terminals to the chassis ground with an insulated handle screwdriver to discharge. Please make sure to touch chassis ground side first then short to the output terminals.

WARNING

There is high-voltage present, with high-current capabilities in the circuits of the primary, and secondary windings, choke coil and heat sink of the Inverter. It is extremely dangerous to work on or near these circuits with oven energized.
DO NOT measure the voltage in the high voltage circuit including filament voltage of magnetron.

WARNING

Never touch any circuit wiring with your hand nor with an insulated tool during operation.

8.3. When parts must be replaced, remove the power plug from the outlet.

8.4. When the 18 Amp fuse is blown due to the operation of short switch:

WARNING

When the 18 Amp. fuse if blown due to the operation of short switch, you must replace Primary latch switch and short switch. Also replace power relay B (RY1) when the continuity check reads shorted contacts (1-2).

1. **This is mandatory. Refer to "Measurements and Adjustments" for these switches.**
2. **When replacing the fuse, confirm that it has the appropriate rating for these models.**
3. **When replacing faulty switches, be sure mounting tabs are not bent, broken or otherwise deficient in their ability to hold the switches.**

8.5. Avoid inserting nails, wire, etc. through any holes in the unit during operation.

WARNING

Never insert a wire, nail or any other metal object through the lamp holes on the cavity or any other holes or gaps, because such objects may work as an antenna and cause microwave leakage.

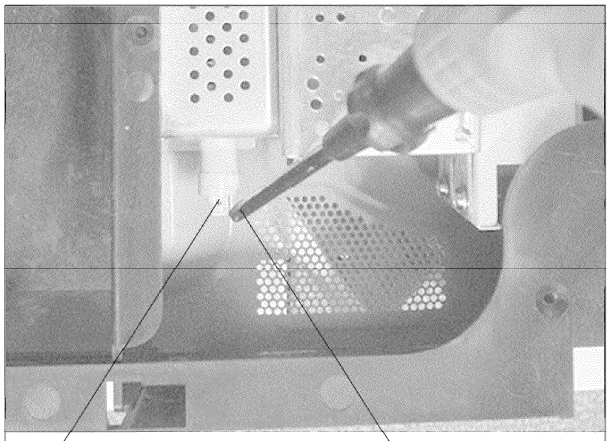

Touch chassis side first then short to the terminal of the magnetron filament terminal.

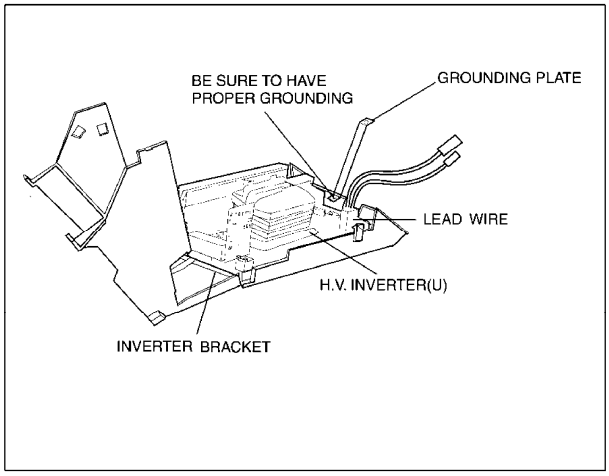

8.6. Confirm after repair

1. **After repair or replacement of parts, make sure that the screws of the oven, etc. are neither loose nor missing. / Microwaves might leak if screws are not properly tightened.**
2. **Make sure that all electrical connections are tight before inserting the plug into the wall outlet.**
3. **Check for microwave energy leakage. (Refer to procedure for measuring microwave energy leakage.)**

CAUTION / MICROWAVE RADIATION

DO NOT BECOME EXPOSED TO RADIATION FROM THE MICROWAVE GENERATOR OR OTHER PARTS CONDUCTING MICROWAVE ENERGY.

IMPORTANT NOTICE [NEW H.V.]

1.The following components have potentials above 2000V while the appliance is operated.

*** Magnetron**

*** High voltage transformer**

*** High voltage diode**

*** High voltage capacitor**

Pay special attention to these components.

2.When the appliance is operated with the door hinge or magnetron fixed incorrectly, the microwave leakage can reach more than 5mW/cm2. After repair or exchange, it is very important to check if magnetron and the door hinge is correctly fixed.

9. DISASSEMBLY AND PARTS REPLACEMENT PROCEDURE

9.1. Magnetron

1. Discharge the high voltage capacitor.

2. Disconnect 2 connectors from fan motor B.

3. Remove 4 screws holing fan motor B (U) assembly.

4. Remove 3 screws which holding exhaust guide (U) onto oven.

5. Tilt exhaust guide (U).

6. Remove 1 screw holding air guide A and then remove air guide A.

7. Remove 2 high voltage lead wires from magnetron filament terminal.

8. Remove 4 screws holding magnetron.

NOTE:

After replacing the magnetron, tighten mounting screws properly making sure there is no gap between the waveguide and the magnetron to prevent microwave leakage.

CAUTION

When replacing the magnetron, be sure the antenna gasket is in place.

9.2. Digital programmer circuit (DPC) and membrane key board.

NOTE:

Be sure to ground any static electric charge built up on your body

before handling the DPC.

1. **Disconnect all connectors from D.P.C.**
2. **Remove 2 screws holding escutcheon base and slide the escutcheon base upward slightly.**
3. **Release CN6 connector's lock of D.P.C by pushing both levels to inside and pull them upward, and remove flat cable of membrane keyboard.**
4. **Remove 3 screws holding D.P.C.**

To replace membrane key board

5. **Push the upper part of key board (display window portion) from back of escutcheon base and peel off escutcheon sheet and membrane key board completely from escutcheon base.**

NOTE:

1. The membrane key board is attached to the escutcheon base with double faced adhesive tape. Therefore, applying hot air such as using a hair dryer is recommended for smoother removal. / 2. When installing new membrane key board, make sure that the surface of escutcheon base is cleaned sufficiently so that any problems (shorted contacts or uneven surface) can be avoided. / 3. Alignment position of membrane key board is as follows; / Membrane key board: Right and upper edges / Escutcheon sheet: Right and upper edges

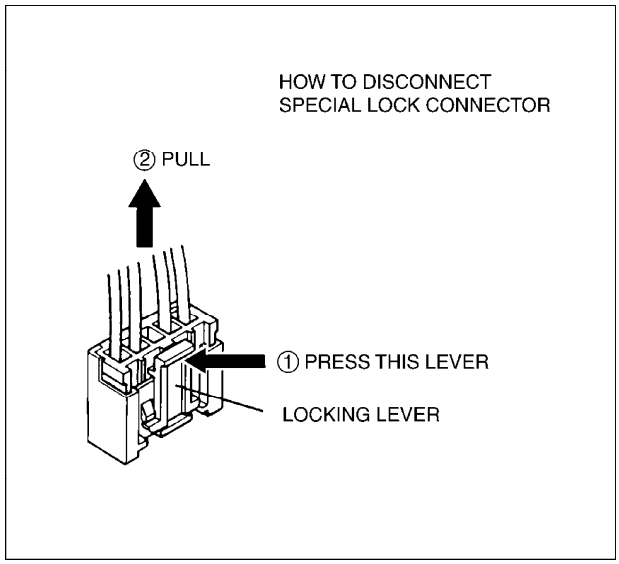

9.3. Low voltage transformer and/or power relays (RY1, RY2)

NOTE:

Be sure to ground any static electric charge built up on your body

before handling the DPC.

(A) Using solder wick or a desoldering tool and 30W soldering iron, carefully remove all solder from the terminal pins of the low voltage transformer and/or power relays.

NOTE:

Do not use a soldering iron or desoldering tool of more than 30 watts on DPC contacts.

(B) With all the terminal pins cleaned and separated from DPC contacts, remove the defective transformer/power relays making sure all terminal pins are inserted completely. Resolder all terminal contacts carefully.

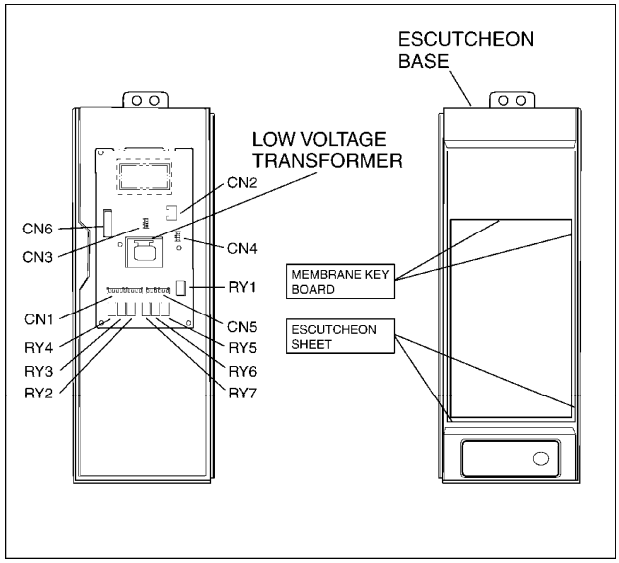

9.4. Inverter power supply (U)

CAUTIONS WHILE REPLACING INVERTER / POWER SUPPLY (U)

1. Make sure to leave the grounding plate in its place.

2. Make sure to securely tighten grounding screw from the bottom of chasis (base).

3. Securely connect 3 lead wire connectors.

4. Make sure the heat sink has enough space (gap) from the oven. Take special care not to touch any lead wire to the aluminum heat sink because it is hot.

1. Remove 1 screw holding orifice on the cover plate.

2. Remove 1 screw holding top front cover on the oven.

3. Remove 1 screw holding Inverter grounding plate on the oven.

4. Remove 3 screws holding Inverter bracket on top front cover.

5. Slide 2 locking of Inverter bracket at the top front cover slightly.

6. Disconnect 2 lead wires from fan motor A terminals.

7. Remove 1 screw holding orifice on the Inverter bracket.

8. Release 2 tabs to make Inverter bracket flat, and then remove orifice.

9. Release 2 tabs on the Inverter bracket and make flat.

10. Unplug 3 connector on H.V. Inverter (U).

11. Remove 3 screws holding H.V. Inverter (U) onto Inverter bracket.

12. Remove 1 screw holding grounding Plate on the H.V. Inverter (U).

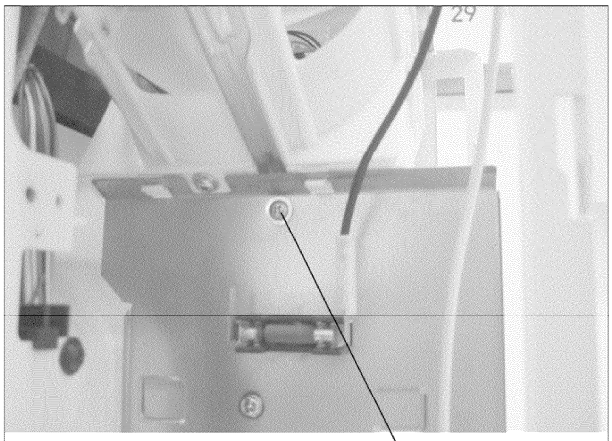

① FOR HOLDING ORIFICE ON THE COVER PLATE

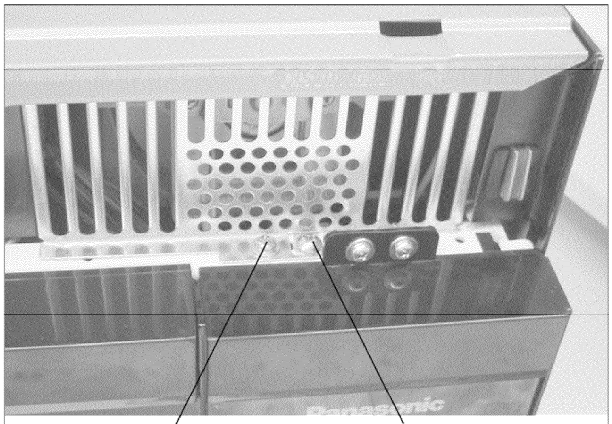

② FOR HOLDING TOP FRONT COVER ON THE OVEN

③ FOR HOLDING INVERTER GROUNDING PLATE ON THE OVEN

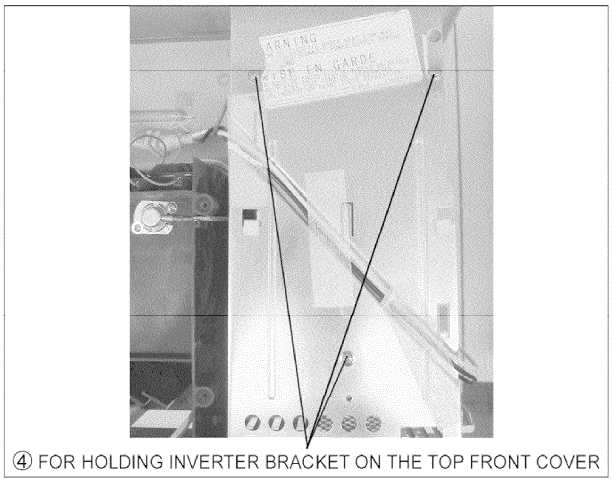

9.5. Door assembly

1. **Remove door C from door E by carefully pulling outward starting from upper right hand corner using a flat blade screwdriver.**
2. **Separate door E from tabs on door A and remove door A.**
3. **Remove door screen B from door A.**
4. **Remove door key and door key spring.**
5. **Open Door E at the opening angle of approximately 10°(Note: The door cannot be removed if the opening angle is greater than 10°).**
6. **Remove the door E from its hinges by pushing the door E's bottom upward and out.**
7. **Replace other components.**

NOTE:

Door alignment is critical. If door is misaligned, apply pressure until alignment is achieved.

NOTE:

After replacement of the defective component parts of the door, reassemble, install, and perform microwave leakage test.

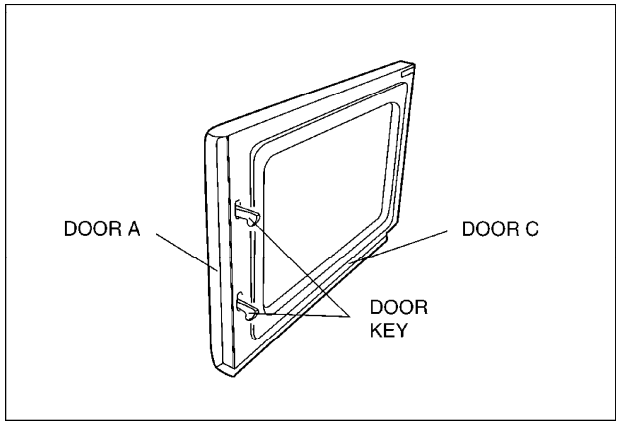

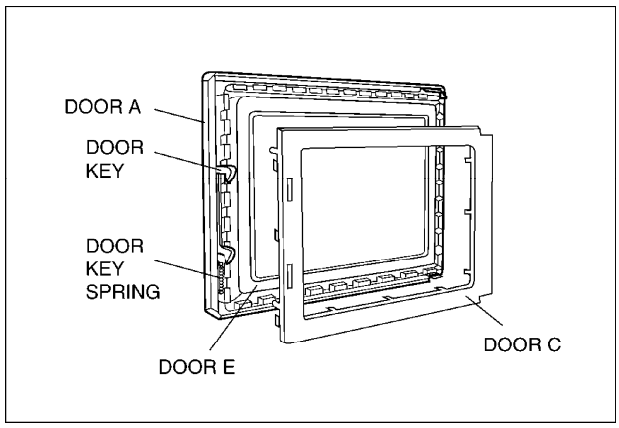

9.6. Stirrer motor

1. Release 1 canoe clip on the cover and then remove the cover.
2. Pull out stirrer.
3. Remove 3 screws which holding exhaust guide A on the oven.
4. Tilt exhaust guide A.
5. Disconnect 2 connectors from stirrer motor.
6. Remove 1 screw holding stirrer motor.
7. Release from retainer tab by turn spinning certain angle, remove stirrer motor.

9.7. Blower motor (U)

1. Disconnect 1 connector from blower motor (U).
2. Remove 2 screws which holding blower motor (U) on the oven.
3. Remove blower motor (U).

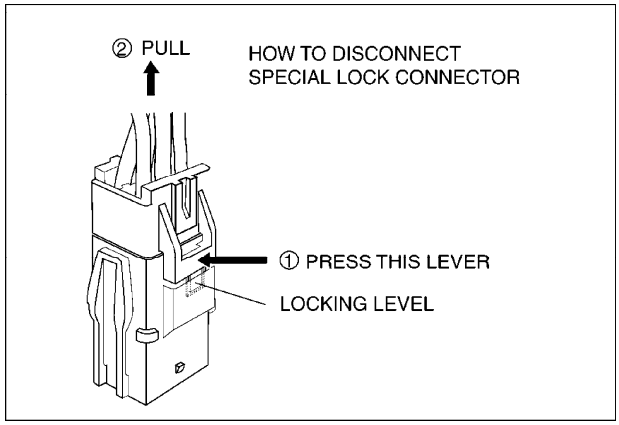

9.8. Fan motor A (for H.V. inverter (U) cooling)

Disassembly procedure step 1~8 same as above H.V. Inverter (U).

9. Pull out fan blade.

10. Remove 2 screws which holding fan motor A on the orifice, and remove fan motor A.

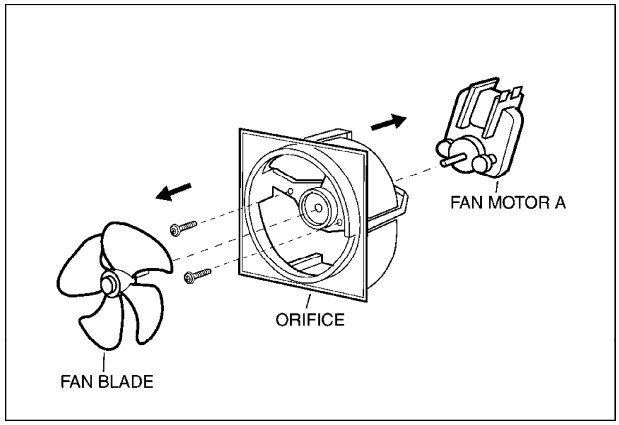

9.9. Fan motor B (for magnetron cooling)

1. Disconnect 2 lead wires from fan motor B terminals.
2. Remove 4 screws holing fan motor B(U)Assembly.
3. Remove 4 screws which holding fan case installation plate on the fan case C.
4. From interior of fan case C, remove 2 screws holding fan motor B.

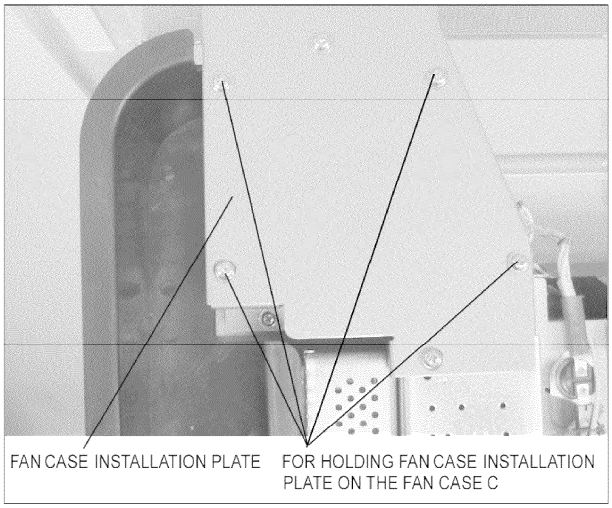

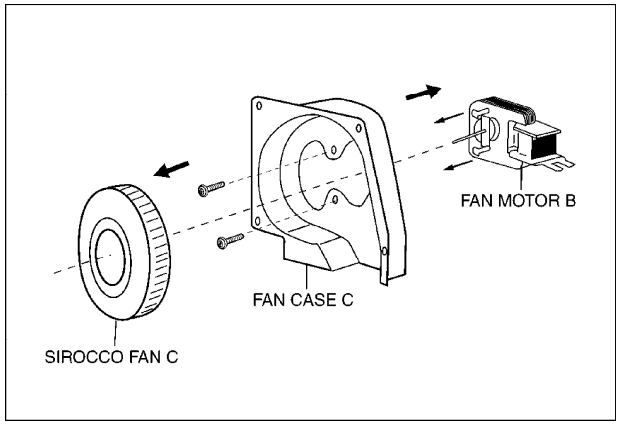

9.10. Turntable motor

1. Disconnect 2 lead wires from turntable motor terminals.
2. Remove 1 screw holding turntable motor.
3. Release from retainer tab by turn spinning certain angle, remove turntable.

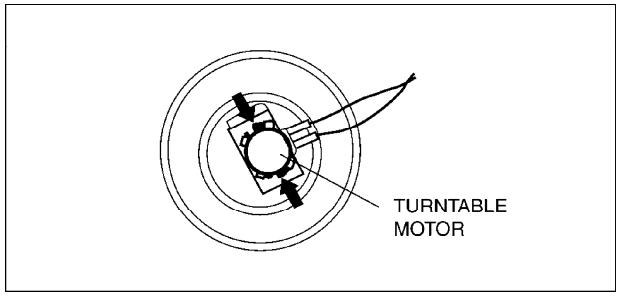

10. COMPONENT TEST PROCEDURE

CAUTION [NEW. H.V.]

1. High voltage is present at the high voltage terminal of the High Voltage Inverter (U) including aluminum heat sink during any cook cycle.

2. It is neither necessary nor advisable to attempt measurement of the high voltage.

3. Before touching any oven components, or wiring, always unplug the oven from its power source and discharge the high voltage capacitors.

10.1. Primary latch switch, secondary (secondary latch switch and power relay B) interlocks.

1. Unplug the lead connectors to Power Relay B and verify continuity of the power relay B 1-2 terminals.
2. Unplug lead connectors to Primary Latch Switch and Secondary Latch Switch.
3. Test the continuity of switches at door opened and closed positions with ohm meter (low scale). / Normal continuity readings should be as follows.

	Door Closed	Door Opened
Primary Latch Switch	0 Ω (close)	∞ Ω (open)
Secondary Latch Switch	0 Ω (close)	∞ Ω (open)
Power Relay B	∞ Ω (open)	∞ Ω (open)

10.2. Short switch & monitor

1. Unplug lead wires from Inverter Power Supply (U) primary terminals.
2. Connect test probes of ohm meter to the disconnected leads which

were connected to Inverter Power Supply (U).

3. Test the continuity of short switch with door opened and closed positions using lowest scale of the ohm meter. / Normal continuity readings should be as follows.

Door Opened	Door Closed
0 Ω	∞ Ω

10.3. Magnetron

Continuity checks can only indicate an open filament or a shorted magnetron. To diagnose for an open filament or shorted magnetron.

1. Isolate magnetron from the circuit by disconnecting the leads.

2. A continuity check across magnetron filament terminals should indicate one ohm or less.

3. A continuity check between each filament terminal and magnetron case should read open.

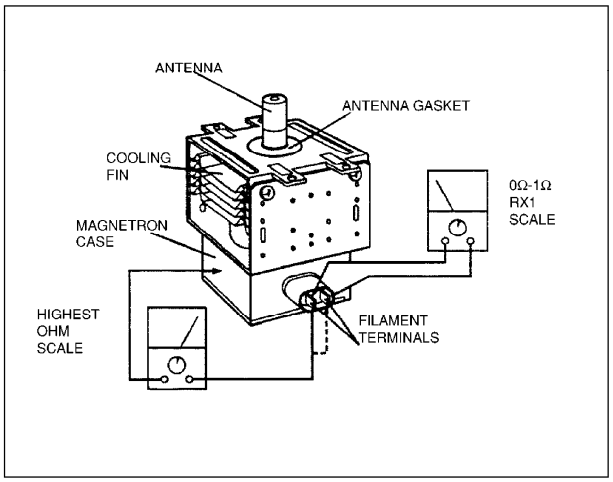

10.4. Membrane key board (Membrane switch assembly)

Check continuity between switch terminals, by tapping an appropriate pad on the key board. The contacts assignment of the respective pads on the key board is as shown in digital programmer circuit.

10.5. Inverter power supply (U)

DO NOT try to REPAIR this H.V. Inverter power supply (U).Replace as whole H.V. Inverter(U) Unit.

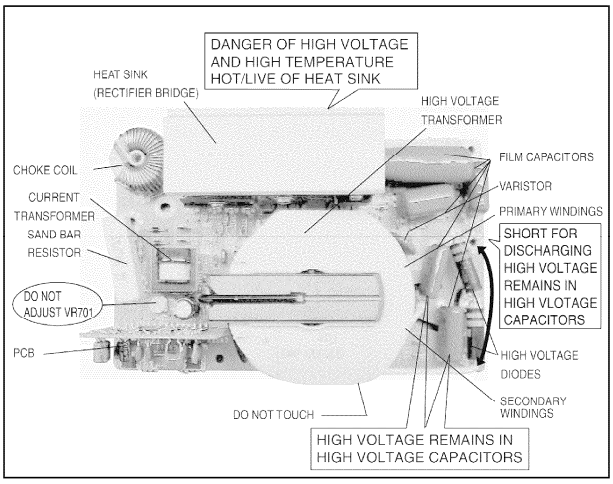

DANGER HIGH VOLTAGE

Test if failure codes of H97 or H98 appears by doing the following procedure. It is recommended to use an AC line input current Ampere meter for testing.

Test1

1. Program DPC.
   A. Tap Clock
   B. Tap Timer
   C. Tap Start
   D. Tap Power Level

2. Place 1 liter of water load into oven cavity.

3. Unplug 2 pin H.V. lead wire connector CN703 from magnetron tube.

4. Program oven at High power for 1 minute and press start.
   A. After approximately 23 seconds, oven stops.
   B. During oven operation, input current is approximately 0.5 to 1A. If both a and b are OK, please proceed to test 2.

	INPUT AMPERE	FAILURE CODE
Unplug CN703	0.5 to 1A	Oven stops in 23 seconds after started.

Test2

Continued from Test 1

1. Unplug 3 pin connector CN701, CN703 remains unplug.

2. Set oven at High power for 1 minute and start.
   A. After approximately 3 seconds, oven stops.

B. During oven operation, input current is approximately less than 0.4A.

	INPUT AMPERE	FAILURE CODE
Unplug CN701	<0.4A	Oven stops in 3 seconds after started.

If both a and b are OK, the Inverter Power Supply (U) can be determined OK.

11. MEASUREMENTS AND ADJUSTMENTS

WARNING

- For continued protection against radiation hazard, replace only with identical replacement parts (For touch models Part No. A 6142 - F60, Type No. V-16G-3C26 for Primary latch switch; Part No. A61425180AP, Type No. L-3C2-2 for Secondary latch switch and Part No. A61785180AP, Type No. L-2C2-2 for short switch.)
- When the 18 Amp fuse is blown due to the operation of the short switch, you must replace power relay B. Primary latch switch and the short switch. Then follow the installation procedures below.
- Interlock switch replacement In replacing faulty switches, be sure mounting tabs are not bent, broken or otherwise deficient in their ability to hold the switches.
- Refer to schematic diagram to ensure proper connection.

11.1. Adjustment of primary latch switch, secondary latch switch and short switch.

1. **When mounting Primary latch switch,Secondary latch switch and short switch to door hook assembly, mount the Primary latch switch, the Secondary latch switch and the short switch to the door hook assembly as shown in table.**
   NOTE:
   No specific adjustment during installation of Primary latch switch, Secondary latch switch and short switch to the door hook is necessary.
2. **When mounting the door hook assembly to the oven assembly, adjust the door hook assembly by moving it in the direction of arrow in the illustration so that the oven door will not have any play in it. Check for play in the door by pulling the door assembly. Make sure that the latch keys move smoothly after adjustment is completed. Completely tighten the screws holding the door hook assembly to the oven assembly.**
3. **Reconnect the short switch and check the continuity of the monitor**

circuit and all latch switches again by following the components test procedures.

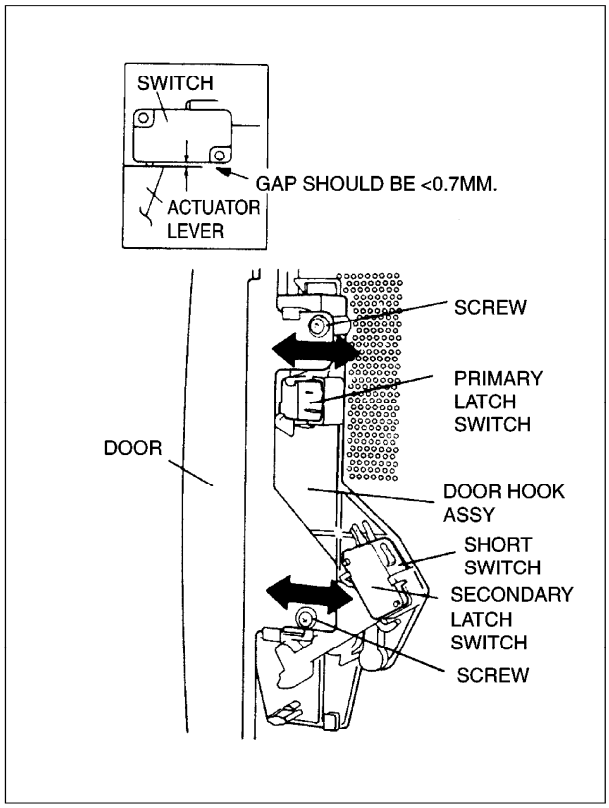

11.2. Measurement of microwave output

The output power of the magnetron can be determined by performing IEC standard test procedures. However,due to the complexity of IEC test procedures, it is recommended to test the magnetron using the simple method outlined below.

Necessary Equipment:

***1 liter beaker *Glass thermometer / *Wrist watch or stopwatch**

NOTE:

Check the line voltage under load.Low voltage will lower the magnetron output. Take the temperature readings and heating time as accurately as possible.

1. **Fill the beaker with exactly one liter of tap water.Stir the water using the thermometer and record the beaker's temperature. (recorded as T1).**
2. **Place the beaker on the center of glass cook plate. / Set the oven for High power and heat it for exactly one minute.**
3. **Stir the water again and read the temperature of the beaker. (recorded as T2).**
4. **The normal temperature rise at High power position for each model is as shown in table.**

TABLE (1L-1min.test)

RATED OUTPUT	TEMPERATURE RISE
1100W(IEC705-88)	Min. 16.9°F(9.4°C)
1200W(IEC705-88)	Min. 18.5°F(10.3°C)

12. PROCEDURE FOR MEASURING MICROWAVE ENERGY LEAKAGE

WARNING

Check for radiation leakage after every servicing. Should the leakage be more than 2 mW/cm2 (1mW/cm2 for Canada) inform PASC, PSC, or PCI immediately. After repairing or replacing any radiation safety device, keep a written record for future reference, as required by D.H.H.S. and Health and Welfare Canada regulation. This requirement must be strictly observed. In addition, the leakage reading must be recorded on the service repair ticket while in the customer's home.

NOTE:

The U.S. Government standard is 5 mW/cm2 while in the customer's home. 2mW/cm2 stated here is our own voluntary standard. (1mW/cm2 for Canada)

12.1. Equipment

- Electromagnatic radiation monitor
- Glass thermometer 212°F or 100°C
- 600cc glass beaker

12.2. Procedure for measuring radiation leakage

Note before measuring.

- Do not exceed meter full scale deflection. Leakage monitor should initially be set to the highest scale.
- To prevent false readings the test probe should be held by the grip portion of the handle only and moved along the shaded area in Figure no faster than 1 inch/sec (2.5cm/sec).
- Leakage with the outer panel removed ..... less than 5mW/cm2.
- Leakage for a fully assembled oven with door normally closed ..... less than 2mW/cm 2 (1mW/cm 2 for Canada).
- Leakage for a fully assembled oven [Before the latch switch (primary) is interrupted] while pulling the door ..... less than 2mW/cm 2.

1. **Pour 275 ± 15cc (9ozs± 1/2oz) of 20°C ± 5°C (68° ± 9°F) water in a beaker which is graduated to 600cc, and place in the center of the oven.**
2. **Set the radiation monitor to 2450MHz and use it following the manufacturer's recommended test procedure to assure correct results.**
3. **When measuring the leakage, always use the 2 inch (5cm) spacer supplied with the probe.**
4. **Tap the start pad or set the timer and with the magnetron oscillating, measure the leakage by holding the probe perpendicular to the surface being measured.**

12.2.1. Measurement with the outer panel removed.

Whenever you replace the magnetron, measure for radiation leakage before the outer panel is installed and after all necessary components are replaced or adjusted. Special care should be taken in measuring around the magnetron.

WARNING
Avoid contacting any high voltage parts.

12.2.2. Measurements with a fully assembled oven.

After all components, including outer panel are fully assembled, measure for radiation leakage around the door periphery, the door viewing window, the exhaust opening and air inlet openings.

12.3. Record keeping and notification after measurement

- **After any adjustment or repair to a microwave oven, a leakage reading must be taken. Record this leakage reading on the repair ticket even if it is zero.**
  A copy of this repair ticket and the microwave leakage reading should be kept by repair facility.
- **Should the radiation leakage be more than 2 mW/cm^2 (1mW/cm for Canada) after determining that all parts are in good condition, functioning properly, and genuine replacement parts as listed in this manual have been used, immediately notify PASC, PSC or PCI.**

12.4. At least once a year, have the radiation monitor checked for calibration by its manufacturer.

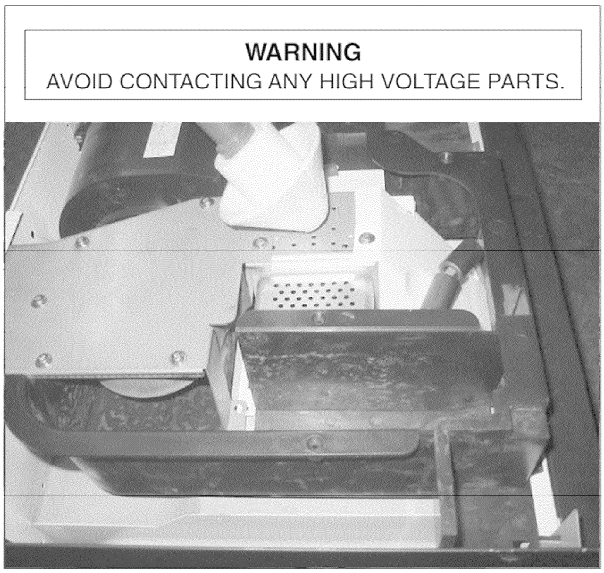

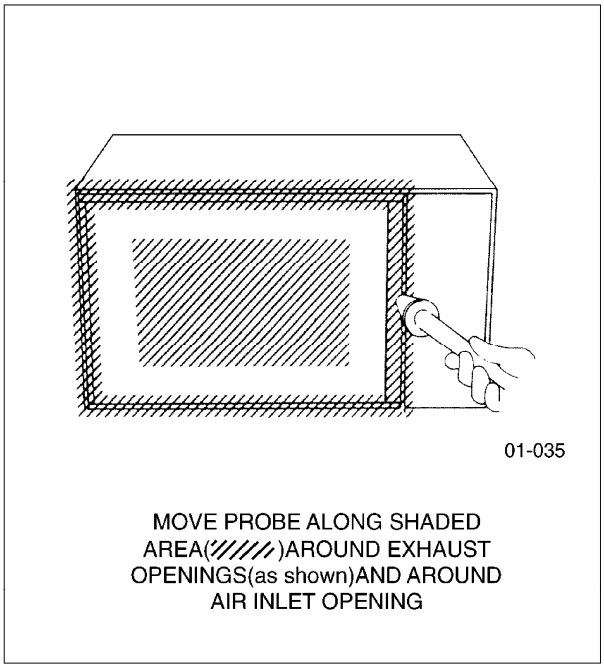

13. TROUBLESHOOTING GUIDE

CAUTION

1. **Check grounding before checking for trouble.**
2. **Be careful of high voltage circuit.**
3. **Discharge high voltage capacitor.**
4. **When checking the continuity of the switches or the high voltage transformer,disconnect one lead wir from these parts and then check continuity with the AC plug removed. To do otherwise may result in a false reading or damage to your meter. / When disconnecting a plastic connector from a terminal, you must hold the plastic connector instead of the lead wire and then disconnect it, otherwise lead wire m be damaged or the connector cannot be removed.**
5. **Do not touch any parts of the circuitry on the digital programmer circuit, since static electric discharg may damage this control panel. / Always touch yourself to ground while working on this panel to discharge any static charge in your body.**
6. **120V AC is present on the digital programmer circuit (Terminals of power relay's and primary circuit o low voltage transformer). When troubleshooting, be cautious of possible electrical shock hazard.**

First of all operate the microwave oven following the correct operating procedures in order to find the exact cause of any trouble.

	SYMPTOM	CAUSE	CORRECTIONS
1.	Oven is dead. Fuse is OK. No display and no operation at all.	1. Open or loose lead wire harness Open thermal cutout (Magnetron) 2. Open low voltage transformer Defective DPC 3. 4.	Check fan motor when thermal cutout is defective.
2.	No display and no operation at all. / Fuse is blown.	1. Shorted lead wire harness Defective primary latch switdh 2. (NOTE 1) 3. Defective short switch (NOTE 1) 4. Defective Inverter Power Supply (U) Refer to component test procedure	Check adjustment of primary, secondary latch switch and sh switch including door. Refer to Inverter PCB Troubleshooting.
		NOTE 1: All of these switches must be replaced at the same time. Check continuity of power relay B (RY-1)'s contacts (between 1 and and if it has continuity, replace power relay B (RY-1) also.	
3.	Oven does not accept key input(Program)	1. Key input is not insequence Open or loose connection of 2. membrane key pad to DPC (Flat cable) 3. Shorted or open membrane key board 4. Defective DPC	Refer to operation procedure. Refer to DPC troubleshooting.
4.	Fan motor turn on when oven is plugged in with door closed.	3. Misadjustment or loose wiring of secondary latch switch 4. Defective secondary latch switch	Adjust door and latch switches

	SYMPTOM	CAUSE	CORRECTIONS
5.	Timer starts count down but no microwave oscillation. (No heat while oven lamp and fan motor turn on)	1. Off-alignment of latch switches 2. Open or loose connection of high voltage circuit especially magnetron filament circuit NOTE: Large contact resistance will bring lower magnetron filament voltage and causing magnetron to lower output and/or be intermittent. 3. Defective high voltage component H.V. Inverter Power Supply (u) Magnetron 4. Open or loose wiring of power relay B (RY-1) 5. Defective primary latch switch 6. Defective DPC or power relay B (RY-1)	Adjust door and latch switches Check high voltage componen according to component test procedure and replace if it is defective. Refer to DPC troubleshooting
6.	Oven can program but timer does not start countdown.	1. Open or loose wiring of secondary latch switch 2. Off-alignment of secondary latch switch 3. Defective secondary latch switch	Adjust door and latch switches
7.	Microwave output is low. Oven takes longer time to cook food.	1. Decrease in power source voltage 2. Open or loose wiring of magnetron filament circuit.(Intermittent oscillation) 3. Aging change of magnetron	Consult electrician
8.	Fan motor turns on and turntable rotates when door is opened.	1. Shorted primary latch switch	
9.	Oven does not operate and return to plugged in mode as soon as start pad is pressed.	1. Defective DPC	Check tighten screws on escutcheon base bracket, D.P.C board.
10.	Loud buzzing noise can be heard.	1. Loose fan and fan motor	
11.	Turntable motor does not rotate.	1. Open or loose wiring of turntable motor 2. Defective turntable motor	
12.	Oven stops operation during cooking.	1. Open or loose wiring of primary and secondary latch switch 2. Operation of thermal cutout	Adjust door and latch switches
13.	Oven returns to plugged in mode after 18 seconds elapses on the Auto sensor cooking mode.	1. Open or loose wiring of sensor terminal from DPC 2. Open steam sensor 3. Defective DPC	

13.1. Trouble related to digital programmer circuit

SYMPTOM	STEP	CHECK	RESULT	CAUSE/CORRECTIC
No display when oven is first plugged in. Oven is dead.	1	Fuse pattern of DPC	Normal	→ STEP 2
			Open (NOTE)	Shorted Circuit of ZNR,L.V.T., Oven Lamp etc.Replace D
	2	Low voltage transformer (LVT) secondary voltage	Abnormal 0V	LVT
			Normal	→ Step 3
	3	IC-1 pin 47 voltage	Abnormal	IC-10
			Normal = 5V	IC-1, CX320, Displa
NOTE Procedure of fuse pattern repairing is as follows: 1. When the fuse pattern (PF2) opens. (1) Remove the jumper wire (PF1). (2) Insert the removed jumper wire (PF1) to "(PF2)" position and solder it. If both "PF1" and "PF2" fuse patterns are open, please replace DPC. 2. When the fuse pattern (PF4) opens. (1) Remove the jumper wire (PF3). (2) Insert the removed jumper wire (PF3) to "(PF4)" position and solder it. If both "PF3" and "PF4" fuse patterns are open, please replace DPC. NOTE:* At the time of these repairs, make visual inspection of the varistor for burning damage and examine the transformer with tester for the presence of layer short-circuit (check primary coil resistanc If any abnormal condition is detected, replace the defective parts.				
No key input	1	Membrane switch continuity	Abnormal	Membrane switch
			Normal	IC-1
No beep sound	1	IC-1 pin 8 voltage	Abnormal	IC-1
			Normal	BUZZER, Q224
Power relay A(RY-1) does not turn oneven though the program has been setand the start pad is tapped	1	IC-1 pin 41 voltage while operation	Abnormal	IC-1
			Normal = 5V	→ Step 2
	2	Short circuit between pin 8 and pin13 of IC-220	Still not turn on	RY-2
			RY-2 turns on	IC-220
No microwave oscillation at any powersetting	1	IC-1 pin 22 voltages while operation at high power	Abnormal	IC-1
			Normal 22---5V	→ Step 2
	2	Q220 transistor	Abnormal	Q220
			Normal	RY-1
Dark or unclear display	1	Replace display and check operation	Normal	DISPLAY
			Abnormal	IC-1
Missing or lighting of unnecessarysegment	1	Replace IC-1 and check operation	Normal	IC-1
			Abnormal	DISPLAY

SYMPTOM	STEP	CHECK	RESULT	CAUSE/CORRECTIC
H97/H98 appears in window and ovenstops operation. Program High powerfor 1 minute and conduct following testquickly, unless H97/H98 appears andoven stops. [NEW H.V.]	1	Unplug CN702(2 pin) connector and measure voltage between terminals	0V	1. Latch Switch 2. DPC/Power Relay
			AC line voltage of 120V	→ Step 2
	2	Unplug CN701(3 pin) connector and measure pin 1 voltage	0V	DPC
			Approx. AC 3V	Magnetron

13.2. Troubleshooting of inverter circuit (U) and magnetron [NEW H.V.]

This oven is programmed with a self diagnostics failure code system which will help for troubleshooting. H97, H98, and H99 are the provided failure codes to indicate magnetron and inverter circuit problem areas. This section explains failure codes of H97, H98, and H99. First, you must program the DPC by pressing [Clock] , [Timer] , [Start] , [Power Level] . Program unit for operation. H97, H98, H99 appears in display window a short time after start key is pressed and there is no microwave oscillation.

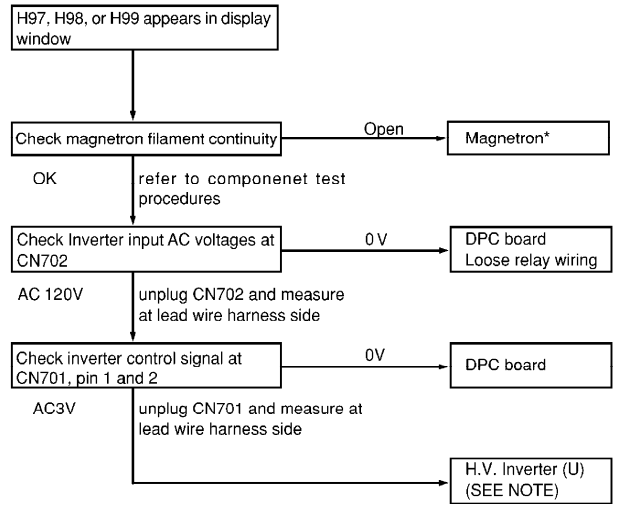
H97, H98, or H99 appears in display window
Check magnetron filament continuity
Open
Magnetron*
OK
refer to componenet test procedures
Check Inverter input AC voltages at CN702
0 V
DPC board
Loose relay wiring
AC 120V
unplug CN702 and measure at lead wire harness side
Check inverter control signal at CN701, pin 1 and 2
0V
DPC board
AC3V
unplug CN701 and measure at lead wire harness side
H.V. Inverter (U) (SEE NOTE)

NOTE: DO NOT try to repair this Inverter Power Supply (U) and also DO NOT RE-ADJUST PRESET VOLUME on the board. It is very dangerous to repair or adjust without sufficient test equipment because this circuit handles very high voltage and very large current. Off alignment of inverter board operation is dangerous. Operating a misaligned Inverter circuit is dangerous due to the very high voltage and current that is produced by this board. Defective boards must be replaced with a new one.

* Check magnetron filament for open or short to casing before proceeding to determine a good magnetron.

NOTE: After check, unplug unit to reset to normal operation mode.

Alternate way to troubleshoot oven with AC Ampere meter used

H97, H98, H99 appears in display window a short time after start key is pressed and no microwave oscillation with AC Ampere meter used for troubleshooting

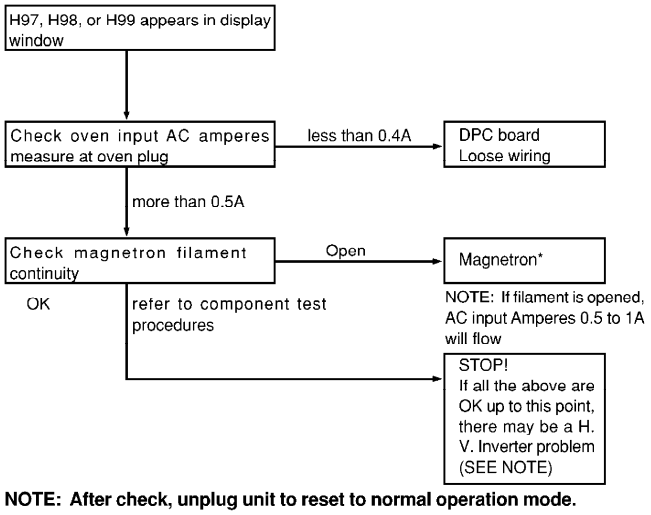
H97, H98, or H99 appears in display window
Check oven input AC amperes measure at oven plug
less than 0.4A
DPC board
Loose wiring
more than 0.5A
Check magnetron filament continuity
Open
Magnetron*
OK
refer to component test procedures
NOTE: If filament is opened, AC input Amperes 0.5 to 1A will flow
STOP!
If all the above are OK up to this point, there may be a H. V. Inverter problem (SEE NOTE)

NOTE: DO NOT try to repair this Inverter Power Supply (U) and also DO NOT

RE-ADJUST PRESET VOLUME on the board. It is very dangerous to repair or adjust without sufficient test equipment because this circuit handles very high voltage and very large current. Off alignment of inverter board operation is dangerous. Operating a misaligned Inverter circuit is dangerous due to the very high voltage and current that is produced by this board. Defective boards must be replaced with a new one.

* Check magnetron filament for open or short to casing before proceeding to determine a good magnetron.

NOTE: After check, unplug unit to reset to normal operation mode.

13.3. How to check the semiconductors using an OHM meter

Diode



	FORWARD	REVERSE
A-K	SMALL	∞

Transistor

NPN Transistor

2SC·····

2SD·····

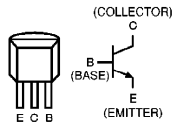

	FORWARD	REVERSE
B-E	SMALL	∞
B-C	SMALL	∞
C-E	∞	∞

PNP Transistor

2SA·····

2SB·····



	FORWARD	REVERSE
B-E	SMALL	∞
C-B	SMALL	∞
C-E	∞	∞

Digital Transistor
PNP Transistor



	FORWARD	REVERSE
E-B	10kΩ ~ 30kΩ	10kΩ ~ 30kΩ
C-B	50kΩ ~ 90kΩ	∞
C-E	40kΩ ~ 80kΩ	∞

IGBT
(INSULATED GATE BIPOLAR TRANSISTOR)

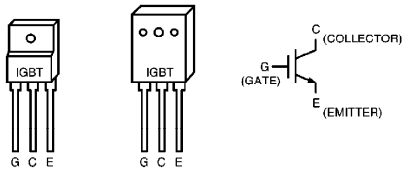

	FORWARD	REVERSE
E-C	SMALL	∞
E-G	∞	∞
C-G	∞	∞

14. EXPLODED VIEW AND PARTS LIST

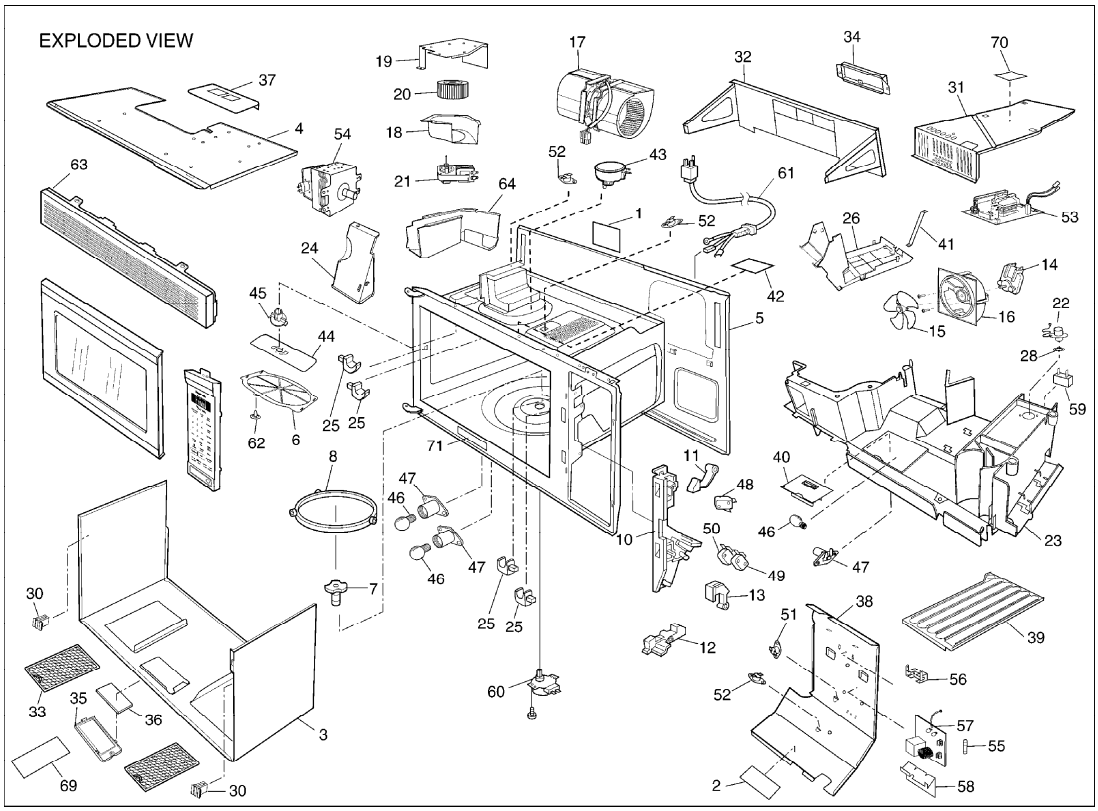

15. PARTS LIST

NOTE:

1. **When ordering replacement part(s), please use part number(s) shown in this part list.**
   Do not use description of the part.
2. **Important safety notice:**
   Components identified by ⚠ mark have special characteristics important for safety.
   When replacing any of these components, use only manufacture's specified parts.

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
1		F00205H00AP	CAUTION LABEL	1	APH
1		F00067600CP	CAUTION LABEL	1	CPH
2		F00335H00AP	FUSE LABEL	1	
3		F110D5H00SAP	CABINET BODY (U)	1	S262SF
3		F110D5H10BAP	CABINET BODY (U)	1	S262BF, S252BF
3		F110D5H10HAP	CABINET BODY (U)	1	S262WF, S252WF
4		F100D5H00AP	BASE PLATE (U)	1	
5	⚠	F201A5H00AP	OVEN (U)	1	S262SF/BF/WF
5	⚠	F201A5H20AP	OVEN (U)	1	S252BF/WF
6		F20115H00AP	COVER	1	
7		F21314W00AP	PULLY SHAFT	1	
8		J290D-4N30BP	ROLLER RING (U)	1	
10	⚠	E3020-8000BP	DOOR HOOK	1	
11		E3136-8000BP	HOOK LEVER A	1	
12		E31374830AP	HOOK LEVER B	1	
13		E31384830AP	HOOK LEVER C	1	
14		F40015H00AP	FAN MOTOR A	1	FOR INVERTER (U) COOLING
15		F40085H00AP	FAN BLADE	1	FOR INVERTER (U) COOLING
16		F40255H00AP	ORIFICE	1	
17		F401W5H00AP	BLOWER MOTOR (U)	1	
18		F42485H00AP	FAN CASE C	1	
19		F41585H00AP	FAN CASE INSTALLATION PLATE	1	
20		F42505H00AP	SIROCCO FAN C	1	
21		F42675H00AP	FAN MOTOR B	1	FOR MAGNETRON COOLING
22		F601L5H00AP	SENSOR (BU)	1	S262SF/BF/WF
23		F40245H00AP	EXHAUST GUIDE A	1	
24		F44775H00AP	EXHAUST GUIDE	1	
25		F20025H00AP	RACK SUPPORT	4	S262SF/BF/WF
26		F65855H00AP	INVERTER BRACKET	1	
28		F62385H00AP	WASHER	1	S262SF/BF/WF
30		F201H5H00AP	MAGNET CASE (U)	2	
31		F16035H00AP	TOP FRONT COVER	1	

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
32		F100T5H00AP	BACK PLATE B (U)	1	
33		F400B5H00AP	FILTER (U)	2	
34		F400K5H00AP	EXHAUST ADAPTER	1	
35		F63175H00SAP	GLASS PLATE HOLDER	1	S262SF
35		F63175H10BAP	GLASS PLATE HOLDER	1	S262BF, S252BF
35		F63175H10HAP	GLASS PLATE HOLDER	1	S262WF, S252WF
36		F64375H00AP	GLASS PLATE	1	
37		F41575H00AP	FAN INSTALLATION PLATE	1	
38		F42175H00AP	COVER PLATE	1	
39		F42205H00AP	COVER PLATE B	1	
40		F607V5H00AP	LAMP COVER (U)	1	
41		F61845H00AP	GROUNDING PLATE	1	
42		F60405H00AP	LAMP MEMBRANE	1	
43		F61445H00AP	STIRRER MOTOR	1	
44		F20155H00AP	STIRRER	1	
45		F20165H00AP	ANTENNA SUPPORT	1	
46		F60305H00AP	INCANDESCENT LAMP	3	
47		F61525H00AP	SOCKET	3	
48	⚠	A6142-F60	MICROSWITCH	1	(PRIMARY LATCH SWITCH) (V-15G-3C26)
49	⚠	A61425180AP	MICROSWITCH	1	(SECONDARY LATCH SWITCH) (L-3C2-2)
50	⚠	A61785180AP	MICROSWITCH	1	(SHORT SWITCH) (L-2C2-2)
51		F61455H00AP	THERMAL CUTOUT	1	
52		F61455E60XN	THERMAL CUTOUT	3	
53	⚠	A606Y4T00AP	H.V.INVERTER (U)	1	APH
53	⚠	A606Y4T00CP	H.V.INVERTER (U)	1	CPH
54	⚠	2M261-M32F	MAGNETRON	1	APH
54	⚠	2M261-M32G	MAGNETRON	1	CPH
55	⚠	B62308250AP	FUSE	1	18A/125V
56		B62314000AP	FUSE HOLDER	1	APH
57		J692Y4T00CP	NOISE FILTER (U)	1	CPH
58		F82605H00AP	NOISE FILTER BRACKET	1	CPH
59		F66985H00AP	MOTOR CAPACITOR	1	
60		F63264080AP	TURNTABLE MOTOR	1	
61	⚠	F900C5H00AP	AC CORD W/PLUG	1	APH
61	⚠	F900C5H00CP	AC CORD W/PLUG	1	CPH
62		F90804W00AP	CANOE CLIP	1	FOR COVER
63		F101V5H00AP	VENT GRILLE (U)	1	S262SF
63		F101V5H10BAP	VENT GRILLE (U)	1	S262BF, S252BF
63		F101V5H10HAP	VENT GRILLE (U)	1	S262WF, S252WF
64		F48435H00AP	INHALE GUIDE A	1	
69		F01725H00AP	CAUTION LABEL	1	
70		F00565H00AP	CAUTION LABEL	1	
71		F03345H10AP	MENU LABEL	1	S262SF/BF/WF APH
71		F03345H20AP	MENU LABEL	1	S252BF/WF APH
71		F03345H10CP	MENU LABEL	1	S262SF/BF/WF CPH

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
71		F03345H20CP	MENU LABEL	1	S252BF/WF CPH

16. DOOR ASSEMBLY

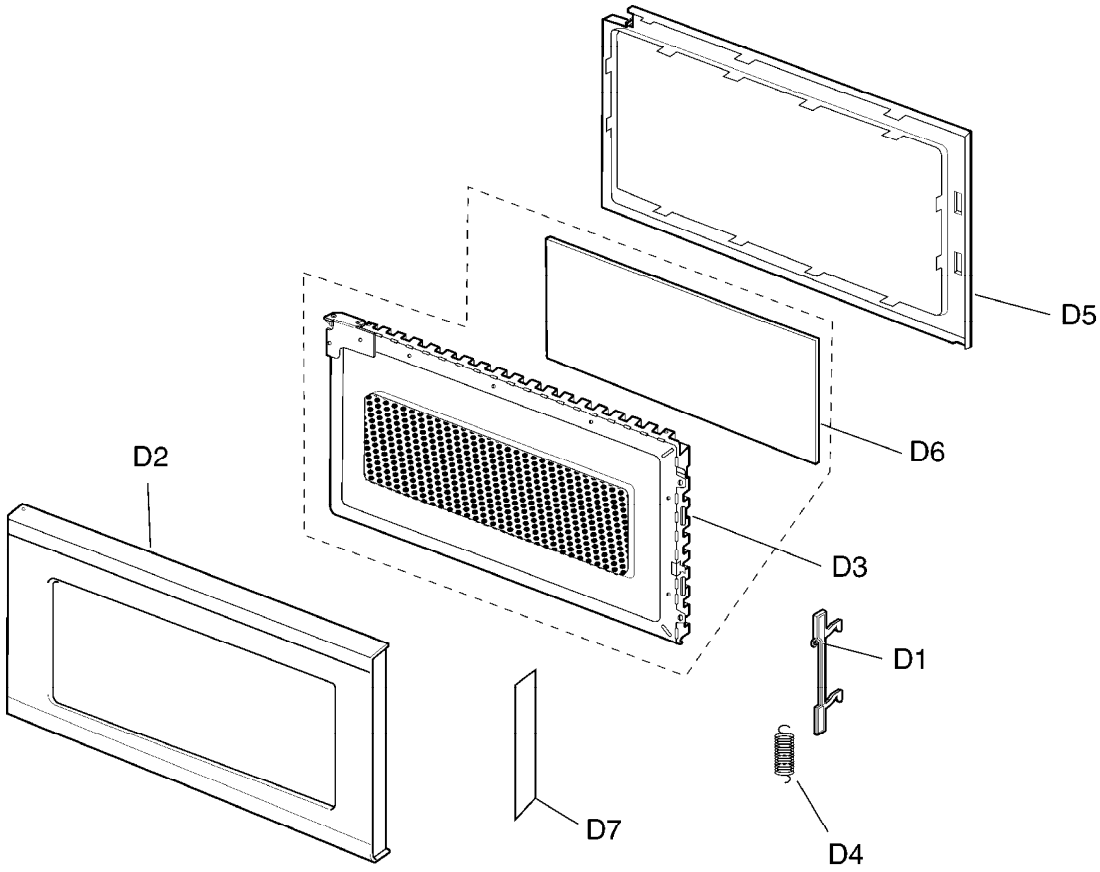

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
D1		F3018-1200	DOOR KEY A	1	
D2	⚠	F302A5H00AP	DOOR A (U)	1	S262SF
D2	⚠	F302A5H00BAP	DOOR A (U)	1	S262BF, S252BF
D2	⚠	F302A5H00HAP	DOOR A (U)	1	S262WF, S252WF
D3	⚠	F302K5H00AP	DOOR E (U)	1	
D4		F30214000AP	DOOR KEY SPRING	1	
D5	⚠	F30855H00AP	DOOR C	1	
D6	⚠	F31455H00AP	DOOR SCREEN A	1	
D7		F02459660AP	DHHS LABEL	1	APH
D7		F04114180CP	DHHS LABEL	1	CPH

17. WIRING MATERIALS

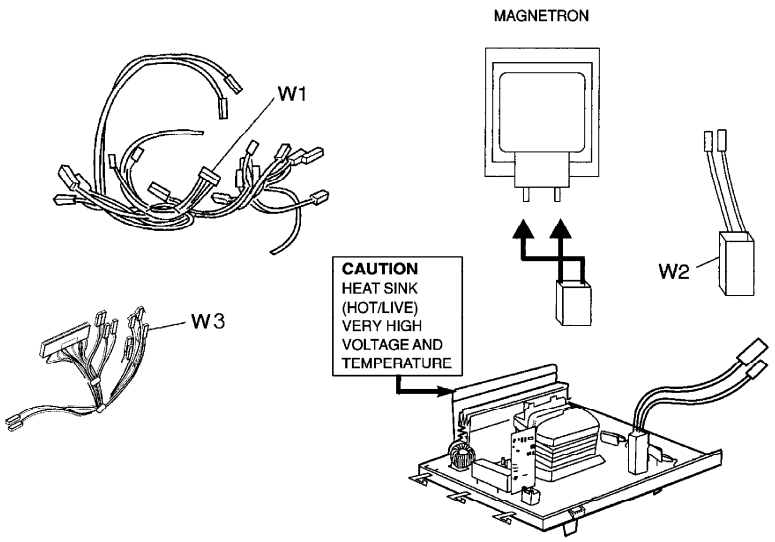

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
W1		F030A5H00AP	LEAD WIRE HARNESS	1	APH
W1		F030A5H00CP	LEAD WIRE HARNESS	1	CPH
W2		F030E5H00AP	H.V.LEAD WIRE	1	APH
W2		F030E5H00CP	H.V.LEAD WIRE	1	CPH
W3		F03535H00AP	LEAD WIRE HARNESS U	1	

18. ESCUTCHEON BASE ASSEMBLY

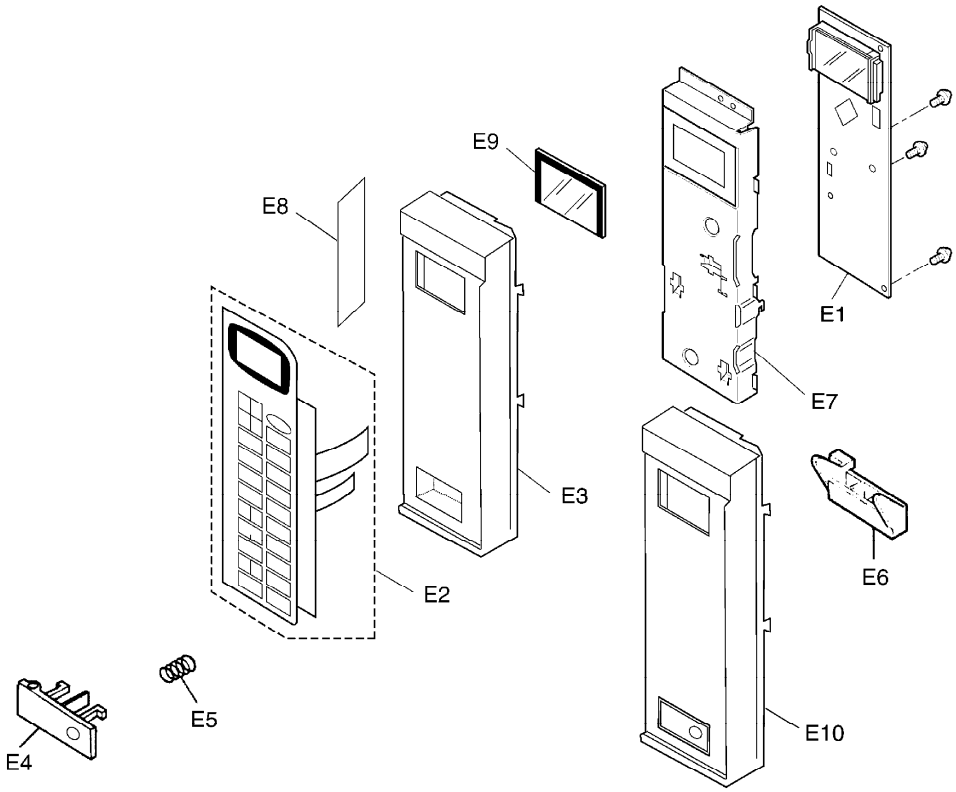

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
E1		F603L5H00AP	D.P.CIRCUIT	1	S262SF APH, S262BF/WF APH
E1		F603L5H20AP	D.P.CIRCUIT	1	S252BF/WF APH
E1		F603L5H00CP	D.P.CIRCUIT	1	S262SF CPH, S262BF/WF CPH
E1		F603L5H20CP	D.P.CIRCUIT	1	S252BF/WF CPH
E2		F630Y5H10BAP	MEMBRANE SWITCH (U)	1	S262SF/BF APH
E2		F630Y5H10HAP	MEMBRANE SWITCH (U)	1	S262WF APH
E2		F630Y5H20BAP	MEMBRANE SWITCH (U)	1	S252BF APH
E2		F630Y5H20HAP	MEMBRANE SWITCH (U)	1	S252WF APH
E2		F630Y5H10BCP	MEMBRANE SWITCH (U)	1	S262SF/BF CPH
E2		F630Y5H10HCP	MEMBRANE SWITCH (U)	1	S262WF CPH
E2		F630Y5H20BCP	MEMBRANE SWITCH (U)	1	S252BF CPH
E2		F630Y5H20HCP	MEMBRANE SWITCH (U)	1	S252WF CPH
E3		F80345H10BAP	ESCUTCHEON BASE	1	S262BF, S252BF
E3		F80345H10HAP	ESCUTCHEON BASE	1	S262WF, S252WF
E4		F80725H10BAP	DOOR OPENING BUTTON	1	S262BF, S252BF
E4		F80725H10HAP	DOOR OPENING BUTTON	1	S262WF, S252WF
E5		F80375950AP	OPENING BUTTON SPRING	1	
E6		F82565H00AP	DOOR OPENING LEVEL	1	
E7		F81275H00AP	BACK PLATE	1	
E8		F00075H00AP	NAME PLATE	1	S262SF APH
E8		F00075H10BAP	NAME PLATE	1	S262BF APH
E8		F00075H10HAP	NAME PLATE	1	S262WF APH
E8		F00075H20BAP	NAME PLATE	1	S252BF APH
E8		F00075H20HAP	NAME PLATE	1	S252WF APH
E8		F00075H00CP	NAME PLATE	1	S262SF CPH
E8		F00075H10BCP	NAME PLATE	1	S262BF CPH
E8		F00075H10HCP	NAME PLATE	1	S262WF CPH
E8		F00075H20BCP	NAME PLATE	1	S252BF CPH
E8		F00075H20HCP	NAME PLATE	1	S252WF CPH
E9		F80025H00AP	ESCUTCHEON B	1	
E10		F800L5H00AP	ESCUTCHEON BASE (U)	1	S262SF

19. PACKING AND ACCESORIES

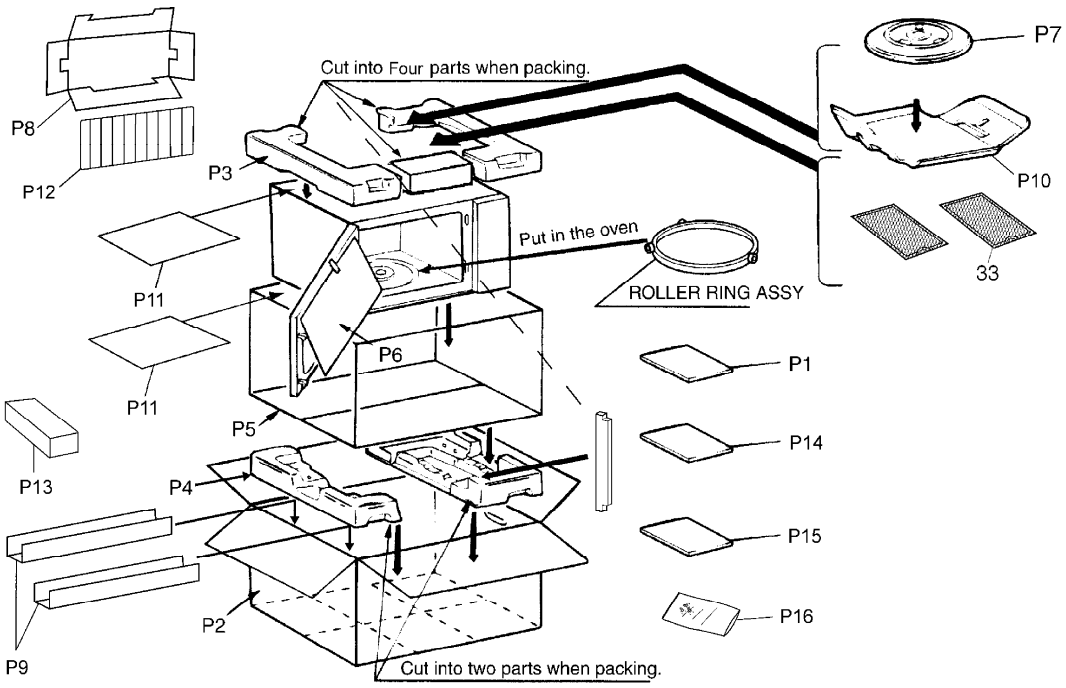

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
P1		F00035H00AP	INSTRUCTION MANUAL	1	APH
P1		F00035H00CP	INSTRUCTION MANUAL	1	CPH
P2		F01025H00AP	PACKING CASE PAPER	1	S262SF APH
P2		F01025H10BAP	PACKING CASE PAPER	1	S262BF APH
P2		F01025H10HAP	PACKING CASE PAPER	1	S262WF APH
P2		F01025H20BAP	PACKING CASE PAPER	1	S252BF APH
P2		F01025H20HAP	PACKING CASE PAPER	1	S252WF APH
P2		F01025H00CP	PACKING CASE PAPER	1	S262SF CPH
P2		F01025H10BCP	PACKING CASE PAPER	1	S262BF CPH
P2		F01025H10HCP	PACKING CASE PAPER	1	S262WF CPH
P2		F01025H20BCP	PACKING CASE PAPER	1	S252BF CPH
P2		F01025H20HCP	PACKING CASE PAPER	1	S252WF CPH
P3		F01045H00AP	UPPER FILLER	1	
P4		F01055H00AP	LOWER FILLER	1	
P5		F01065H00AP	P.E.BAG	1	
P6		F01075H00AP	DOOR SHEET	1	
P7		A06015H00AP	COOKING TRAY	1	
P8		F01175H00AP	TRAY PACKING B	1	S262SF/BF/WF
P9		F01485H00AP	REINFORCE BRACKET	2	
P10		F01085H00AP	TRAY PACKING	1	
P11		F01925H00AP	SHEET	2	
P12		F06025H00AP	OVEN RACK	1	S262SF/BF/WF
P13		F02185H00AP	PROTECTOR PACKING	1	
P14		F03135H00AP	INSTALLATION INSTRUCTION	1	
P15		F04315H00AP	UPPER-CABINET TEMPLATE	1	APH
P15		F04315H00CP	UPPER-CABINET TEMPLATE	1	CPH
P16		F011F5H00AP	ATTACHMENT	1	
33		F400B5H00AP	FILTER (U)	2	

20. DIGITAL PROGRAMMER CIRCUIT

SCHEMATIC DIAGRAM

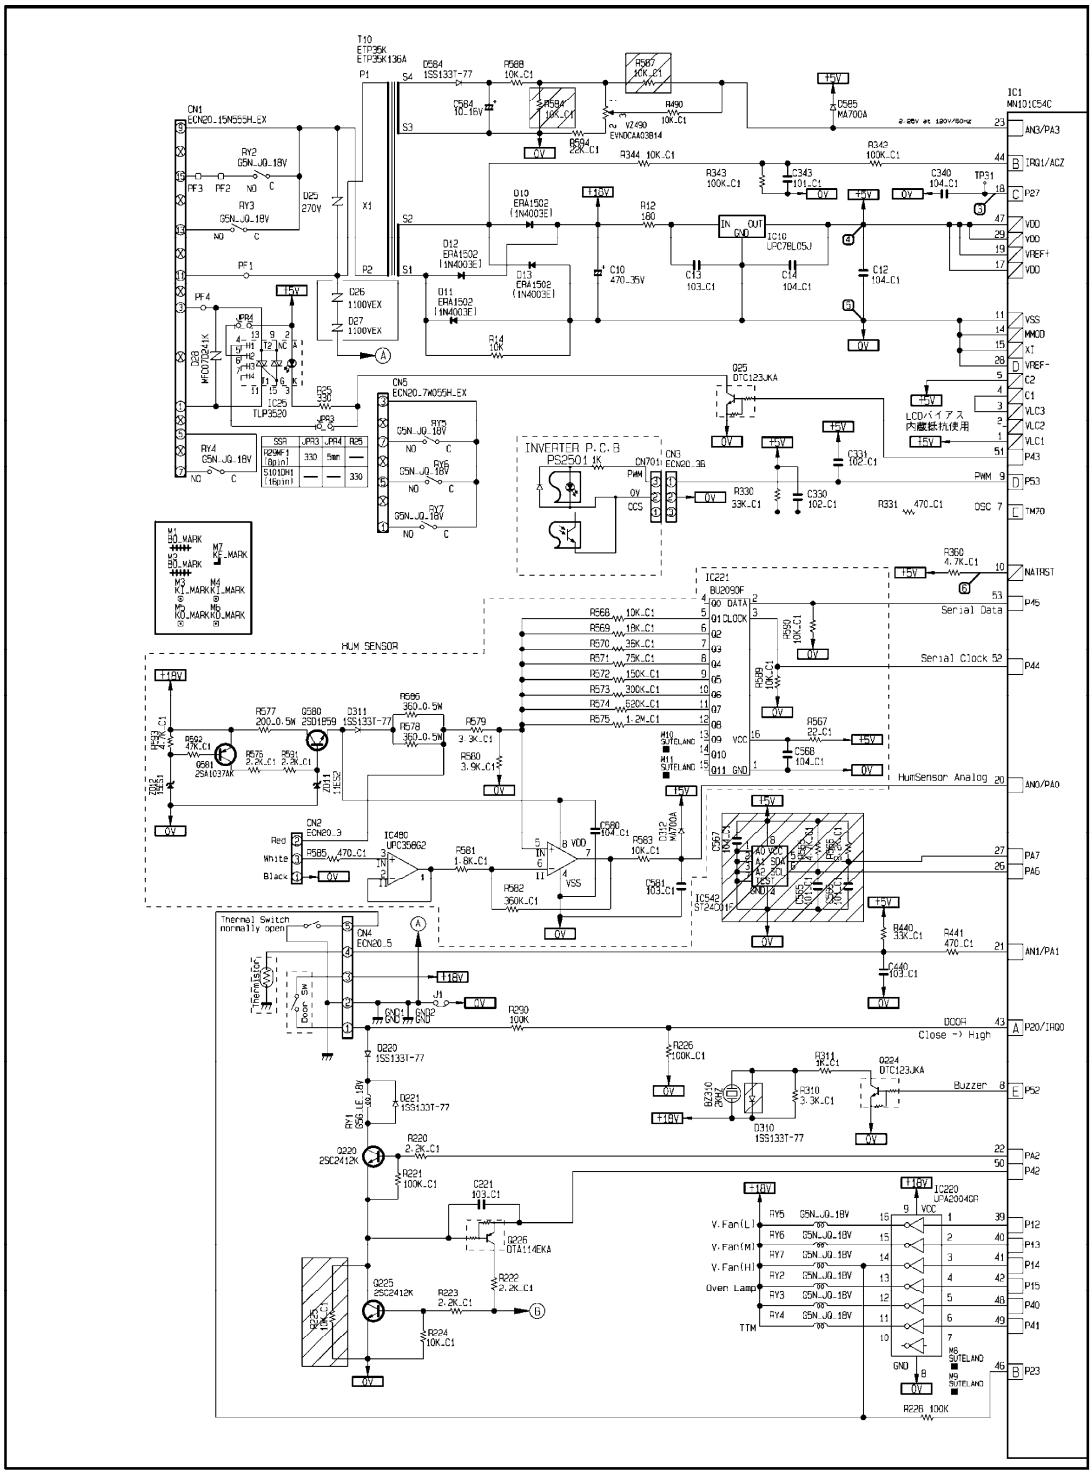

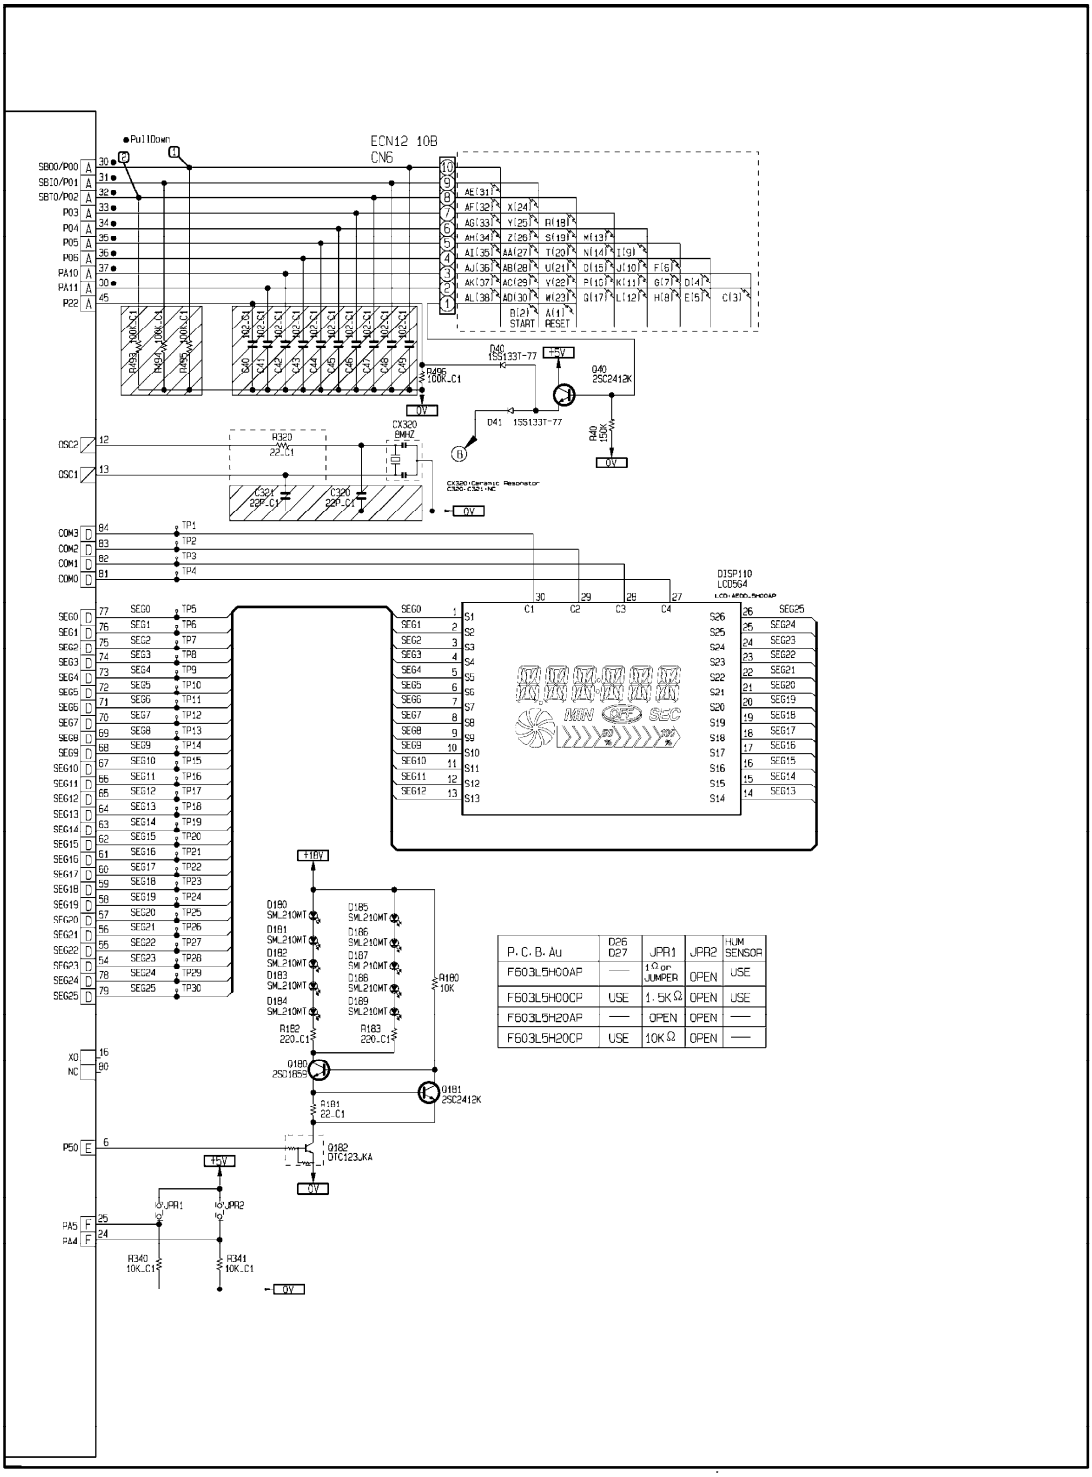

21. DIGITAL PROGRAMMER CIRCUIT

PARTS LIST

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
BZ310		AEFBTFM571	BUZZER	1	2.0KHz
C221, C440, C13		AECUU06F103Z	CHIP CAPACITOR	3	0.01 μ F/50V
C582		AECUU06F103Z	CHIP CAPACITOR	1	0.01 μ F/50V (S262SF/BF/WF)
C343		AECUU06C101J	CHIP CAPACITOR	1	100PF/50V
C12, C14, C340		AECUT06F104Z	CHIP CAPACITOR	3	0.1 μ F/25V
C568, C580, C583		AECUT06F104Z	CHIP CAPACITOR	3	0.1 μ F/25V (S262SF/BF/WF)
C330, C331		AECUU06R102K	CHIP CAPACITOR	2	1000PF/50V
C10		AECETK1V102B	AL CHEM CAPACITOR	1	100 μ F/35V (S262SF/BF/WF)
C10		AECETK1V471B	AL CHEM CAPACITOR	1	470 μ F/35V (S252BF/WF)
C584		AECETS1C100B	AL CHEM CAPACITOR	1	10 μ F/16V
C25		ECQE2A104MWA	CAPACITOR	1	0.1 μ F/250V (APH)
CN1		AEEMXH55515W	CONNECTOR	1	15 Pin
CN2		AEEMXH00703W	CONNECTOR	1	3 Pin (S262SF/BF/WF)
CN3		AEEMXH00703B	CONNECTOR	1	3 Pin
CN4		AEEMXH01H05W	CONNECTOR	1	5 Pin
CN5		AEEMXH05507W	CONNECTOR	1	7 Pin
CN6		AEEM10FDZBTM	CONNECTOR	1	10 Pin
		F66175E40XN	LCD HOLDER	1	
		F67525E40XN	DIFFUSION SHEET	1	
DISP110		AEDDHJ5H00AP	LCD	1	
CX320		AEFOS800MG06	CERAMIC RESONATOR	1	8.0MHz
D10, D11, D12, D13		AEDNERA1502	DIODE	4	
D40, D41, D220, D221, D584		AESS133T-77	DIODE	5	
D585		AEDNRB721Q	DIODE	1	
D312		AEDNRB721Q	DIODE	1	(S262SF/BF/WF)
D25		AERZ271KD10A	VARISTOR	1	
D26, D27		AERZ102KD10A	VARISTOR	2	(CPH)
D28		AERZ241KD07A	ZENER DIODE	1	
D180, D181, D182, D183, D184, D185, D186, D187, D188, D189		AESQSML210MT	CHIP-LED	10	
IC1		MN101C54CDW	L.S.I	1	
IC220		AEICU2004GR	IC	1	
IC480		AEICUPC358G2	IC	1	(S262SF/BF/WF)
IC25		AEICR29MF1	IC	1	
IC10		AEIC78L05J-T	IC	1	
IC221		AEICBU2090F	IC	1	(S262SF/BF/WF)
IC500		AEIC78M15AFH	IC	1	(S262SF/BF/WF)
Q226		AESA14EKE	CHIP DIDI-TRANSISTOR	1	
Q25, Q182, Q224		AESC23JKE	CHIP DIDI-TRANSISTOR	3	
Q180		2SD1859TV2Q	TRANSISTOR	1	
Q581		2SA1037AK	TRANSISTOR	1	(S262SF/BF/WF)
Q40, Q181, Q220, Q225		2SC2412KT146	CHIP TRANSISTOR	4	
R311		AERJ06J102R	CHIP RESISTOR	1	1K Ω , 1/16W, 5%
R224, R340, R341, R344, R490, R588		AERJ06J103R	CHIP RESISTOR	6	10K, 1/16W, 5%
R568, R583, R589, R590		AERJ06J103R	CHIP RESISTOR	4	10K, 1/16W, 5% (S262SF/BF/WF)
R221, R226, R342, R343, R496		AERJ06J104R	CHIP RESISTOR	5	100K, 1/16W, 5%
R575		AERJ06J125R	CHIP RESISTOR	1	1.2M, 1/16W, 5% (S262SF/BF/WF)
R572		AERJ06J154R	CHIP RESISTOR	1	150K, 1/16W, 5% (S262SF/BF/WF)
R581		AERJ06J182R	CHIP RESISTOR	1	1.8K, 1/16W, 5% (S262SF/BF/WF)
R569		AERJ06J183R	CHIP RESISTOR	1	18K, 1/16W, 5% (S262SF/BF/WF)
R181, R320		AERJ06J220R	CHIP RESISTOR	2	22 Ω , 1/16W, 5%
R567		AERJ06J220R	CHIP RESISTOR	1	22 Ω , 1/16W, 5% (S262SF/BF/WF)

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
R182, R183		AERJ06J221R	CHIP RESISTOR	2	220 Ω, 1/16W, 5%
R220, R222, R223		AERJ06J222R	CHIP RESISTOR	3	2.2K, 1/16W, 5%
R594		AERJ06J223R	CHIP RESISTOR	1	22K, 1/16W, 5%
R573		AERJ06J304R	CHIP RESISTOR	1	300K, 1/16W, 5% (S262SF/BF/WF)
R310		AERJ06J332R	CHIP RESISTOR	1	3.3K, 1/16W, 5%
R579		AERJ06J332R	CHIP RESISTOR	1	3.3K, 1/16W, 5% (S262SF/BF/WF)
R330, R440		AERJ06J333R	CHIP RESISTOR	2	33K, 1/16W, 5%
R570		AERJ06J363R	CHIP RESISTOR	1	36K, 1/16W, 5% (S262SF/BF/WF)
R582		AERJ06J364R	CHIP RESISTOR	1	360K, 1/16W, 5% (S262SF/BF/WF)
R580		AERJ06J392R	CHIP RESISTOR	1	3.9K, 1/16W, 5% (S262SF/BF/WF)
R331, R441		AERJ06J471R	CHIP RESISTOR	2	470 Ω, 1/16W, 5%
R585		AERJ06J471R	CHIP RESISTOR	1	470 Ω, 1/16W, 5% (S262SF/BF/WF)
R360		AERJ06J472R	CHIP RESISTOR	1	4.7K, 1/16W, 5%
R593		AERJ06J472R	CHIP RESISTOR	1	4.7K, 1/16W, 5% (S262SF/BF/WF)
R592		AERJ06J473R	CHIP RESISTOR	1	47K, 1/16W, 5%
R574		AERJ06J624R	CHIP RESISTOR	1	620K, 1/16W, 5% (S262SF/BF/WF)
R571		AERJ06J753R	CHIP RESISTOR	1	75K, 1/16W, 5% (S262SF/BF/WF)
R14, R180		AERDY2TJ103T	CARBON FILM RESISTOR	2	10K, 1/4W, 5%
R228, R290		AERDY2TJ104T	CARBON FILM RESISTOR	2	100K, 1/4W, 5%
R40		AERDY2TJ154T	CARBON FILM RESISTOR	1	150K, 1/4W, 5%
R12		AERDY2TJ331T	CARBON FILM RESISTOR	1	330 Ω, 1/4W, 5%
R576, R577, R578, R586		AEROY2F3300T	RESISTOR	4	330 Ω, 1/4W, 5%
VZ490		AEVTZ6TLT103	VARIABLE RESISTOR	1	10K Ω VR
RY1		AEGG5G1A18	POWER RELAY	1	
RY2, RY3, RY4, RY5, RY6, RY7		AEBJQ1A18	POWER RELAY	6	
T10		AETP35K136A	LOW VOLTAGE TRANSFORMER	1	
ZD12		AESZMTZJ150B	ZENER DIODE	1	(S262SF/BF/WF)

03/02 / S-5H0 / S-5H1 / S-5H2 / Printed in China